


User Guide Model: APMP-1220


Karaoke Microphone

Product Overview

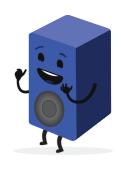



- A. Microphone
- B. Power Button
- C. Echo
- D. Music Volume
- E. Microphone Volume
- F. Bass
- G.Treble
- H. LED Lights

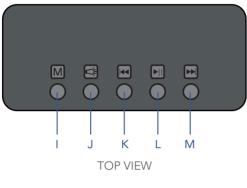



BOTTOM VIEW

- I. Mode (TF Card/Bluetooth®)
- J. Turn LED Lights On/Off
- K. Previous Track
- L. Play/Pause
- M. Next Track
- N. Micro USB Input (for
- charging unit)
- O. Micro SD Card (TF Card)



Power On

Press the power button for 2 seconds to turn the microphone on/off. When on, a blue LED light will be lit.

Bluetooth® Connection

Open the Bluetooth® menu on your device (e.g. phone/tablet) and scan the Bluetooth® devices. Select 'APMP-1220' to connect. There will be a notification voice once successfully connected.

(Press the LED light on/off button to turn the lights on/off).

While singing, operations such as Play/Pause, Last Song/Next Song can be done on your device and/or on the microphone.

NOTES:

Once the microphone has been connected to your device for the first time, it will connect automatically the following times. There is no need to pair again.

If you receive a phone call during use, you can use the Play/Pause button to switch to the phone call mode. You can then talk via the microphone.

If you just want to listen to music via the microphone without singing, you can simply set the voice volume to the minimum setting.

If a Micro SD (TF) card is inserted, the microphone will switch to Micro SD (TF) card mode automatically; press the M button to switch to Bluetooth® mode.

Playing music via Micro SD

4

Insert a Micro SD (TF) card into the Micro SD (TF) port. The microphone will detect all of the .mp3 files and start playing them automatically. You can press the operation buttons to pause or switch songs. When playing songs via the Micro SD (TF) Card, you can control the voice volume by adjusting the music volume.

NOTE: The microphone supports up to 32GB Micro SD card or TF card. Please make sure the card is formated as FAT32 format.

Charging

Bluetooth®

Battery capacity

Operation time

Power input

Size Weight

When battery is too low, the microphone will turn off automatically. Use the included Micro USB cable to charge. The red light will be lit during charging. Charging time is approximately 2-3 hours; the red light will be off when the microphone is fully charged.



Specifications

peemeations	
1	
	_

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license.

Other trademarks and trade names are those of their respective owners.

Yes

3.7V 1200mAh

Up to 5 hours

75 x 74 x 262mm

DC 5V, 1A

440g



Troubleshooting

No power	 Insert the supplied charging cable securely into the power output and ensure the power outlet is switched on.
No audio	Turn the microphone on and adjust the voice volume.
No reverb effect	Adjust the echo button to the appropriate setting.
Noise when singing	 Move to a quieter location and ensure the mobile phone is close to the microphone during use.
Music keeps dropping out	Move the microphone closer to the mobile phone.
Music is too quiet or not playing at all	Adjust the volume on your phone.
Failed to connect to Bluetooth®	 Place the phone and microphone closer together. Check the Bluetooth® menu on your phone to ensure it is connected to the correct Bluetooth® device. Turn the microphone off then on to restart. On your device, turn Bluetooth® off then back on, and search again.

Give us a call



What? You mean this User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible. Call our **After Sales Support** on **1300 886 649**. Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

Your new product is ready to enjoy!

Well done, you made it.

Now sit back and relax... your new product is automatically covered

by a 1-year warranty. How nice!

