

BAUHN®

40"

Full HD
Smart TV

MODEL: ATV40FHDS-1220


User Manual



AFTER SALES SUPPORT

  1300 886 649



 info@tempo.org

MODEL: ATV40FHDS-1220 PRODUCT CODE: 703576 12/2020

Welcome

Congratulations on your purchase!

This manual tells you all you need to know about using your new BAUHN® product.


Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

Domestic use only: This product is intended for indoor domestic use only. It is not suitable for commercial, industrial or outdoor use. Do not use this product for anything other than its intended purpose, and only use it as described in this manual.

We hope you will enjoy using your purchase for many years to come.

Contents

Welcome	2	On-Screen Set Up	16	TV Guide	40
Contents	3	Networking	17	Recording	41
Unpack and Prepare	4	TV Setting Menus	19	Recording Live TV	42
What's in the Box	4	Channel	21	Scheduled Recording	42
 Important Tips	5	Picture	23	Playback	42
Attaching the Stand	6	Sound	25	Pause Live TV (Time-Shift)	43
Wall-Mounting the TV	7	Network	27	USB Mode	44
Connect to Power	8	System	29	Set up	44
Connect your Antenna	8	PVR File System	31	Troubleshooting	47
Controls and Connections	9	Lock	32	Specifications	50
Get to Know your TV	9	Timer	33	Compliance and	
Buttons on the TV	9	Support	34	Responsible Disposal	51
Ports on the TV	10	Quick Menu	35	Warranty Information	52
Remote Control	12	Smart TV	37	Repair and Refurbished	
Setup	12	Smart TV Applications	37	Goods or Parts Notice	53
Using the Remote Control	13	Screencast	38		
Buttons & Functions	14	App Portal	38		
		Web Browser	39		

 
Unpack and Prepare

What's in the Box

Before installing your new TV, check you have everything needed.

In the box you will find:

- A. 40" Full HD Smart TV
- B. Remote Control
- C. AAA Activ Energy Batteries (2)
- D. TV Stands (2)
- E. Screws for TV Stands (4)
- F. Warning Sheet
- G. TV Toppling Safety Message
- H. Quick Start Guide
- I. Warranty Certificate
- J. General Safety Warnings
- K. User Manual

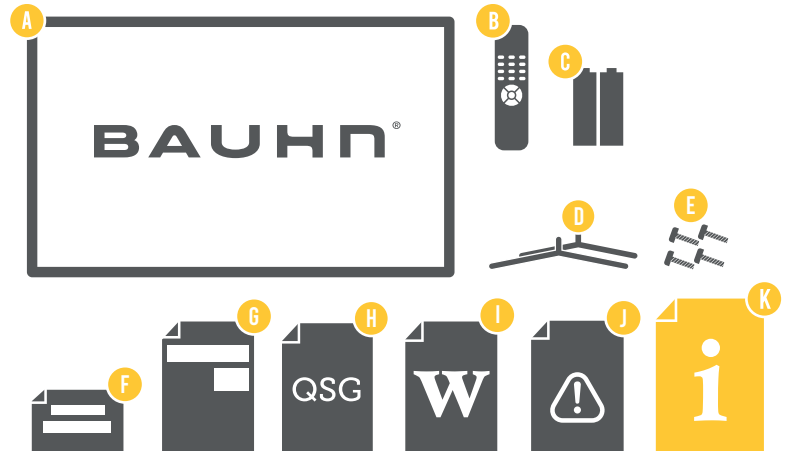


You will need:

- Phillips-head screwdriver (for stand installation)
- Internet connection (to access Smart TV apps)
- Antenna cable (to watch live TV)

Important Tips

- Place the TV on a level surface.
- Place the TV away from any source that may generate heat or vibrations.
- Make sure there is enough space around vents for airflow.
- The remote control works up to 6 metres away from the TV.
- Unplug the TV before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- It is highly recommended to use safety straps for securing the TV in place.
- Keep liquid, children and pets away from the TV at all times.

 Attaching the Stand

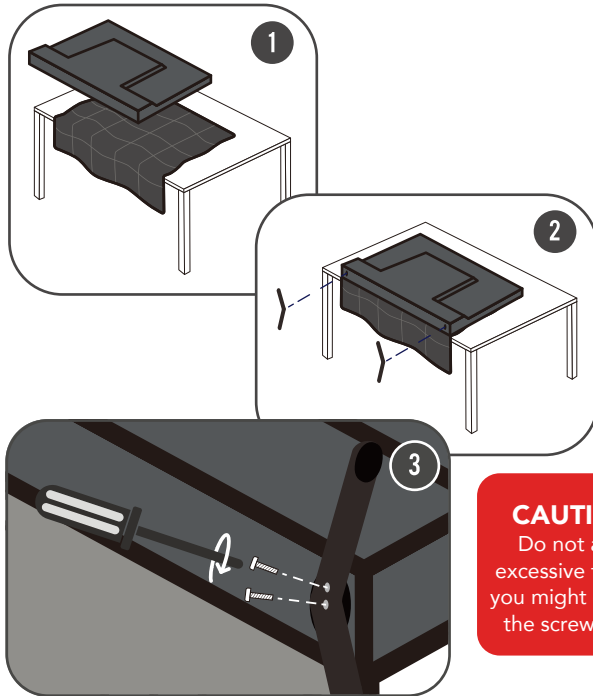

CAUTION!
Do not apply excessive force as you might damage the screw holes.



- Unplug the TV from the power outlet before installing or removing the stand.
- Only touch the frame, not the screen.
- It is highly recommended to use safety straps for securing the TV.

 
Unless you are wall-mounting the TV, you will need to attach its stand/legs.

1. Lay the TV face-down on a soft, flat surface (like the sofa, or a towel on a table) larger than the TV itself.
2. Match the stands to the installation points on the underside of the TV.
3. Attach the stands to the TV at the installation points using the screws provided. (Grab a screwdriver for this bit). Make sure the legs are facing away from each other (not leaning inwards).


Wall-Mounting the TV



- Unplug the TV from the power outlet before wall-mounting.
- Contact a professional for assistance with wall-mounting the TV.

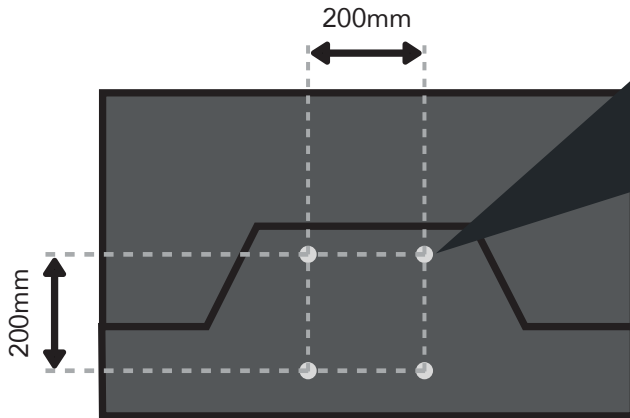

Back of the TV

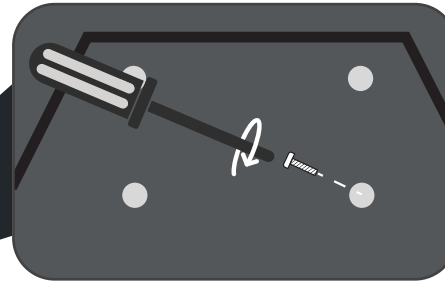 

Required

- VESA Mounting Bracket
- 4 x M6*10mm screws (or longer as required)

The TV comes with holes on the back panel for use with wall-mounting brackets (bracket not included).

Use four standard M6*10mm screws (or longer, depending on the mounting bracket) to wall-mount this TV (screws are not included).



The screws in the package are for securing the TV stands only. If you are wall-mounting the TV, consult a qualified installer for advice on bracket support and wall support.

Connect to Power

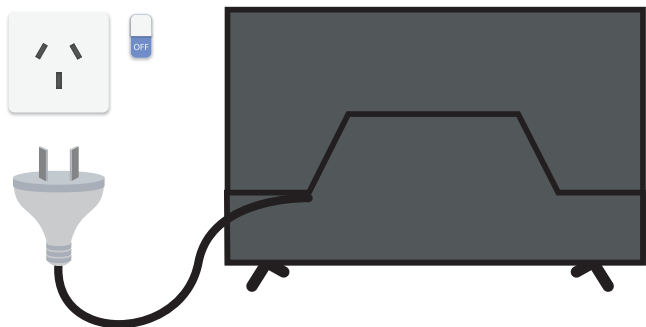 


Image is an example only. Plug on your TV may vary.

 
Connect your Antenna

Free-to-air TV in HD (High Definition)


Example
HD Channels

ABC HD
SBS ONE HD
7HD
9HD
10 HD
PRIME7 HD
WIN HD

High Definition (HD) channels provide the best viewing quality and are available with a digital antenna connection.

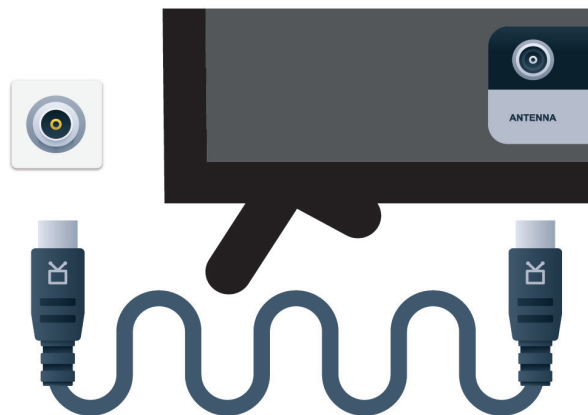

Antenna cable not included.

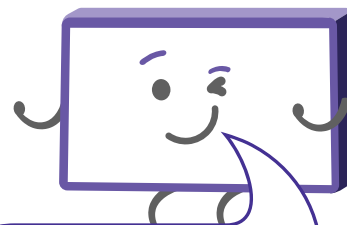 


Don't forget to plug in the TV to the power outlet. Leave the power switched off until installation is finished.



Make sure the TV is **switched off** at the power outlet until you have finished connecting your cables.


Controls and Connections

 Get to Know your TV

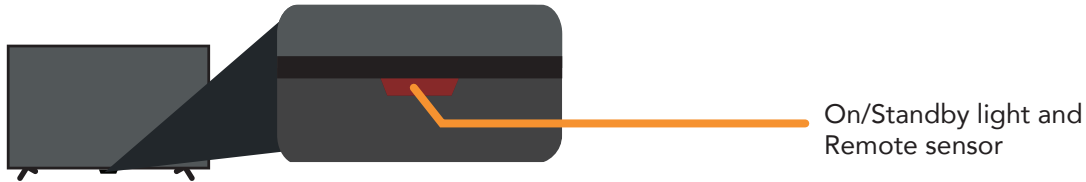

Buttons on the TV

  
 
- When the TV is on standby, press this button to turn the TV on.
- When the TV is on, press once to access the on-screen control menu. While in this menu, press once to switch between menu options; press and hold to select.
- When the TV is on, press and hold for 5 seconds to turn the TV off.

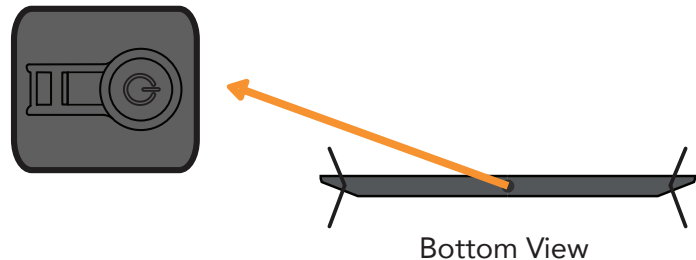






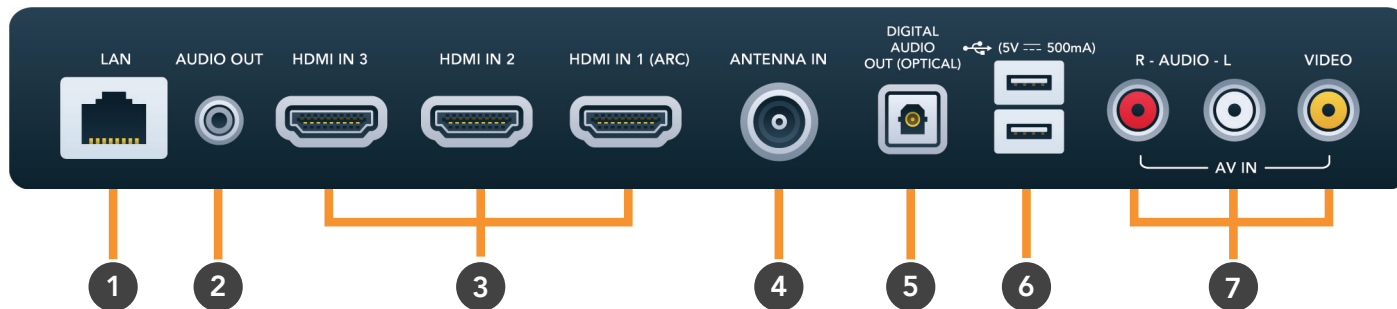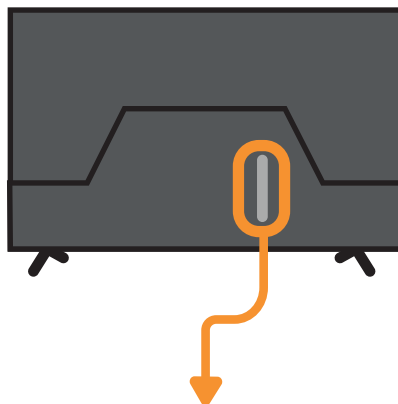

See next page for more info on the connections.




Ports on the TV

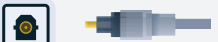

1	LAN		INTERNET	Connect to your broadband modem using a network cable (not included) for the best streaming experience. However, the TV also has built-in Wi-Fi.
2	AUDIO OUT		SOUND	Connect to your amplifier or soundbar using an AUX cable (not included). Turn down the TV volume to 0 and use your external device to control the volume.
3	HDMI IN Use a HDMI cable for best picture and sound quality.		SOUND PICTURE COMPUTER	All-digital connection between the TV and any HDMI device. Supports Full HD resolution.
4	ANTENNA IN		FREE-TO-AIR TV	Connect your antenna for live TV. (Antenna cable not included).
5	DIGITAL AUDIO OUT (OPTICAL)		SOUND	Connect an external digital audio device. Use an Optical cable (not included) to connect the TV with an amplifier, soundbar or other audio decoding device for digital audio signal output.
6	USB		STORAGE	<ul style="list-style-type: none"> • Plug in a USB stick to PVR record and pause live TV. • Play media files stored on your USB storage device (supported file codecs and extensions may vary). • Update the TV software via USB.
7	AV IN		SOUND PICTURE	You can use this to connect your DVD player. Supports Standard Definition (SD) picture quality. (AV cable not included).



 Remote Control

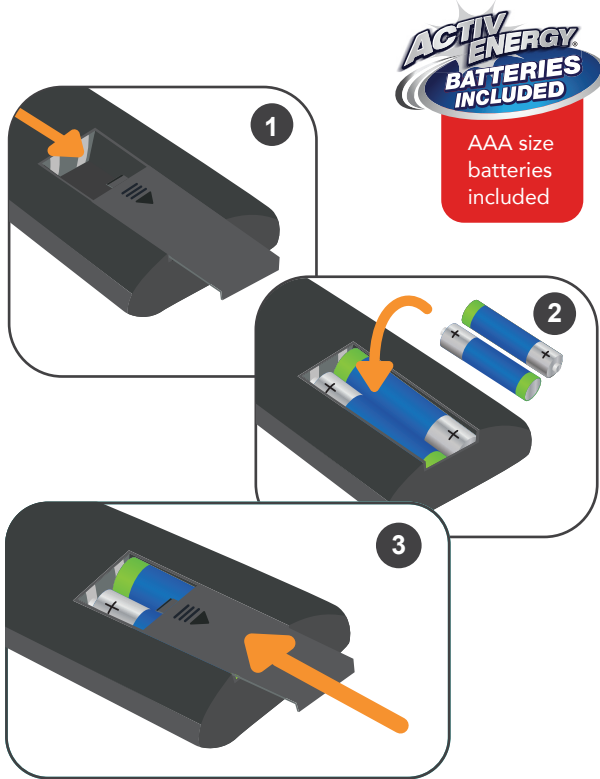

Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.



 
Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the TV. The remote will not operate if its path is blocked.

The remote has a range of up to about 6 metres from the TV at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

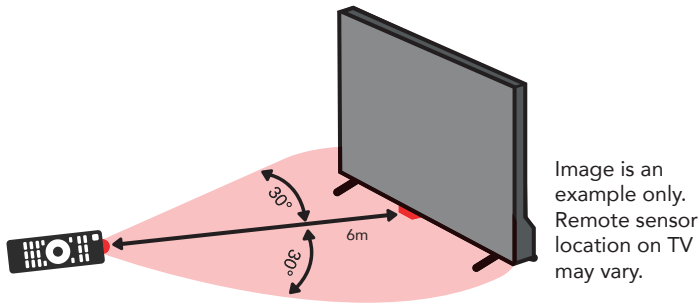

Remote Hints and Tips

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.

Buttons & Functions








 **(POWER)**: Switch the TV to On or Standby

NUMBER BUTTONS : Directly enter channels or input password

INFO : Display program information

 /  /  /  **RED/GREEN/YELLOW/BLUE**: Functions are according to the on-screen display

 **(MENU)** : Press once to enter the quick settings menu. Press twice to enter the main settings menu



 /  /  /  : Press the **UP/DOWN/LEFT/RIGHT** buttons to navigate

OK: Confirm your selection

GUIDE: Launch the TV Guide (DTV)

 **(MUTE)**: Mute or restore sound

LIST : Display the DTV channel list

 /  : Return to the previous screen or channel

 **(EXIT)** : Exit/Quit the current screen



P.MODE : Change the picture to one of the preset settings

+ ▲ - : Turn the volume up or down

HOME (SOURCE) : Access the input sources and smart apps list

NETFLIX : Launch the Netflix app

Web Browser : Launch the Web Browser app

▶ : Start playback

|| : Pause playback

◀◀ : Reverse playback

◀◀ : Skip to previous chapter/track

S.MODE : Change the sound to one of the preset settings

▲ P ▼ : Go to the next or previous channel

☰ : Switch between TV and Teletext mode*

YouTube : Launch the YouTube app

prime video : Launch the Amazon Prime Video app

● / REC : Press to start recording

■ : Stop playback

▶▶ : Advance playback

▶▶ : Skip to next chapter/track

 
* Teletext is no longer available in Australia.



On-Screen Set Up



Make sure equipment is properly connected (as shown on pages 10-11) before connecting the TV to power.

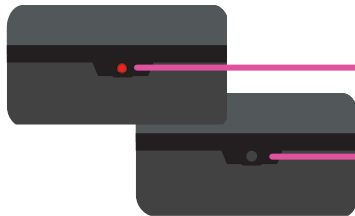

On/Standby light is RED in standby mode.

On/Standby light is OFF when the TV is on.


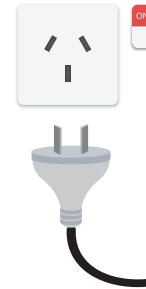 


Image is an example only. Plug may vary.

 

Make sure the TV is plugged in at the power socket and switched on. Press the **(POWER)** button to turn on the TV.

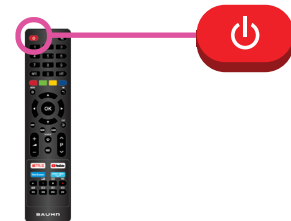

First Time Setup menu

When you turn the TV on for the first time, the First Time Setup menu will appear.

Follow the prompts using the **▲ / ▼ / ◀ / ▶ / OK** buttons to select your preferences. You will be guided through:

1. Language
2. View End-User License Agreement
3. Connect to the Internet
4. Set Up Netflix
5. Country
6. Time Zone
7. Select Input Source
8. Select TV Mode

When selecting input source, make sure to select DTV to scan TV channels. If you choose to select an input source other than DTV or setup Netflix, the setup wizard will exit and will not let you tune TV channels.

To tune channels, go to: Menu > Channel > Auto Tuning.

If you make an error, you can update your preferences in the settings menu later.

3. Connect to the Internet

If you are using a wired network, connect an ethernet cable to the TV and select 'Wired Mode'. The TV will automatically connect to the Internet.


If you are using a wireless connection, select 'Wi-Fi Mode'. The TV will scan for nearby wireless networks. Make sure that the TV is within the range of your wireless modem/router, and you have your Wi-Fi password handy.

Or, you can connect to the internet later by going to the User Menu settings.

Networking

You can set up your TV so that it can access the Internet through your home network using a wired or wireless connection.

Connecting to a Wireless Network

- Press the  (**MENU**) button on the remote to select Network.
- Change the Connection Type setting to Wi-Fi. The TV will automatically search nearby Wi-Fi access points. When done, it will display a list of available networks.
- In the list of networks, press the **▲** / **▼** button to select your home network, then press the **OK** button.
- When the Wi-Fi password entry screen appears, press the **OK** button to bring up the on-screen keyboard. Use the **▲** / **▼** / **◀** / **▶** buttons on the remote control to select a character and press **OK** to enter it.
- Input the correct password and press **OK** to close the on-screen keyboard. Select 'Connect' and press the **OK** button to connect to the network. If connection is successful, a tick will appear next to your Wi-Fi network's name.



If the TV isn't connecting to the internet check the troubleshooting section for more info!



Advanced settings:

If you wish to add a hidden Wi-Fi network, go to Advanced Settings and select Add. Next, enter the network name, select the encryption type, enter the network password and click Connect.

If you want to assign your own network settings, go to Advanced Settings and change IP Settings to Manual. Enter your personal network settings, select 'Connect' and press **OK**.



Connecting to a Wired Network


- Connect an ethernet cable to the LAN port on the back of the TV.
- Press the  **(MENU)** button on your remote to select Network.
- Change the Connection Type setting to 'Wired'. The TV will automatically pick up the network setting from the modem and connect to the network. If connection is successful, you will see 'Connected' on-screen.
- If you want to assign your own network settings, select the IPv4 or IPv6 protocol and set it to 'Manual'.
- Enter your personal network settings, select 'Connect' and press **OK**. If connection is successful, you will see 'Connected' on-screen.
- Press the  **(EXIT)** button to close the menu.

 
 


Make sure you have an ethernet cable on hand if you want to connect to a wired network.







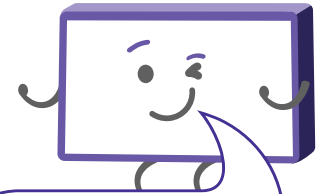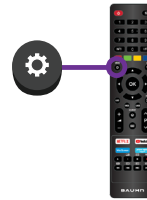








TV Setting Menus

Menu Navigation Buttons

Press the  (**MENU**) button twice to display the TV main menu settings. See the guide below for all the other buttons you'll need to use to adjust and change your settings.



Once you have programmed any settings, the TV will retain them in its memory until you change them, even after turning the TV off.

Function	Remote Button
Display the quick menu	 (press once)
Display the main menu	 (press twice)
Enter a sub menu	 OR 
Select an option	 /  /  / 
Adjust a value	 /  /  / 
Return to the previous menu	 / 
Exit a menu	

Menus Index



Channel 21

- Auto Tuning
- DTV Manual Tuning
- ATV Manual Tuning
- Dynamic Rescan
- Channel Edit
- Signal Information



Picture 23

- Picture Mode
- User Mode Settings:
 - Contrast, Brightness, Colour, Sharpness, Tint, Backlight
- Aspect Ratio

- Advanced Settings:
 - Colour Temperature, SDR To HDR, HDR, Noise Reduction, MPEG NR, Dynamic Contrast, Film Mode, PC Mode, Overscan, Picture Reset



Sound 25

- Sound Mode
- User Settings: Equalization, Surround, Dialogue Enhancer, AVC (Auto Volume Control), Balance, S/PDIF Mode, AD Switch, AD Volume, Audio Delay, Sound Reset



Network 27

- Wired Network Settings:
 - Connection Type, IPv4, IPv6, Connect
- Wireless Network Settings:
 - Connection Type, Wireless Networks, Password, Visible, Connect, Advanced Settings, WOW, IP Settings



System 29

- Language
- Subtitle
- Subtitle Hearing Impaired
- Audio Languages
- Subtitle Languages

- HbbTV
- Country
- HDMI CEC
- PVR File System
- Environment
- Restore Factory Default



PVR File System 31

- Select Disk
- Format Start
- Speed Check
- Record List
- Time Shift Size



Lock 32

- Lock System
- Set Password
- Block Channel
- Parental Lock



Timer 33

- Auto Sync
- Time Zone
- Clock
- Sleep Timer
- Auto Sleep
- No Signal Power Off



Support 34

- Software Update (USB)
- Internet Update Check
- NetReady Version
- Installation Guide
- View End-User License Agreement
- App Settings



Quick Menu 35

- Picture Mode
- Sound Mode
- TV Radio
- Aspect Ratio
- Subtitle Languages
- Sports Mode
- Audio Languages
- Audio Only
- More

Channel



Option

Description

Auto Tuning

Automatically tunes all available free-to-air TV channels. Adjust settings (default settings are set for Australia), select 'Search' and press OK.

DTV Manual Tuning

Manually select the broadcast channel frequency and tune digital TV channels.

ATV Manual Tuning

Manually select and tune analog TV channels. (Analog TV is no longer supported in Australia).

Dynamic Rescan

Automatically update the channels list based on the broadcast stream.

Channel Edit

See the next page for more information.





Signal Information

Display current signal information (DTV mode only).



Channel Edit

Use the ▲ / ▼ buttons to highlight a channel.

Option	Description
Move	Move the channel location on the list. Press  YELLOW to select the channel then use the ▲ / ▼ buttons to select a position and press OK to confirm it.
Skip	Press  BLUE to skip the highlighted channel.
Delete	Press  RED to delete the highlighted channel.
Fav	Press  GREEN to add a channel to the favourites list.

Picture



Picture Mode

Vivid : Super bright and clear picture settings for ultra bright viewing environments such as store-fronts.

Standard : Brighter and clearer picture settings for bright viewing environments.


Movie : Settings are optimised for viewing movies.

Home : Picture setting for general viewing environments and is energy efficient.

User : Adjust settings to best suit your viewing environment and content.

User Mode settings

Option	Description
Contrast	Adjust the contrast of the bright and dark areas of the picture. The closer to 100, the higher the contrast.
Brightness	Adjust the overall screen brightness. The closer to 100, the brighter the picture.
Colour	Adjust the saturation. The closer to 100, the deeper the colour.
Sharpness	Adjust the sharpness of the picture. The closer to 100, the sharper and clearer the image.
Tint	Adjust the tint of the picture. Valid only for NTSC signals.
Backlight	Adjust the screen brightness by adjusting the backlight. The closer to 100, the brighter the screen.

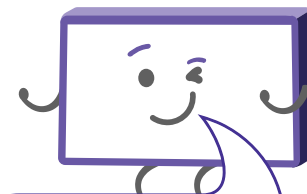 

To adjust the brightness, change the Picture Mode to User and modify the Brightness setting.

Aspect Ratio

This item is used to adjust the picture size. Sizes may differ between input sources.

PTP (Pixel to Pixel): Displays the picture in the same resolution as received by the TV.

Advanced Settings

Option	Description
Colour Temperature	Adjust the on-screen colour temperature.
SDR To HDR	Convert SDR picture to HDR.
HDR	Provides a greater dynamic range, image detail and visual effects.

Option	Description
Noise Reduction	Reduces screen noise/static.
MPEG NR	Reduces MPEG (video) noise to improve picture quality.
Dynamic Contrast	Adjusts the difference between the bright and dark sides of the screen according to the brightness of the image.
Film Mode	Detects a film signal and automatically adjusts the picture for optimum viewing quality.
PC Mode	Adjusts setting to allow the TV to be used as a monitor.
Overscan	Adjusts the picture if it's cropped.
Picture Reset	Resets all picture settings back to factory defaults.



Sound

Option	Description
--------	-------------

Sound Mode	Movie Music News Game Sports Standard User
------------	---

Below options are available when sound is set to User.

Option	Description
--------	-------------

Equalization	Adjust selected frequencies.
--------------	------------------------------

Surround	Adjust surround sound effect from your TV speakers.
----------	---

Dialogue Enhancer	Improves the clarity of voice.
-------------------	--------------------------------

AVC (Auto Volume Control)	Adjust the increase or decrease of audio when you change channels, video sources or content.
---------------------------	--

Balance Adjust the audio output between the left and right speakers.

 
S/PDIF Mode Set the digital sound output setting.

AD Switch Audio Description (AD) provides an additional audio track for visually challenged persons (DTV only, subject to program).

AD Volume Adjusts the volume for the Audio Description (AD) when it's switched on.

Audio Delay
S/PDIF Delay: Synchronize the sound from an external home theatre system with the TV picture.
Speaker Delay: Synchronize the sound from the TV speakers with the TV picture.

Sound Reset Reset all audio settings back to factory defaults.

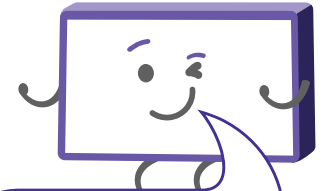

Want to set up your TV with HDMI-ARC? See page 30 for details.

Network

You can set up your TV so that it can access the Internet through your home network using a wired or wireless connection.




Make sure you have a network cable connected to the TV

Wired Network Settings

Option	Description
Connection Type	Switch between Wired and Wireless connections.
IPv4	Switch between Auto and Manual for advanced network setup.
IPv6	Connect with IPv6 standard. Available options: Auto, Manual, Disabled (default).
Connect	Connect to your home network.

Wireless Network Settings

Option	Description
Connection Type	Switch between Wired and Wireless connections.
Wireless Networks	Select a wireless network to connect to.
Password	Enter the password of the selected wireless network. Press the OK button to make the on-screen keyboard appear.
Visible	Tick this box to see the password in plain text.
Connect	Connect to the wireless network.
Advanced Settings	Enter advanced wireless settings.
WOW	Turn WOW ON/OFF.
IP Settings	Auto: TV will automatically connect to the network once you've connected to the wireless network.
	Manual: Manually assign following network settings: IP address, Subnet Mask, Gateway, DNS.

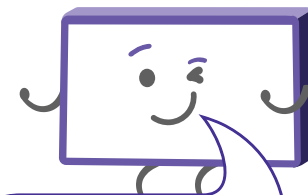 

Keep it simple for easy setup!
If an item isn't required,
just leave it on the default
setting.

System




Option	Description
Language	Select your preferred On Screen Display language.
Subtitle	Turn subtitles On or Off (available for digital channels, depending on the program).
Subtitle Hearing Impaired	Turn On or Off. Subtitles for hearing impaired people (available for digital channels, depending on the program).
Audio Languages	Select your preferred audio language. (Available for digital channels, depending on the program).
Subtitle Languages	Select your preferred subtitle language. (Available for digital channels, depending on the program).
HbbTV	Switch the HbbTV function On or Off.
Country	Display the current country setting.
HDMI CEC	See the next page for information.
PVR File System	See page 31 for more information.
Environment	Set the TV to Home mode (recommended) or Store mode. Home mode is for general home viewing and is energy efficient. Store mode is for in-store demo purposes.
Restore Factory Default	Restore the system settings to the factory default. When the restore is complete, the TV will enter standby mode.



HDMI CEC Setup

This feature allows for your TV and your connected HDMI device to be controlled by one remote control. It also means you can turn them both on or off simultaneously.

Press the  **(SOURCE)** button on the unit or remote control to select the HDMI input source.

Option	Description
HDMI CEC	Turn HDMI CEC On/Off.
Auto Standby	When this is set to On, turning off the TV will turn off the connected device as well.
ARC (Audio Return Channel)	If this function is enabled, sound from the TV can be sent to a HDMI-ARC supported external audio device. (HDMI 1 port supports ARC functionality).
Auto Power On	When this is set to On, turning on the TV will also turn on the connected device.

PVR File System

REC

To make changes to PVR (Personal Video Recording), ensure your USB drive is inserted into the TV. Check the troubleshooting section if you're having problems setting up your USB device.

Option	Description
Select Disk	Select a disk used for PVR.
Format Start	Format the connected USB disk.
Speed Check	Checks the speed of the storage device.
Record List	Show the list of recorded programs.
Time Shift Size	Select the memory size for the Time Shift function. Options: 512MB, 1 GB, 2GB, 4GB.



Lock



Factory Password: 0000

Master Password: 4711

Enter the factory password '0000' using the number buttons on the remote and select 'OK' on-screen. If you changed your password but forgot it, you can still use the master password.

Option	Description
Lock System	Turn system lock on/off.
Set Password	Enter the old password, then enter your new password twice. Select 'OK' on-screen to confirm.
Block Channel	Blocks selected channels. Select the channel and press  YELLOW to block or unblock the selected channel.
Parental Lock  This item is used to block access to specific program ratings. See options below.	
No Block	Unrestricted
Block G and above	 General
Block PG and above	 Parental guidance recommended
Block M and above	 Recommended for mature audiences
Block MA and above	 Not suitable for people under 15. Under 15s must be accompanied by a parent or adult guardian
Block AV and above	Not suitable for people under 15. Under 15s must be accompanied by a parent or adult guardian
Block R and above	 Restricted to 18 and over
Block All	Restricted



Timer



Option

Description

Auto Sync

On: Automatically syncs the TV clock according to the DTV broadcasting time.

Off: Manually adjust the TV clock.

Time Zone

Adjust your timezone.

Clock

Displays the DTV signal time or set the time manually.

Sleep Timer

Select the desired Auto Sleep (Standby) duration.

Auto Sleep

Sets the time when the TV will enter Standby mode due to inactivity.

No Signal Power Off

When set to "On", if there's no input signal nor press-button operation, the TV will enter standby status automatically about 5 minutes later.




 










Support

Option	Description
Software Update (USB)	Update the software using the USB memory device.
Internet Update Check	Update the software using the internet.
NetReady Version	Display current software version information.
Installation Guide	Access the first time installation setup guide.
View End-User License Agreement	Read and accept/decline the EULA.
App Settings	Display information about Netflix.

 Quick Menu

The Quick Menu gives you access to selected menu settings without the hassles of navigating through the full menu. Press  (**MENU**) on your remote once to access this.

Option	Description
Picture Mode	Select the picture best suited to the content you are viewing.     
Sound Mode	Select the sound mode best suited to the content you are viewing.       
TV Radio	Press to interchange Radio and DTV programs when there is a radio program (in DTV mode).
Aspect Ratio	Adjust the video size. The available video size may be different for different input source.
Subtitle Languages	Select your preferred subtitle language (available for DTV if multiple subtitle languages are broadcasted).



Sports Mode

Optimise picture and sound to give the most immersive experience possible. Options: On / Off.

Audio Languages

Select your preferred audio language (available for digital channels if multiple audio languages are broadcasted).

Audio Only

Turns off the TV screen and listen only to the audio. Press the OK button to get the picture on screen again.

More

Access the full menu settings.






Smart TV

Before you start using apps, your TV must be connected to the internet.

The speed of your internet connection determines the quality of your audio/video experience when you watch streaming content.

Accessing internet content may count towards your download limit and may incur fees from third parties such as your internet service provider (ISP).

Function	Remote Button
Display the Home/App screen	
Select different Apps	
Open your desired App	

Smart TV Applications

- Netflix
- YouTube
- Amazon Prime Video
- Facebook
- Twitter
- Yahoo! Weather
- NetRange Smart TV apps
- Toon Goggles
- Screencast
- Web Browser



You cannot download any extra apps on this TV.

NETFLIX

Netflix is a streaming service that offers unlimited viewing of a wide variety of award-winning TV shows, movies and documentaries.

A paid subscription is required.

This TV can play Netflix content in FHD resolution, however the playback resolution may be lower depending on your subscription level and your network speed.

Streaming Netflix content will count towards the data usage of your broadband plan.

Screencast

The Screencast feature enables you to mirror the display from a compatible Android device like a smartphone or tablet on the TV screen by connecting your mobile device directly to the TV wirelessly. In order to use this feature, your device must support Wi-Fi Display technology.



Apple iOS operating system is not supported.

To start using the Screencast feature, select the Screencast icon and press OK to load the app.

Turn on Wi-Fi and Wireless Display (a.k.a. Wi-Fi Display, Wi-Fi Direct, Cast Screen) function on your smart phone or tablet (Please refer to your device's instruction manual for information on how to turn on wireless display).

Your mobile device will display a list of available devices. Choose "Smart TV (xxxx)" to connect.

Your mobile device will connect to the TV and will display the device screen on the TV.

Use your device to disconnect.

App Portal

NetRange Smart TV apps gives you access to number of other content and service providers.

Some apps may require a paid subscription.

Streaming content will count towards the data usage of your internet plan.

Web Browser

Using the web browser, you can surf the Internet on the TV similar to how you would do on a PC.

NOTE: Use a wired or wireless keyboard and mouse (not provided) for an easier web browsing experience.

From the Home page, select a recommended or bookmarked site and click OK to visit the site.

Press the **RED** button to bring out the address bar.

Press the OK button on the address bar to type the web address. You can enter the web address using the on-screen keyboard, remote keyboard or connected wireless keyboard.

Select the 'Add to bookmark' icon and press OK to add the web address as a favourite.

Select the 'Settings' icon to access the browser menu settings.

Press 'EXIT' to exit the web browser.

 
On-screen keyboard

Use **▲/▼/◀/▶** buttons and press OK to enter the character.

Use **GREEN** and **YELLOW** buttons to move the cursor left and right.

Press **RED** button to enter.



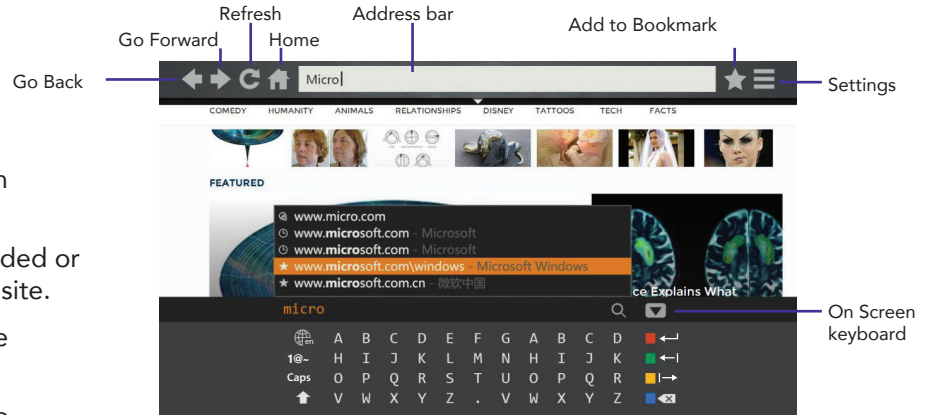


Press **BLUE** button to delete (backspace).



TV Guide

(Free to air TV)

TV Guide Functions


Function	Remote Button
Select a channel, time or program	▲ / ▼ / ◀ / ▶
Display programs by time or channel	 GREEN
Schedule selected program for recording	 RED
View scheduled recordings and reminders	 YELLOW
Schedule a reminder for selected program	 BLUE
Exit TV Guide menu	

To access the TV Guide, press the **GUIDE** button on the remote.

To activate the TV Channels use the ▲ / ▼ buttons to select a channel in the left column, then press **OK** to confirm.



 Recording

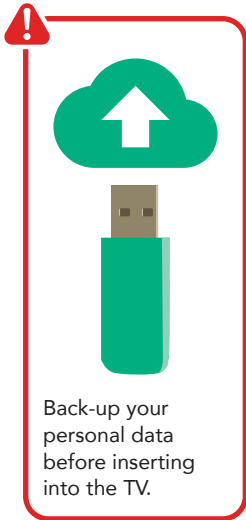

Important Tips:

- Back-up your personal data before plugging in your USB to the TV. We do not assume liability for any loss of data due to misuse or malfunction.
- You cannot change channels while in recording mode.
- If the signal is interrupted while in recording mode, the recording will stop until the signal is established.
- Do not turn the TV off while it is in time-shift mode.
- The file recorded can only be used on this TV. Do not copy it to any other device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored on it may be damaged.





Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



Recording Live TV

Start Recording

Press **● / REC** once - start recording.

Press **● / REC** again - minimise the information bar at the bottom of the screen.

Stop Recording

Press **■ (STOP)** once - display the dialogue box.

Select YES to stop recording.

Select NO to continue recording.

 
Scheduled Recording

See TV Guide Functions on page 40 to schedule recordings and manage schedules.

When a program is being recorded in the background (while the TV is in standby mode), the Standby/ON light will be OFF.



Recording, scheduled recording and pause live TV functions only work in DTV mode (free-to-air).

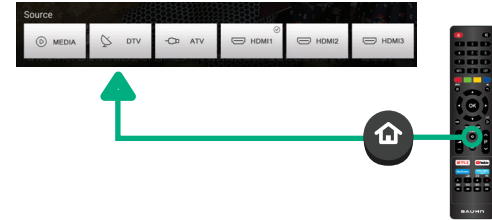


Playback

Press the **⚙ (MENU)** button then navigate to System then PVR File System then Record List to display the list of recorded programs.

Use the **▲ / ▼** buttons to select a recorded file.


Press the **OK** button to start playback in Full Screen Mode.

 
Press **■ (RED)** to delete the selected file.

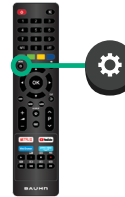

Pause Live TV (Time-shift)

Temporarily pause the live TV signal, then resume playback at your convenience.



 Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



Start Time-shift


Press the **||** button on the remote to enter time-shift mode.

  
Press the **▶** or **OK** button to resume playing the program.

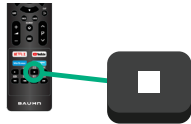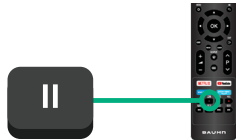



Stop Time-shift

Press the **■ (STOP)** button to exit time-shift.

 The USB storage device won't retain recorded data after you exit the time-shift function.

 Recording, scheduled recording and pause live TV functions only work in DTV mode (free-to-air).



 
USB Mode



Set up


Insert your USB into a USB port on the TV.


Press the  (**SOURCE**) button to select 'Media' mode.

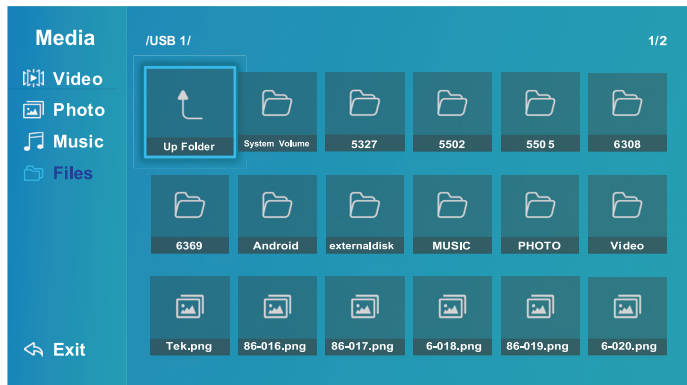


You can only play Photos in the Photo category, Music in the Music category and so on. Make sure you select the correct category for the file you wish to play.

Function	Remote Button
----------	---------------

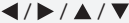Choose a Source or File	
-------------------------	---

Start playing your media	
--------------------------	---

Return to previous screen	
---------------------------	---

Exit media mode	
-----------------	---

Playback Functions

Playback of different media types have different controls.

Photo


Function	Remote Button
Navigate to a folder or file	◀/▶ / ▲/▼
Display your photo	OK
Hide or display the on-screen toolbar	▲ / ▼
Change advanced settings	⚙️
Return to file list	■ or ↶

Music

Function	Remote Button
Navigate to a folder or file	◀/▶ / ▲/▼
Play your track	OK
Rewind or fast forward the current track	◀◀ / ▶▶
Restart or skip the current track	⏮ / ⏭
Change sound mode and balance settings	⚙️
Return to file list	■ or ↶

Video

Function	Remote Button
Navigate to a folder or file	◀/▶/▲/▼
Play your video	OK
Pause your video	
Resume playback	▶
Stop playback	■
Rewind or fast forward the current track	◀◀ / ▶▶
Restart or skip the current track	◀◀ / ▶▶
Change advanced settings	⚙️
Return to file list	■ or ↶

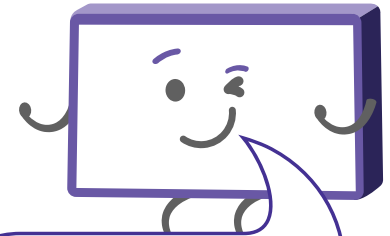 

Only supported file types will be displayed. See the specifications table for supported file types.

Troubleshooting

If you have problems with your TV, check below for advice. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
The remote control does not work	<ul style="list-style-type: none">Make sure that the batteries are installed with their poles (+/-) in the correct direction.Remove any obstacles between the remote control and remote control sensor on the TV.Check if the power indicator at the bottom of the TV blinks when you press the remote's power button.If it does not, replace the remote control's batteries.Try pointing the remote directly at the remote control sensor from 1.5-1.8m away.
The TV won't turn on	<ul style="list-style-type: none">Make sure that the AC power cord is securely plugged into the wall outlet.Check the wall outlet is turned on and the power indicator at the bottom of the TV is lit.If using a multi-outlet, check if it is working properly. To check whether a power strip is working properly, plug the TV's power plug directly to a wall outlet and observe its operation.Try to power on using the power button on the TV.
There is no picture/sound or distorted picture/sound in DTV mode	<ul style="list-style-type: none">Ensure the antenna cable is securely connected to the TV and to the wall outlet.Ensure the input source is set to DTV.If "No Signal" is displayed, run Menu > Channel > Auto Tuning to search for channels.If some channels are missing, run Menu > Channel > Auto Tuning or manually search by Menu > Channel > DTV Manual Tuning.Try a different antenna cable or another TV if possible.Move the TV away from electronic equipment or devices that could cause interference.Adjust the antenna position.If the picture appears fuzzy or blurry, select High Definition (HD) channels or programs.



Problem	Solution
<p>There is no picture/sound or distorted picture/sound from an external device</p>	<p>Ensure that connection to the device is correct and that all cables are fully inserted.</p> <p>Remove and reconnect all cables connected to the TV and the external devices. Try new cables if possible.</p> <p>Restart the connected devices by unplugging each device's power cord and then plugging it in again.</p> <p>If "No Signal" is displayed on the TV, ensure that the correct input source has been selected.</p>
<p>There is no/distorted/delayed sound</p>	<p>Ensure the volume is not muted. If it is, press the VOL+ button to restore the sound.</p> <p>If earphones are connected, unplug them.</p> <p>Ensure that connection to the external audio device is correct and that all cables are fully inserted.</p> <p>Ensure correct input source and audio settings have been selected on the external audio device.</p> <p>Move the TV away from electronic equipment or devices that could cause interference.</p> <p>If you are using an external audio device via a HDMI cable, ensure that the device supports HDMI-ARC and, if applicable, the ARC setting is turned On (refer to the connection guide in the user manual of the connected device). Ensure on the TV, Menu > System > HDMI-CEC > ARC setting is turned On.</p> <p>If you are using an external audio device, check that the Menu > Sound > S/PDIF Mode settings is set to "PCM".</p> <p>If the TV sound is not synchronised with the picture, adjust the applicable Menu > Sound > Audio Delay setting.</p>
<p>The Smart apps are not working properly</p>	<p>Ensure the TV is connected to the internet.</p> <p>Ensure the TV has a high-speed internet connection to get the best streaming picture resolution.</p> <p>Check your streaming service subscription level.</p> <p>An unstable Internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment. If this occurs, check your Internet connection and try again.</p>



Problem	Solution
<p>There is no/intermittent internet</p>	<p>If you are using Wi-Fi, make sure the Wi-Fi password is entered correctly.</p> <p>Turn off the access point. Wait for 2 minutes and then turn them back on.</p> <p>Ensure that there are no obstacles between the TV and the access point. (The Wi-Fi strength can be decreased by appliances, cordless phones, stone walls/fireplaces, etc.) Reduce interference by not using or turning off other wireless devices.</p> <p>If the Wi-Fi connection fails, connect the TV to the access point via a LAN cable. If the TV can connect via the wired connection, there might be a problem with the Wi-Fi access point. In this case, try using a different access point.</p> <p>If you are using a LAN cable, use one rated CAT 5 or higher. Make sure it is plugged in at both ends.</p> <p>If you are using a static IP, ensure network addresses are entered correctly.</p> <p>If the problem persists, contact your Internet Service Provider or modem manufacturer.</p>
<p>USB storage device is not recognised or media files don't play properly</p>	<p>This TV has been tested with the majority of Flash memory-based devices and hard disks (media players with HDD) on the market however, it may not be compatible with certain devices.</p> <p>If the external hard drive has its own power adaptor, use it.</p> <p>Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.</p> <p>The TV may not be able to recognise a USB device or read the files if it is connected with a USB extension cable.</p> <p>The files that use an unsupported codec or container will not play on the TV.</p> <p>Some files may not play correctly if there is an error in the content or container.</p> <p>Certain files, depending on how they are encoded, may not play on the TV.</p> <p>Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.</p>



Specifications

Active screen size (diagonal)	39.5" (100.3cm)	
Resolution	1920 x 1080	
Refresh rate	60Hz	
HDMI version	1.4a	
HDCP version	1.4	
Aspect ratio	16:9	
Multimedia playback formats (USB mode)	Video	AVI, MPEG-1, MPEG-2, TS
	Music	MP3
	Photo	JPEG
USB output	DC 5V 500mA	
Power source	AC 100-240V, 50/60Hz	
Power consumption	65W	

Dimensions (W x D x H)		With stand: 904.3 x 180.1 x 561.5 mm
		Without stand: 904.3 x 80.3 x 514.5 mm
Weight	Net	5.7 kg
	Gross	7.9 kg

For Technical and Warranty Support

1300 886 649

www.tempo.org

info@tempo.org

Distributed by Tempo (Aust) Pty Ltd,
PO Box 6056, Frenchs Forest DC 2086

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.



Product

At the end of its working life, do not throw this product out with your household rubbish.

An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



National Television and Computer Recycling Scheme

The careful disposal of e-waste is important because many televisions and computers contain materials which are hazardous to people and the environment. There are no fees for householders or small businesses disposing of e-waste at a scheme collection service.

Individuals can contact their local council for information on local e-waste management services, find scheme services listed on Planet Ark's website at www.recyclingnearyou.com.au, or call Planet Ark on 1300 733 712.

Compliance

This product complies with the Australian Safety Standard AS/NZS 60065 to ensure the safety of the product.





BAUHN®

Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





BAUHN®

Repair and Refurbished Goods or Parts Notice

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO Box 6056, Frenchs Forest, NSW 2086, Australia
Telephone: 1300 886 649 (Aust) - Fax: (02) 9975 2688
Tempo Help Desk: 1300 886 649 (Aust)
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)
Email: info@tempo.org

Notes

Notes

Online support

Visit www.bauhn.com.au for software updates to keep your TV up-to-date, as well as the latest User Manual for information on the updated features.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 886 649.

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



AFTER SALES SUPPORT	W²
 AUS 1300 886 649	 info@tempo.org
MODEL: ATV40FHDS-1220 PRODUCT CODE: 703576 12/2020	

1
YEAR WARRANTY