

 
**BAUHN®**

**32"**

**HD TV**

MODEL: ATV32HD-1121

User Manual

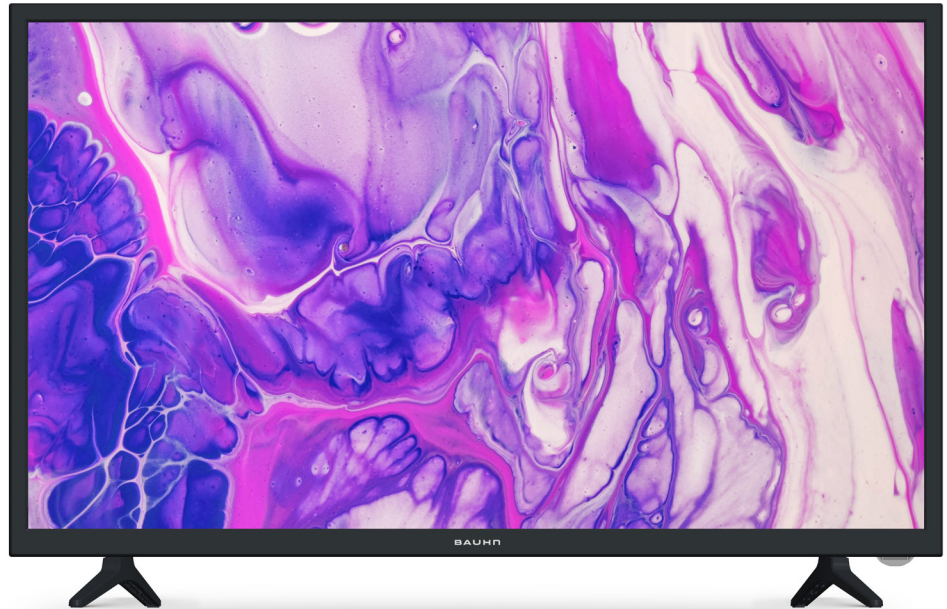

**AFTER SALES SUPPORT**

  1300 002 534



 [tempo.org/support](https://tempo.org/support)

MODEL: ATV32HD-1121 PRODUCT CODE: 707729 11/2021

# Welcome

Congratulations on your purchase!

This manual tells you all you need to know about using your new BAUHN® product.


Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

Domestic use only: This product is intended for indoor domestic use only. It is not suitable for commercial, industrial or outdoor use. Do not use this product for anything other than its intended purpose, and only use it as described in this manual.

We hope you will enjoy using your purchase for many years to come.

# Contents

Welcome	2	On-Screen Set Up	16	USB Mode	35
Contents	3	TV Setting Menus	17	Set up	35
Unpack and Prepare	4	Channel	19	Troubleshooting	38
What's in the Box	4	Picture	21	Specifications	41
 Important Tips	5	Sound	23	Compliance and Responsible Disposal	42
Attaching the Stand	6	Time	25	Warranty Information	43
Wall-Mounting the TV	7	Lock	26	Repair and Refurbished Goods or Parts Notice	44
Connect to Power	8	Setup	28		
Connect your Antenna	8	PVR File System	30		
Controls and Connections	9	TV Guide	31		
Get to know your TV	9	Recording	32		
Buttons on the TV	9	Recording Live TV	33		
Ports on the TV	10	Playback	33		
Remote Control	12	Pause Live TV (Time-shift)	34		
Setup	12				
Using the Remote Control	13				
Buttons and Functions	14				

# Unpack and Prepare

## What's in the Box

Before installing your new TV, check you have everything needed.

In the box you will find:

- A. 32" HD TV
- B. Remote Control
- C. AAA Activ Energy Batteries (2)
- D. TV Stands (2)
- E. Screws for TV Stands (4)
- F. Warning Sheet
- G. TV Toppling Safety Message
- H. Quick Start Guide
- I. Warranty Certificate
- J. General Safety Warnings
- K. User Manual



 
You will need:

- Phillips-head screwdriver (for stand installation)
- Antenna cable (to watch live TV)

## Important Tips

- Place the TV on a level surface.
- Place the TV away from any source that may generate heat or vibrations.
- Make sure there is enough space around vents for airflow.
- The remote control works up to 6 metres away from the TV.
- Unplug the TV before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- It is highly recommended to use safety straps for securing the TV in place.
- Keep liquid, children and pets away from the TV at all times.

## Attaching the Stand

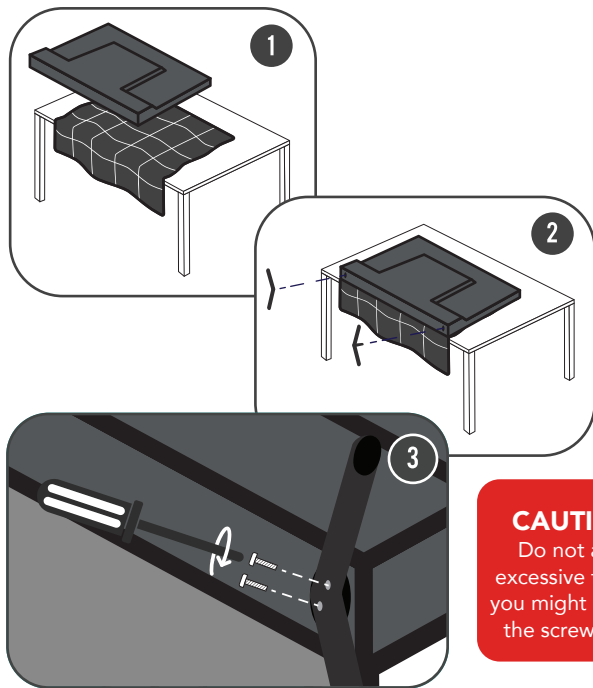

**CAUTION!**  
Do not apply  
excessive force as  
you might damage  
the screw holes.



- Unplug the TV from the power outlet before installing or removing the stand.
- Only touch the frame, not the screen.
- It is highly recommended to use safety straps for securing the TV.


Unless you are wall-mounting the TV, you will need to attach its stand/legs.

1. Lay the TV face-down on a soft, flat surface (like the sofa, or a towel on a table) larger than the TV itself.
2. Match the stands to the installation points on the underside of the TV.
3. Attach the stands to the TV at the installation points using the screws provided. (Grab a screwdriver for this bit). Make sure the legs are facing away from each other (not leaning inwards).


# Wall-Mounting the TV



 - Unplug the TV from the power outlet before wall-mounting.
- Contact a professional for assistance with wall-mounting the TV.

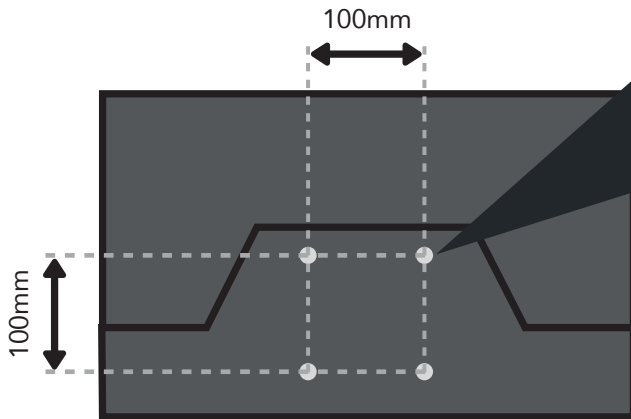

Back of the TV

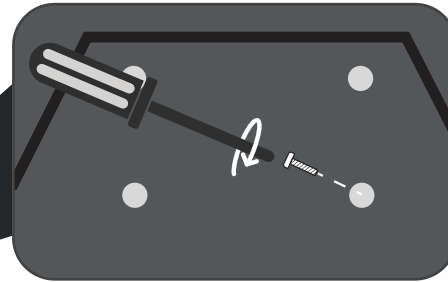 

## Required

- VESA Mounting Bracket
- 4 x M6\*10mm screws (or longer as required)

The TV comes with holes on the back panel for use with wall-mounting brackets (bracket not included).

Use four standard M6\*10mm screws (or longer, depending on the mounting bracket) to wall-mount this TV (screws are not included).



The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, consult a qualified installer for advice on bracket support and wall support.

## Connect to Power

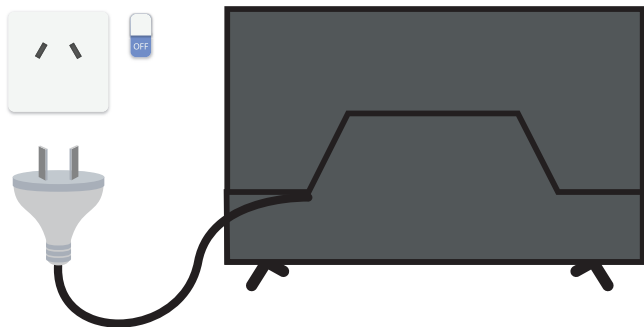 


Image is an example only. Plug on your TV may vary.


## Connect your Antenna
 
### Free-to-air TV in HD (High Definition)


Example  
HD Channels

ABC HD  
SBS ONE HD  
7HD  
9HD  
10 HD  
PRIME7 HD  
WIN HD

High Definition (HD) channels provide the best viewing quality and are available with a digital antenna connection.

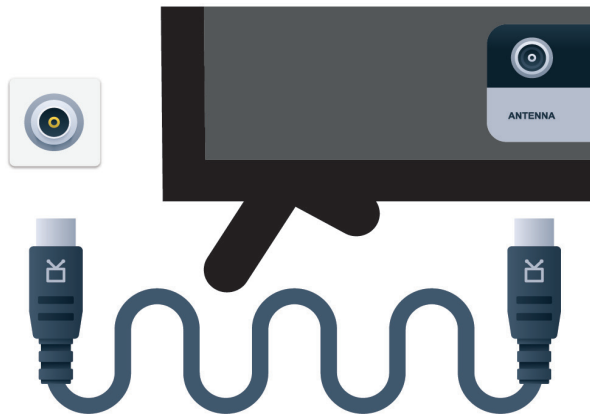

Antenna cable not included.

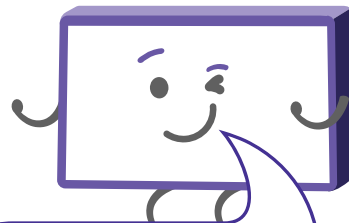 

Don't forget to plug in the TV to the power outlet. Leave the power switched off until installation is finished.



Make sure the TV is **switched off** at the power outlet until you have finished connecting your cables.




# Controls and Connections

 
Get to know your TV





## Buttons on the TV



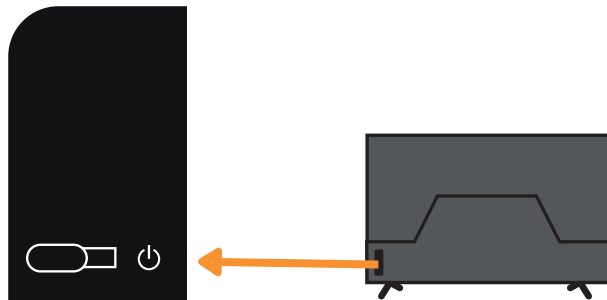





: Switch the TV on or to standby.

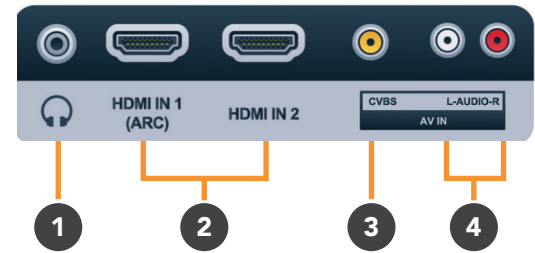 
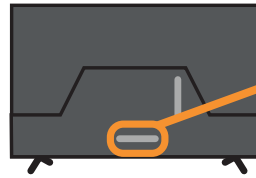 




 

   


 
See next page for more info on the connections. 
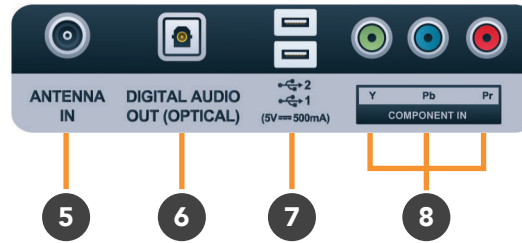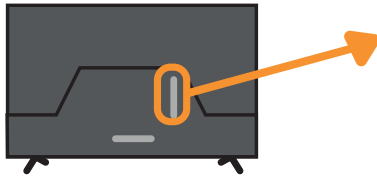
# Ports on the TV



1	Headphone Jack			SOUND	Connect to your headphones, amplifier or audio device, using an AUX cable (not included).
2	HDMI IN			SOUND PICTURE COMPUTER	All-digital connection between the TV and any HDMI device. Requires a HDMI cable (not included).
3	CVBS			PICTURE	You can use this to connect your DVD player. Supports Standard Definition (SD) resolution. Requires an AV cable (not included).
4	AUDIO IN			SOUND	You can use this to connect audio to your TV for AV or component video inputs. Requires a RCA stereo audio cable (not included).



5	ANTENNA IN  	FREE-TO-AIR TV	Connect your antenna for live TV. (Antenna cable not included).
6	DIGITAL AUDIO OUT (OPTICAL)  	SOUND	Connect an external digital audio device. Use an optical cable (not included) to connect the unit with an amplifier, soundbar or other audio decoding device for digital audio signal output.
7	USB  	STORAGE	<ul style="list-style-type: none"> <li>» PVR record and pause live TV</li> <li>» Play your stored media files (supported file codecs and extensions may vary)</li> <li>» Software updates</li> </ul>
8	COMPONENT IN  	PICTURE	You can use this to connect your DVD player. Supports High Definition (HD) resolution. This also requires a component cable (not included).



# Remote Control



## Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.



 
### Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

# Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the TV. The remote will not operate if its path is blocked.

The remote has a range of up to about 6 metres from the TV at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

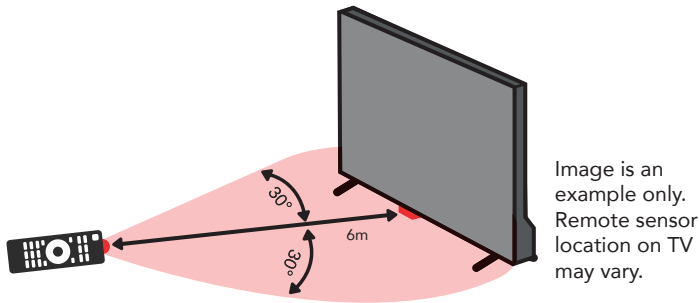

## Remote Hints and Tips

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.

# Buttons and Functions



**POWER**: Switch the TV to On or Standby

**GOTO**: Jump to a different chapter of the DVD

**ANGLE**: View DVD playback from different angles, if the DVD has this feature

**FAV**: Press to display your favourite program in DTV mode

**TEXT**: Switch between TV and Teletext mode\*

**SUBTITLE**: Enable/disable subtitles in DTV mode

**SIZE/ZOOM**: Change the picture size

**MEDIA**: Select USB mode

**PLAY/PAUSE**: PLAY/PAUSE in TIMESHIFT and USB mode

 
**REC / D.SETUP**: Record program in DTV mode / Display the main disc menu in DVD mode

**STOP**: Stop playback

**MENU**: Display the main TV menu

**UP/DOWN/LEFT/RIGHT**: Press the UP/DOWN/LEFT/RIGHT buttons to navigate the on-screen menus and adjust the system settings

**OK**: Display the channels list (DTV)

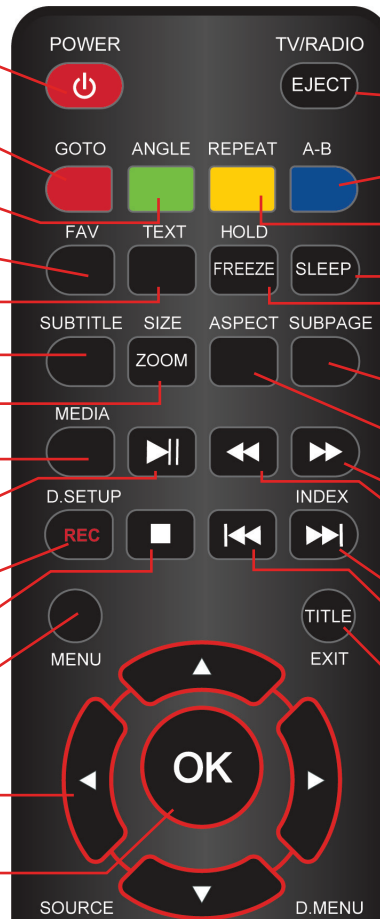

**TV/RADIO / EJECT**: Switch between TV or radio / Eject a disc (DVD)

**A-B**: Repeat selected DVD scenes

**REPEAT**: Repeat playback of a selected chapter, title, or the entire DVD

**SLEEP**: Set the TV sleep timer

**FREEZE/HOLD**: Hold the picture temporarily

**SUBPAGE**: Manually jump to the previous or next subpage of Teletext\*

**ASPECT**: Change the size of the image on your screen

**Fast forward**

**Rewind**

**INDEX**: Play next file./ Display the recorded programs list (DTV)

**Play the previous file**

**TITLE/EXIT**: Display the DVD title menu/Exit the main menu

\* Teletext is no longer available in Australia.



# On-Screen Set Up



Make sure equipment is properly connected (as shown on pages 10-11) before connecting the TV to power.



On/Standby light is WHITE in standby mode.

On/Standby light is OFF when the TV is on.

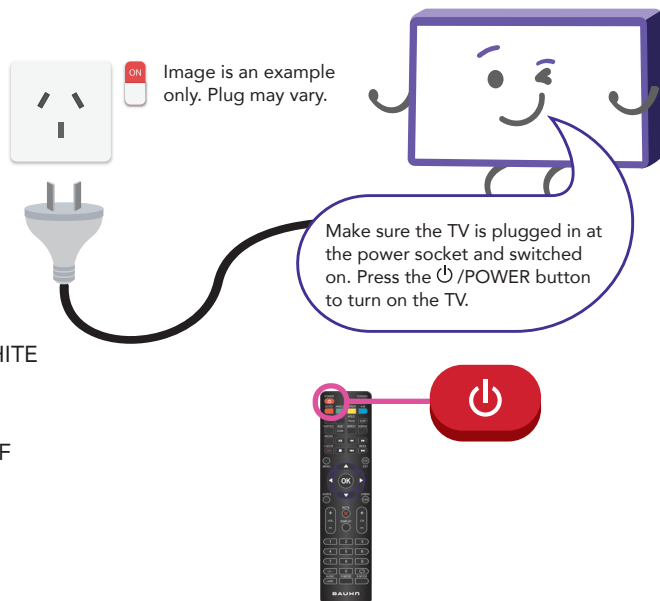 







Image is an example only. Plug may vary.

Make sure the TV is plugged in at the power socket and switched on. Press the  /POWER button to turn on the TV.

## First Time Setup menu

When you turn the TV on for the first time, the First Time Setup menu will appear.

Follow the prompts using the  /  /  /  / **OK** buttons to select your preferences. You will be able to adjust:

**Language** **Country** **Energy Mode** **Tune Type**

**Sorting by LCN** **Auto Tuning**





If you make an error, you can update your preferences in the settings menu later.

 
 


# TV Setting Menus

## Menu Navigation Buttons

Press the **MENU** button to display the TV settings menu. See the guide below for all the other buttons you'll need to use to adjust and change your settings.

Function	Remote Button
Display the main menu	 MENU
Select different sub-menus	◀ / ▶
Enter a sub-menu	 OK
Select preferred option	▲ / ▼
Adjust a value	◀ / ▶
Return to the previous menu	 MENU
Exit a menu	 TITLE EXIT

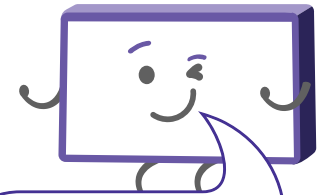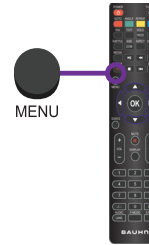

Once you have program any settings, the unit will retain them in its memory until you change them, even after turning the TV off.

## Menu Index



Channel 19

- Auto Tuning
- ATV Manual Tuning
- DTV Manual Tuning
- Program Edit
- Schedule List
- Recorded List
- Signal Information



## Picture 21

- Picture Mode
- Personal Mode settings:
  - Brightness
  - Contrast
  - Sharpness
  - Tint
- Colour Temp
- Noise Reduction
- Dynamic Contrast
- Aspect Ratio



## Sound 23

- Sound Mode
- Personal Mode settings:
  - Treble
  - Bass
- Balance
- Auto Volume Level
- Surround Sound
- S/PDIF Mode
- AD (Auto Description) Switch
- Audio Delay



## Time 25

- Clock
- Time Zone
- Off Time
- On Time
- Sleep Timer
- Auto Standby
- OSD Timer



## Lock 26

- System Lock
- Set Password
- Channel Lock
- Parental Guidance
- Key Lock
- Hotel Mode



## Setup 28

- OSD Language
- Audio Language
- Subtitle Language
- Hearing Impaired
- Aspect Ratio
- PVR File System
- Blue Screen
- First Time Installation
- Energy Mode
- Reset to Default
- Shipping Condition
- Software Update (USB)
- System Information
- HDMI CEC Setup

# Channel



## Option

## Description

### Auto Tuning

Automatically tune all available free-to-air TV channels. Adjust settings (default settings are set for Australia). Press OK to start scanning.

### ATV Manual Tuning

Manually select and tune analog TV channels. (Analog TV is no longer supported in Australia).

Current channel: Press the ◀/▶ buttons to select the channel number to save the tuned signal.

Colour System: Select the colour system (PAL in Australia).

Sound System: Select the sound system (BG in Australia).

Fine-Tune: View the file tune setting.

Search: Press the **OK** button to start tuning.

### DTV Manual Tuning

Manually select and tune digital TV channels. Use ◀/▶ to select the broadcast channel. Press OK to begin scanning.

### Program Edit

See the next page for more information.

### Schedule List

Manage scheduled recordings. Press  **REPEAT** to add a new program to record.

Press  **A-B** to edit an existing schedule. Press  **GOTO** to delete an existing schedule.

### Recorded List

Display previously recorded programs.





### Signal Information

Display current signal information (DTV mode only).



# Program Edit

Use the ▲ / ▼ buttons to highlight a channel.

Option	Description
Move	Move the channel location on the list. Press  <b>REPEAT</b> to enter Move Mode. Use the ▲ / ▼ buttons to select a position and press  <b>REPEAT</b> to confirm it.
Delete	Press  <b>GOTO</b> to delete the highlighted channel.
Skip	Press  <b>A-B</b> to skip the highlighted channel.



# Picture



## Picture Mode

**Home** (default): Default picture settings for home use.

**Bright Room** : Brighter and clearer picture settings for bright viewing environments.

 
**Dynamic** : Enhanced brightness, contrast, colour depth and edges so content stands out.

**Mild** : Enhanced brightness with lower contrast, colour depth and edges.

**Personal** Adjust settings to best suit your viewing environment and content.

### Personal Mode settings

Option	Description
Brightness	Adjust the depth of shadow in the picture. The closer to 0, the darker shadows will look, losing detail in darker images.
Contrast	Adjust the intensity of highlights/white in the picture. The closer to 100, the brighter highlights will look, losing detail in brighter images.
Sharpness	Adjust the sharpness of the picture. The closer to 100, the sharper and clearer the image.
Tint	Adjust the saturation. The closer to 100, the deeper the colour.

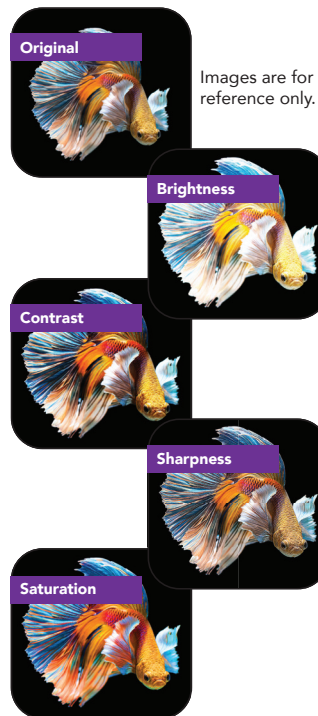

See the next page for more menu settings

Option	Description
Colour Temp	Adjust the on-screen colour temperature.
Noise Reduction	Reduces noise to improve picture quality.
Dynamic Contrast	Adjusts the difference between the bright and dark sides of the screen according to the brightness of the image.
Aspect Ratio	Adjust the video size. The available video size may be different for different input sources.

# Sound

Option	Description
--------	-------------

Sound Mode	<b>Standard</b> <b>Music</b> <b>Sports</b> <b>Personal</b> <b>Movie</b>
------------	---

These options are available in the Personal sound mode:

Option	Description
--------	-------------

Treble	Adjust the levels of higher pitched sounds.
--------	---

Bass	Adjust the levels of lower pitched sounds.
------	--

## Option                      Description

Balance

Adjust the audio output between the left and right speakers.

AVL (Auto  
Volume Level)

Turn on to keep the volume level consistent.

Surround Sound

Turn ON/OFF surround sound effect from your TV speakers.

S/PDIF Mode

Set the digital sound output setting.

AD (Audio  
Description)  
Switch

Audio Description (AD) provides an additional audio track for visually challenged persons (DTV only, subject to program).

Audio Delay

Adjust if the sound and picture are not synchronized.



# Time



## Option

## Description

Clock

Manually set the date and time.

Time Zone

Select your timezone.

Off Time

Set time and day to turn off the TV.

On Time

Set the time and day to turn on the TV.

Sleep Timer

Select the desired Auto Sleep (Standby) duration.

Auto Standby

Sets the time when the TV will enter standby mode due to inactivity.

OSD Timer

Select the desired OSD (On Screen Display) menu duration.



# Lock




Enter the factory password '0000' using the number buttons on the remote and select 'OK' on-screen. If you changed your password but forgot it, you can still use the master password.



Factory Password: 0000

Master Password: 4711

Option	Description
System Lock	Enable/disable the lock on the system.
Set Password	Input a new password using the number buttons on the remote and confirm to set the new password.
Channel Lock	Lock selected channels. Press the ▲ / ▼ buttons to select the channel you want to lock. Press  /ANGLE repeatedly to lock/unlock the highlighted channel.
Parental Guidance	This item is used to block access to specific program ratings.
Key Lock	Enable/disable TV buttons.
Hotel Mode	See the next page for more information.

## Hotel Mode

Option	Description
Hotel Mode	Turn On/Off Hotel Mode.
Source Lock	Turn On/Off the lock on available sources.
Default Source	Set a default input source.
Default Program	Set the default digital program.
Default Volume	Set the default volume level.
Max Volume	Set a limit to the maximum volume level.
Import Database	Import data to your connected USB storage device.
Export Database	Export data to the TV from a USB memory device.
Clear Lock	Clear the above settings.



# Setup



Option	Description
OSD Language	Select your preferred On Screen Display language.
Audio Language	Select your preferred audio language. (Available for digital channels, depending on the program).
Subtitle Language	Turn subtitles On/Off (available for digital channels, depending on the program).
Hearing Impaired	For hearing impaired users, this function explains scenes or actions via a descriptive caption. (Available for programs that contain related captions).
Aspect Ratio	Adjust the video size. The available video size may be different for different input sources.
PVR File System	See page 30 for more information.
Blue Screen	When there is no signal or a poor signal, a blue screen will appear.
First Time Installation	Return to First Time Setup menu.
Energy Mode	Select off for normal home viewing or on for in-store retail demonstrations.
Reset to Default	Restore the system settings to the factory default.
Shipping Condition	Reset the TV to shipping condition.
Software Upgrade (USB)	Upgrade the software using a USB storage device.
System Information	View the software information.
HDMI CEC Setup	See the next page for more information.

## HDMI CEC Setup

This feature allows for your TV and your connected HDMI device to be controlled by one remote.

Press the **SOURCE** button on the unit or remote control to select the HDMI input source.

Option	Description
HDMI CEC (Consumer Electronics Control)	Turn HDMI CEC On/Off.
ARC (Audio Return Channel)	If this function is enabled, sound from the TV can be sent to an HDMI-ARC supported external audio device.
Auto Power	Turn on/off the auto power function.
Device Menu	Display the available device that is connected.



Make sure your device supports CEC! Also remember to turn on its ARC function.

# PVR File System

REC

To make changes to PVR (Personal Video Recording), ensure your USB drive is inserted into the TV. Check the troubleshooting section if you're having problems setting up your USB device.

Option	Description
Select Disk	Select a disk used for PVR.
Check PVR File System	Check the health of the USB drive file system.
USB Disk	Check if the USB disk format is supported.
Format	Format the connected USB disk.
Time Shift Size	Select the memory size for the Time Shift function. Options: 512MB, 1GB, 2GB, 4GB.
Speed	Checks the speed of the storage device.
Free Record Limit	Set the free recording time limit. Options: 1hr, 2hrs, 3hrs, 4hrs, 5hrs, 6hrs

# TV Guide

(Free to air TV)

## TV Guide Functions

 
Function	Remote Button
Switch between the channels list and program list	◀/▶
Select a Channel or Program	▲/▼
Schedule a reminder for the selected program	■ /ANGLE
Schedule a recording for the selected program	■ /GOTO
View TV Guide for the previous day	■ /REPEAT
View TV Guide for the next day	■ /A-B
Display full program information	○ OK
Exit TV Guide menu	○ TITLE EXIT

To access the TV guide, press the **D.MENU/GUIDE** button on the remote.

To activate the TV Channels use the ▲/▼ buttons to select a channel in the left column, then press **OK** to confirm.



# Recording

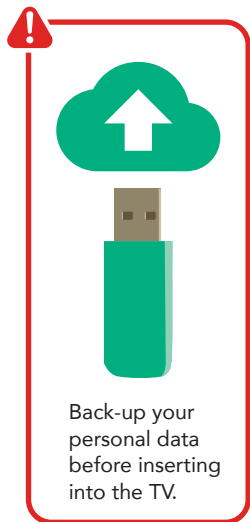

## Important Tips:

- Back-up your personal data before plugging in your USB to the TV. We do not assume liability for any loss of data due to misuse or malfunction.
- You cannot change channels while in recording mode.
- If the signal is interrupted while in recording mode, the recording will stop until the signal is established.
- Do not turn the TV off while it is in time-shift mode.
- The file recorded can only be used on this TV. Do not copy it to any other device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored on it may be damaged.





Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



## Recording Live TV



REC

### Instant Recording

Press **D.SETUP/REC** once - start recording.

Press **D.SETUP/REC** again to view detailed information.



### Stop Recording

Press **■** once - display the dialogue box.

Select **YES** to stop recording.

Select **NO** to continue recording.

 


When a program is being recorded in the background (while the TV is in standby mode), the Standby/ON light will flash white.



Recording, scheduled recording and pause live TV functions only work in DTV mode (free-to-air).

SOURCE



## Scheduled Recording

See 'TV Guide' on page 31 about scheduling recordings.



INDEX

## Playback

Press the **INDEX** button to display the list of recorded programs, or press **MENU** > select Schedule List > Record List then press the **OK** button to display the list of recorded programs.

Press the **OK** button to start playback in Full Screen Mode.

Press **MENU** then select "delete" to delete the selected file.

**NOTE:** If the tool bar disappears, press the **EXIT** button on the remote control to display it again.

# Pause Live TV (Time-shift)

Temporarily pause the live TV signal, then resume playback at your convenience.



Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



## Start Time-shift

Press the **⏸** button on the remote to enter time-shift mode.



Press the **⏸** or **OK** buttons to resume playing the program.



## Stop Time-shift

Press the **■** button to exit time-shift.



The USB storage device won't retain recorded data after you exit the time-shift function.

 
**NOTE:** If the tool bar disappears, press the **EXIT** button on the remote control to display it again.

# USB Mode





## Set up

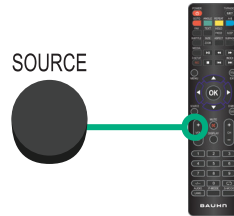Insert your USB into a USB port on the TV.

Press the SOURCE button to select 'Media' mode.



You can only play Photos in the Photo category, Music in the Music category and so on. Make sure you select the correct category for the file you wish to play.





Function	Remote Button
Choose a source or file	
Start playing your media	
Return to the previous screen	 EXIT
Exit Media mode	




 



## Playback Functions

Playback of different media types have different controls.

### Photo

 
Function	Remote Button
Navigate to a folder or file	
Display a photo	
Display the on-screen toolbar	
Return to file list	

### Music

Function	Remote Button
Navigate to a folder or file	
Play a track	
Fast forward or rewind the track	
Skip or restart the current track	
Return to the file list	

## Text

Function	Remote Button
Navigate to a folder or file	◀/▶ / ▲/▼
Open the text file	▶
Navigate to the next/previous page	◀/▶
Return to the file list	TITLE EXIT

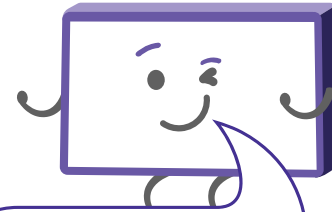

Only supported file types will be displayed. See the specifications table for supported file types.



# Troubleshooting

If you experience problems with your TV, check below for advice. If you don't find a solution here, contact After Sales Support on 1300 002 534.

Problem	Solution
The remote control does not work	<ul style="list-style-type: none"><li>Make sure that the batteries are installed with their poles (+/-) in the correct direction.</li><li>Remove any obstacles between the remote control and remote control sensor on the TV.</li><li>Check if the power indicator at the bottom of the TV blinks when you press the remote's power button.</li><li>If it does not, replace the remote control's batteries.</li><li>Try pointing the remote directly at the remote control sensor from 1.5-1.8m away.</li></ul>
The TV won't turn on	<ul style="list-style-type: none"><li>Make sure that the AC power cord is securely plugged into the wall outlet.</li><li>Check the wall outlet is turned on and the power indicator at the bottom of the TV is lit.</li><li>If using a multi-outlet, check if it is working properly. To check whether a power strip is working properly, plug the TV's power plug directly to a wall outlet and observe its operation.</li><li>Try to power on using the power button on the TV.</li></ul>
There is no picture/sound or distorted picture/sound in DTV mode	<ul style="list-style-type: none"><li>Ensure the antenna cable is securely connected to the TV and to the wall outlet.</li><li>Ensure the input source is set to DTV.</li><li>If "No Signal" is displayed, run Menu &gt; Channel &gt; Auto Scan to search for channels.</li><li>If some channels are missing, run Menu &gt; Channel &gt; Auto Scan or manually search by Menu &gt; Channel &gt; Digital Manual Scan.</li><li>Try a different antenna cable or another TV if possible.</li><li>Move the TV away from electronic equipment or devices that could cause interference.</li><li>Adjust the antenna position.</li><li>If the picture appears fuzzy or blurry, select High Definition (HD) channels or programs.</li></ul>

Problem	Solution
<p>There is no picture/ sound or distorted picture/sound from an external device</p>	<p>Ensure that connection to the device is correct and that all cables are fully inserted.</p> <p>Remove and reconnect all cables connected to the TV and the external devices. Try new cables if possible.</p> <p>Restart the connected devices by unplugging each device's power cord and then plugging it in again.</p> <p>If "No Signal" is displayed on the TV, ensure that the correct input source has been selected.</p> <p>When using the component cable, confirm that the green (Y), blue (Pb) and red (Pr) jacks are plugged into their proper connectors.</p>
<p>There is no/distorted/ delayed sound</p>	<p>Ensure the volume is not muted. If it is, press the VOL+ button to restore the sound.</p> <p>If earphones are connected, unplug them.</p> <p>Check the volume level of the external device.</p> <p>Ensure that connection to the external audio device is correct and that all cables are fully inserted.</p> <p>Ensure correct input source and audio settings have been selected on the external audio device.</p> <p>Move the TV away from electronic equipment or devices that could cause interference.</p> <p>If you are using an external audio device via a HDMI cable, ensure that the device supports HDMI-ARC and, if applicable, the ARC setting is turned On (refer to the connection guide in the user manual of the connected device). Ensure on the TV, Menu &gt; Settings &gt; HDMI CEC Control &gt; ARC setting is turned On.</p> <p>If you are using an external audio device via an optical cable, check that the Menu &gt; Sound &gt; S/PDIF mode is set to "PCM".</p> <p>If the TV sound is not synchronised with the picture, adjust the applicable Menu &gt; Sound &gt; Sound Delay setting.</p>



Problem	Solution
USB storage device is not recognised or media files don't play properly	<p>This TV has been tested with the majority of Flash memory-based devices and hard disks (media players with HDD) on the market however, it may not be compatible with certain devices.</p> <p>If the external hard drive has its own power adaptor, use it.</p> <p>Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.</p> <p>The TV may not be able to recognise a USB device or read the files if it is connected with a USB extension cable</p> <p>The files that use an unsupported codec or container will not play on the TV.</p> <p>Some files may not play correctly if there is an error in the content or container.</p> <p>Certain files, depending on how they are encoded, may not play on the TV.</p> <p>Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.</p>





# Specifications

<b>Active screen size (diagonal)</b>	80cm	
<b>Resolution</b>	1366 x 768	
<b>Refresh rate</b>	60Hz	
<b>HDMI version</b>	1.4a	
<b>HDCP version</b>	1.4	
<b>Aspect ratio</b>	16:9	
<b>Multimedia playback formats (USB mode)</b>	Video	AVI, MPEG-1, MPEG-2, TS
	Music	MP3
	Photo	JPEG
<b>USB output</b>	DC 5V, 500mA	
<b>Power source</b>	AC: 100-240V, 50/60Hz	
<b>Power consumption</b>	55W Max.	

<b>Dimensions (W x D x H)</b>	With stand: 730.3 x 188.7 x 472.9 mm	
	Without stand: 730.3 x 76.7 x 438 mm	
<b>Weight</b>	Net	3.7 kg
	Gross	4.9 kg

For Technical and Warranty Support  
1300 002 534  
tempo.org  
tempo.org/support  
Distributed by Tempo (Aust) Pty Ltd,  
PO Box 132, Frenchs Forest NSW 1640



# Compliance and Responsible Disposal



## Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.



## Product

At the end of its working life, do not throw this product out with your household rubbish.

An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



## National Television and Computer Recycling Scheme

The careful disposal of e-waste is important because many televisions and computers contain materials which are hazardous to people and the environment. There are no fees for householders or small businesses disposing of e-waste at a scheme collection service.

Individuals can contact their local council for information on local e-waste management services, find scheme services listed on Planet Ark's website at [www.recyclingnearyou.com.au](http://www.recyclingnearyou.com.au), or call Planet Ark on 1300 733 712.

## Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.





**BAUHN®**

## Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





**BAUHN®**

## **Repair and Refurbished Goods or Parts Notice**

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 002 534 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252  
PO Box 132, Frenchs Forest NSW 1640  
Telephone: 1300 002 534 (Aust) Fax: (02) 8977 3765  
Tempo Help Desk: 1300 002 534 (Aust)  
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)  
Email: tempo.org/support

# Notes

# Notes

# Notes

## Online support

Visit [www.bauhn.com.au](http://www.bauhn.com.au) for software updates to keep your TV up-to-date, as well as the latest User Manual for information on the updated features.

## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 002 534.

ALDI guarantees that our products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



**AFTER SALES SUPPORT** 

 AUS 1300 002 534  [tempo.org/support](http://tempo.org/support)

MODEL: ATV32HD-1121 PRODUCT CODE: 707729 11/2021

**1**  
YEAR WARRANTY