

BAUHN®

5.1 Channel Soundbar with Wireless Subwoofer and Speakers



MODEL: ADDSB-0122

User Manual

AFTER SALES SUPPORT

  1300 002 534



 tempo.org/support

MODEL: ADDSB-0122 PRODUCT CODE: 708016 01/2022

Welcome

Congratulations on your purchase!

This manual tells you all you need to know about using your new BAUHN® product.

Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

Domestic use only: This product is intended for indoor domestic use only. It is not suitable for commercial, industrial or outdoor use. Do not use this product for anything other than its intended purpose, and only use it as described in this manual.

We hope you will enjoy using your purchase for many years to come.

Contents


Welcome	2	Operation	23
Unpack and Prepare	4	General Operation	23
What's in the Box	4	Input Modes	23
Wall Mount Installation Kit	5	Bluetooth®	24
Installation	6	Pairing Bluetooth® Devices	24
Wall Mounting Instructions (Soundbar)	8	Bluetooth® Playback	25
Wall Mounting Instructions (Rear Speakers)	10	Troubleshooting	26
Connect to Power	12	Specifications	29
Controls and Connections	13	Compliance and Responsible Disposal	30
Get to know your Soundbar	13	Warranty Information	31
Buttons on the Soundbar	13	Repair and Refurbished	
Rear Ports on the Soundbar	14	Goods or Parts Notice	32
Wireless Subwoofer	16		
Wireless Rear Speakers	18		
Remote Control	20		
Setup	20		
Using the Remote Control	21		
Remote Overview	22		

Unpack and Prepare

What's in the Box

Before setting up your new Soundbar, check you have everything:

- A. 5.1 Channel Soundbar
- B. Wireless Subwoofer
- C. Wireless Rear Speakers (2)
- D. Remote Control
- E. AAA Activ Energy Batteries (2)
- F. AC Adaptors (3)
- G. AC Power Cord
- H. Optical Cable
- I. 3.5mm Audio Cable
- J. Wall Mount Installation Kit
- K. User Manual
- L. Quick Start Guide
- M. General Safety Warnings
- N. Warranty Certificate

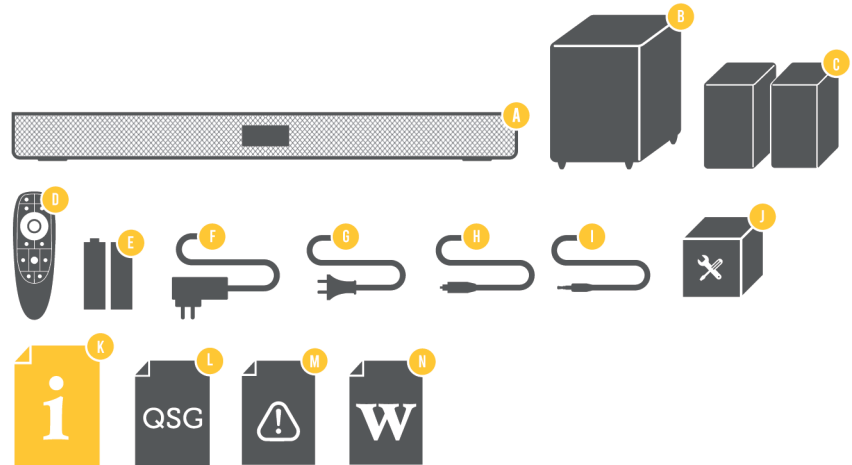


You will need:

- Phillips-head screwdriver and a drill (for wall mount installation)
- HDMI Cable, if you want to set up and use HDMI CEC.

Wall Mount Installation Kit

The illustration below shows the contents of the wall mount installation kit. These are the parts you will need if wall mounting your soundbar and rear speakers.

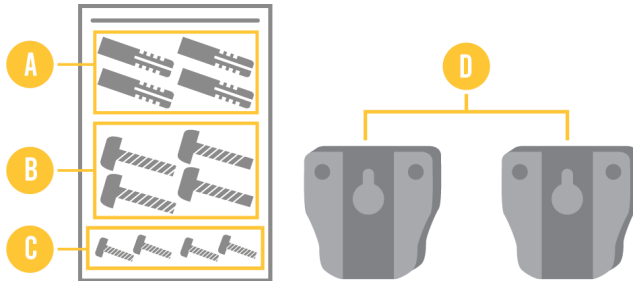

- A. Plastic Anchors (4)
- B. Long Screws (4)
- C. Short Screws (4)
- D. Metal Brackets (2)



- Place the Soundbar on a level surface.
- Place the Soundbar away from any source that may generate heat or vibrations.
- Make sure there is enough space around the Soundbar for airflow.
- The remote control works up to 6 metres away from the Soundbar.
- Unplug the Soundbar before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- Keep liquid, children and pets away from the Soundbar at all times.

Installation

This soundbar along with the rear speakers can sit free-standing on a surface, or it can be mounted to a wall.

Note: The subwoofer cannot be wall mounted.



Free-standing

Place on a secure, flat surface. Make sure the soundbar is standing on its rubber pads (on the left and right sides of the soundbar) and no other area of the bottom of soundbar is touching the surface.

Wall mounting instructions are on the following pages.



Wall mounted



- Wall-mounted installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage! If you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing, which may be hidden inside or behind the wall.
- It is the installer's responsibility to verify and confirm that the wall will safely support the total load of the soundbar and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Use an electronic stud finder to check the wall type before drilling and mounting.

Wall Mounting Instructions (Soundbar)


1



Fix the supplied metal brackets to the bracket fixing holes on the back of the soundbar with the supplied short screws. Affix the brackets as shown in the illustration (left).


Use a pencil to make drill hole marks on the wall for the plastic anchors. Make sure the marks are level before drilling. Use a 6mm bit and power drill (not supplied) to drill holes on the marks.

Note: For a wood stud wall, use an electronic stud detector to locate the centre of the framing studs before marking and drilling the holes.

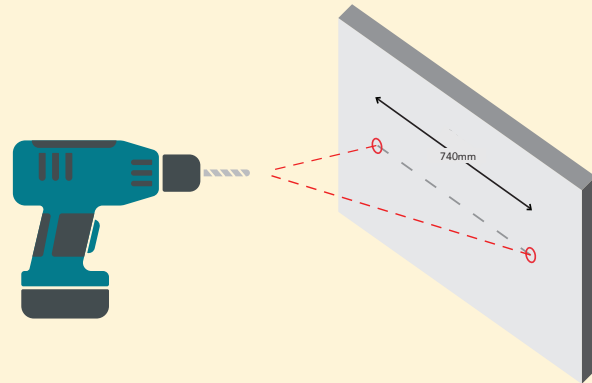


4

Slide the soundbar onto the fixed screws. Make sure that the soundbar is secure and attached firmly to the wall.

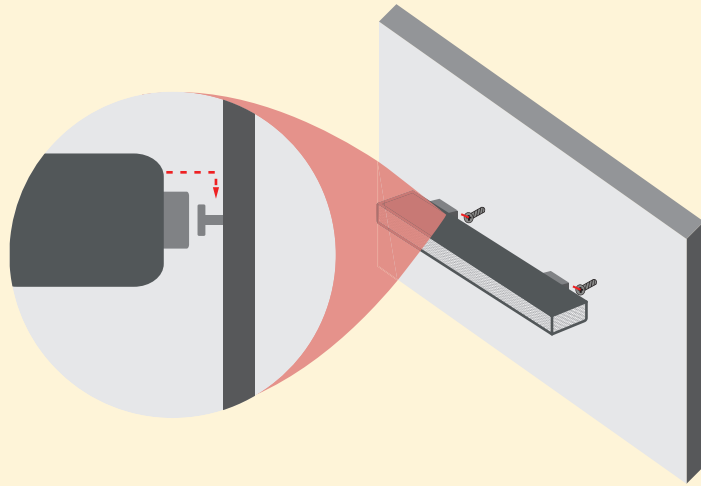

3

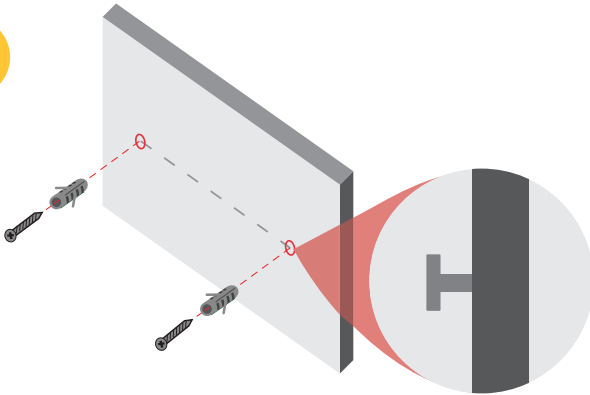

For a concrete or brick wall:

Insert the supplied plastic anchors into the holes and push in until they are flush with the wall. Drive the supplied long screws into the plastic anchors and tighten until the screw head is approximately 3mm from the wall.

For a wood stud wall:



Drive the screws into the wall and tighten until the screw head is approximately 3mm from the wall.

Wall Mounting Instructions (Rear Speakers)

1

Use a pencil to make drill hole marks on the wall for the plastic anchors at the desired mounting location. Make sure the marks are level before drilling. Use a 6mm bit and power drill (not supplied) to drill holes on the marks.

Note: For a wood stud wall, use an electronic stud detector to locate the centre of the framing studs before marking and drilling the holes.

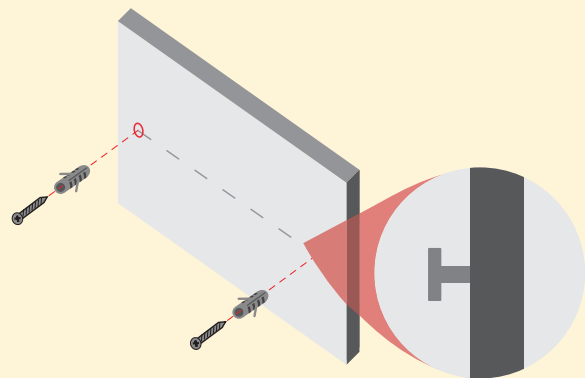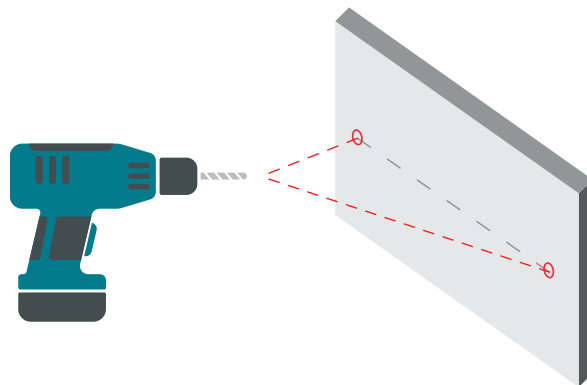

For a concrete or brick wall:

Insert the supplied plastic anchors into the holes and push in until they are flush with the wall. Drive the supplied long screws into the plastic anchors and tighten until the screw head is approximately 3mm from the wall.


For a wood stud wall:

Drive the screws into the wall and tighten until the screw head is approximately 3mm from the wall.


2

3

Slide the rear speakers onto the fixed screws. Make sure that the rear speakers are secure and attached firmly to the wall.

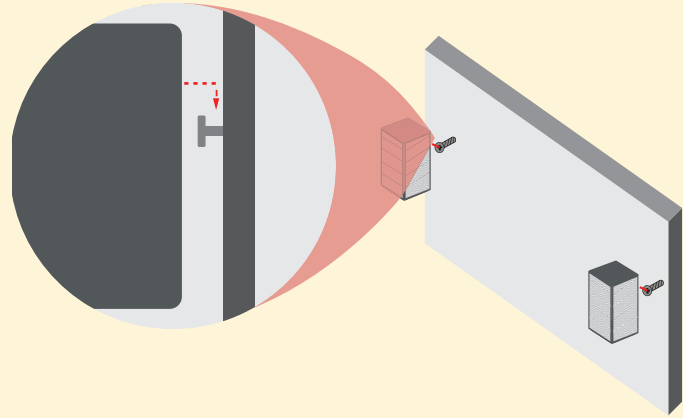


Connect to Power

 Make sure the power switch is **switched off** at the power outlet until you have finished connecting your cables.


Soundbar



Subwoofer

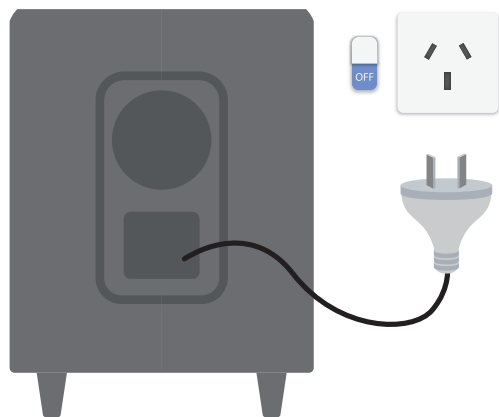


Rear Speakers

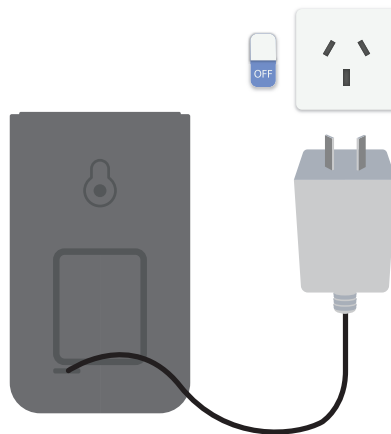


The soundbar must use the 20VDC, 1.8A adaptor and the rear speakers must use the 20VDC, 1.2A adaptors.

Controls and Connections

Get to know your Soundbar

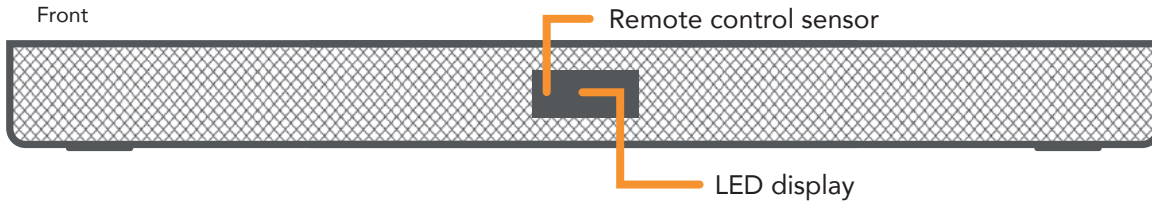

Buttons on the Soundbar

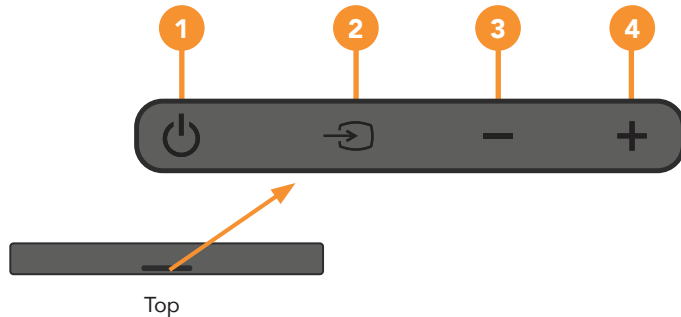


1. ⏻ : Tap to turn on. Tap to put in Standby mode.
2. ↶ : Tap to select your preferred input source.
3. - : Tap to decrease the volume level.
4. + : Tap to increase the volume level.

See next page for more info on the connections.




Rear Ports on the Soundbar

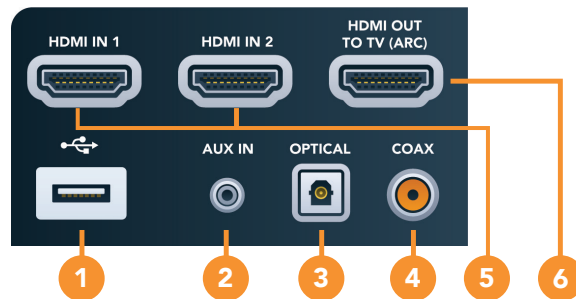

1	USB		STORAGE	Play your stored media files (supported file codecs and extensions may vary).
2	AUX IN		SOUND	Use the supplied 3.5mm audio cable to connect the headphone socket of the connected audio device, such as a media player, to the AUX IN socket on the unit.
3	OPTICAL		SOUND	Connect an optical cable (included) to the OPTICAL socket of your device (e.g. TV, DVD player) and the OPTICAL socket on the soundbar.
4	COAX		SOUND	Connect a coaxial cable (not included) to the COAX socket of your device (e.g. TV, DVD player) and the COAX on the soundbar.
5	HDMI IN		PICTURE	Connect to a HDMI supported device like a DVD player or gaming console using a HDMI cable (not included). Audio will be played through the soundbar and picture will loop to the HDMI OUT of the TV. The HDMI IN 1 or 2 input will be automatically detected and switch to HDMI OUT.
6	HDMI OUT TO TV (ARC)		SOUND	HDMI (ARC): The ARC (Audio Return Channel) function allows you to send audio input from an ARC-compliant TV to an ARC-compliant audio device (e.g. soundbar) without the need for an additional 3.5mm audio cable connection.
			PICTURE	HDMI: The output port will loop through the HDMI IN 1 or HDMI IN 2 picture and audio signals to the TV.

Rear Ports on the Soundbar

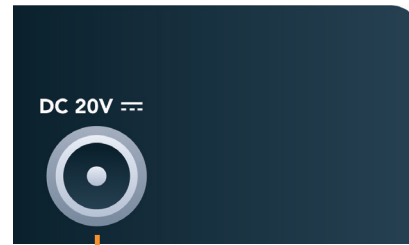

7

DC IN



POWER

Before connecting the AC power adaptor cord, ensure you have completed all other connections. Connect the AC power adaptor cord to the DC IN socket first, then plug in the AC power adaptor to the mains supply socket.

HDMI (ARC)


To use the ARC function, make sure the soundbar's HDMI (ARC) socket is connected via a HDMI cable (not included) to the HDMI (ARC) socket of your ARC compliant TV. Then just use your TV's remote control to adjust the volume output (VOL +/- and MUTE) of the connected audio device. In the TV settings menu, turn on the ARC and CEC function (when CEC is turned on, the sound bar will turn on/off automatically when the TV is turned on/off).

Note: HDMI IN 1 and HDMI IN 2 inputs only support up to 2K video resolution input (does not support 4K & 8K). The soundbar will have no sound and video output for inputs with a higher resolution than 2K.



When you use HDMI connection to your TV or DVD, the audio output in the TV or DVD settings menu must be set to PCM mode (instead of Auto mode, RAW mode etc.).

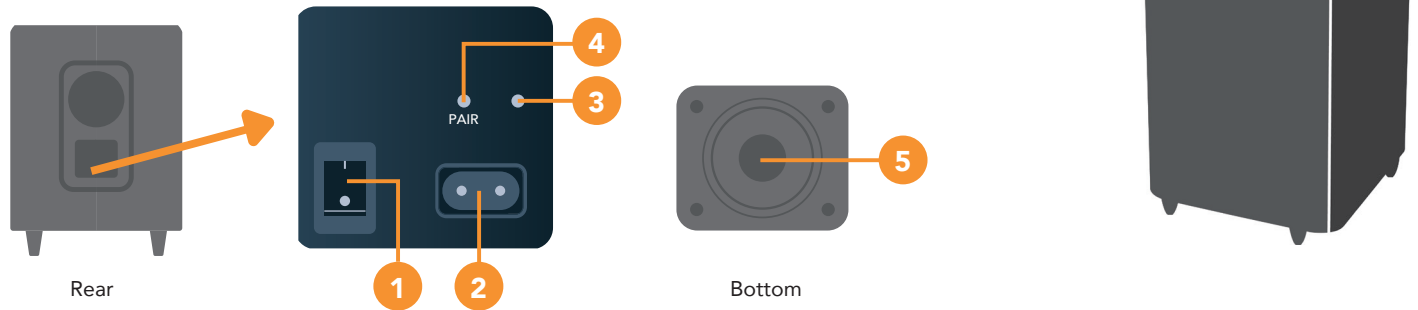


Wireless Subwoofer



1. Power button: Turn subwoofer on/off by flicking the button
2. Power cord: Connect to power
3. Connection indicator (flashes blue when ready to pair, lights up blue when paired)
4. PAIR button: Press and hold to start pairing with the soundbar
5. Subwoofer speaker


Pairing the wireless subwoofer with the soundbar for the first time

Note: the wireless subwoofer must be manually paired with the soundbar for first time use.

1. Tap the  button on the soundbar or press the  button on the remote control to turn on the soundbar.
2. Flick the power button on the subwoofer to turn on, the connection indicator will flash blue.
3. Press and hold the  button on the soundbar or remote control until "PAIRING" is seen on the LED display, indicating it is ready to pair.
4. Press and hold the PAIR button on the subwoofer within 15 seconds . The connection indicator will light up blue, indicating pairing has been successful.

Pairing the wireless subwoofer with the soundbar after first time use

- The subwoofer and soundbar will automatically pair when they are both plugged into the mains sockets and turned on. No cable is needed for connecting the two.
- Flick the power button on the subwoofer on and the connection indicator will flash blue, meaning it is currently ready for pairing.
- Turn on the soundbar and it will automatically start pairing with the subwoofer. The connection indicator will light up blue once connected.
- To turn off the subwoofer, flick the power button off.

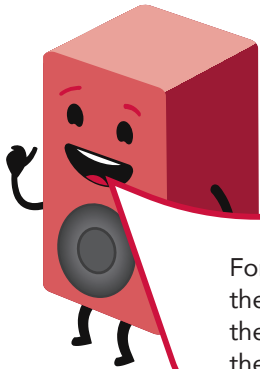


For best sound experience, place the subwoofer on the ground near the soundbar. The area of around the subwoofer should be clear of any obstructions.



- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.
- The subwoofer should be within 6m of the soundbar in an open area.

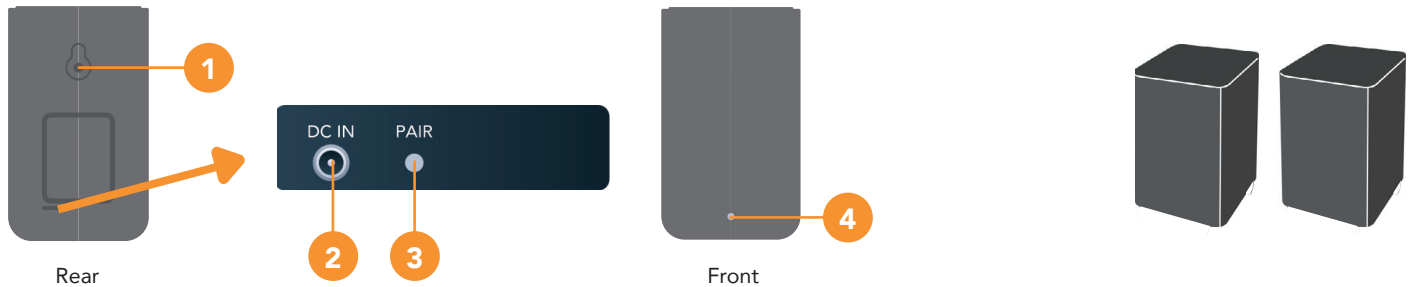


Wireless Rear Speakers



1. Wall mount hole
2. DC IN: connect to power using the supplied 20V, 1.2A AC adaptor
3. PAIR button: Press and hold to start pairing with the soundbar
4. Connection indicator (flashes blue when ready to pair, lights up blue when paired)


Pairing the rear speakers with the soundbar for the first time

Note: the rear speakers must be manually paired with the soundbar for first time use.


1. Tap the  button on the soundbar or press the  button on the remote control to turn on the soundbar.
2. Using the supplied 20V, 1.2A AC adaptor, plug into the DC IN port and the other end of a mains socket to turn the rear speaker on, the connection indicator will flash blue.
3. Press and hold the  button on the soundbar or remote control until "PAIRING" is seen on the LED display, indicating it is ready to pair.
4. Press and hold the PAIR button on the rear speaker within 15 seconds . The connection indicator will light up blue, indicating pairing has been successful.
5. Repeat the above steps to pair with the other rear speaker.

Pairing the rear speakers with the soundbar after first time use.

- The rear speakers and soundbar will automatically pair when they are both plugged into the mains sockets and turned on. No cable is needed for connecting the two.
- Use the supplied 20V, 1.2A AC adaptor to connect to the DC IN port of the rear speaker and the other end of a mains socket to turn on, the connection indicator will flash blue.
- Turn on the soundbar and it will automatically start pairing with the rear speakers. The connection indicator will light up blue once connected.

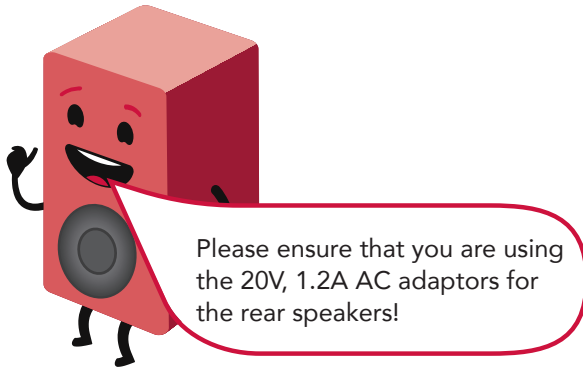

Remote Control

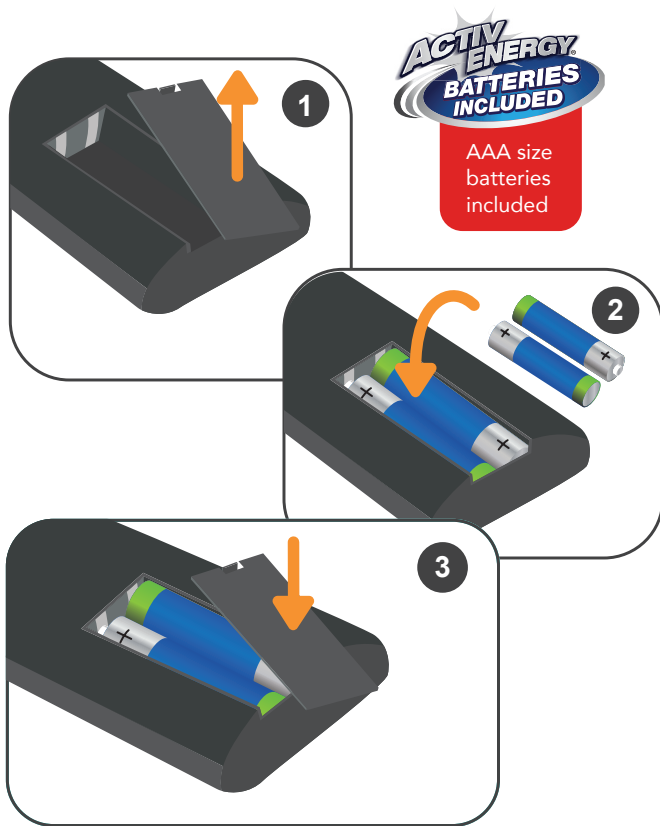

Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.



Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the soundbar. The remote will not operate if its path is blocked.

The remote has a range of up to about 6 metres from the soundbar at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

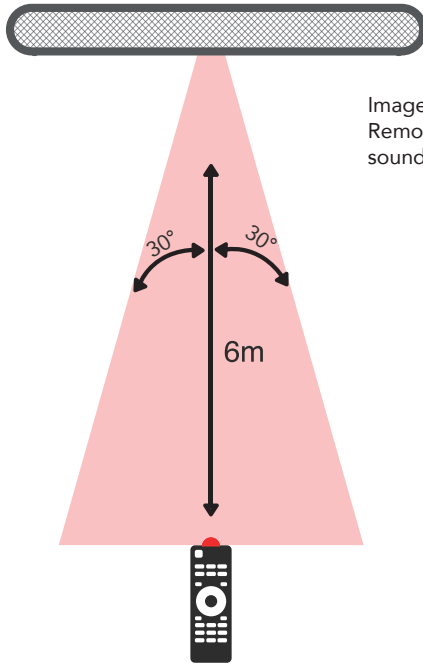



Image is an example only.
Remote sensor location on
soundbar may vary.



Remote Use





 
 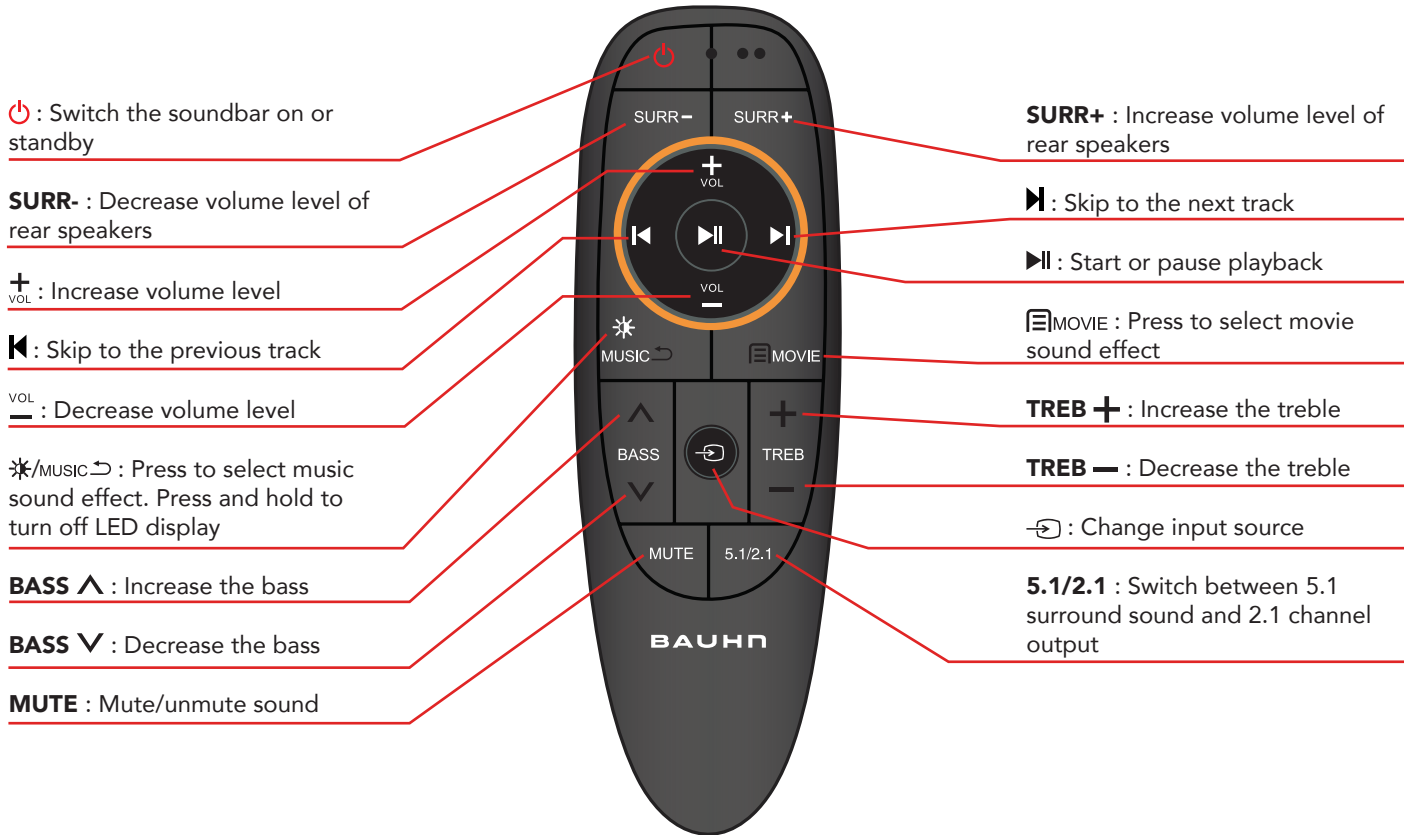

 
- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.

Remote Overview



Operation

General Operation

Function	Action
Turn the soundbar ON	Tap the  button on the soundbar or press the  button on the remote control.
Turn the soundbar OFF	Tap the  button on the soundbar or press the  button on the remote control.
Turn the subwoofer ON	Flick the power button on the subwoofer.
Turn the subwoofer OFF	Flick the power button on the subwoofer.
Change the input source/mode	When the soundbar is on, tap the  button on the soundbar or press the  button on the remote control repeatedly to change the input source.
Increase/decrease the volume	Tap the + / - buttons on the soundbar or press the  /  on the remote control to adjust the volume level.

Input Modes

Input	Display
HDMI IN 1 HDMI IN 2	HDMI (when no input signal) Hd-1/Hd-2
HDMI (ARC)	ARC
Bluetooth®	BT
Optical	OPTI
Coaxial	COAX
AUX	AUX
USB	USB
2.1 Channel	2.1
5.1 Channel	5.1

Bluetooth®


You can listen to tracks from a media device if connected to the soundbar via Bluetooth® wireless technology.

Pairing Bluetooth® Devices

The first time you use your Bluetooth® device with the soundbar, you will need to pair them with one another.

Activate Bluetooth® on your compatible device, and set it to search for compatible devices.

Select 'BAUHN ADDSB-0122' from the list of found devices.

Note: Only one playback unit can be connected to the soundbar. If the soundbar is already connected to another playback unit, the soundbar will not appear in the Bluetooth® selection list. To disconnect the existing paired device, press and hold the  button on the remote for 3 seconds.

If your device asks for a passkey (depending on the device manufacturers, model, and software version), then enter digits "0000" and press OK.



The operational range between this soundbar and a Bluetooth® device is approximately 10 metres (without any object between the Bluetooth® enabled device and the soundbar). Any obstacle between the devices can reduce the operational range.

Before you connect a Bluetooth® enabled device to this soundbar, ensure you know the device's capabilities. Compatibility with all Bluetooth® devices is not guaranteed.

If the signal strength is weak, your Bluetooth® receiver may disconnect, but it will re-enter pairing mode automatically.



If a mobile phone on which you are playing music receives a call, the music will be interrupted. The phone call audio however is not played via the speaker. Once you end the call, the devices are connected to each other again and playback resumes.

Your device will also be disconnected when your device is moved beyond the operational range. If you want to reconnect your device, place it within the operational range.

If the connection is lost, follow the instructions (left) to pair your device to the player again.

Bluetooth® Playback

Function	Action
Increase the Volume	Tap the + button on the soundbar or press the + _{VOL} button on the remote.
Decrease the Volume	Tap the - button on the soundbar or press the - _{VOL} on the remote.
Play/Pause	Press the ▶ button on the remote.
Skip/Rewind	Press the ◀/▶ buttons on the remote to skip/rewind tracks.
Un-pair a Bluetooth® device	Press and hold the ▶ button on the remote for 3 seconds.



Troubleshooting

If you have problems with the soundbar, check below for advice. If you don't find a solution here, contact After Sales Support on 1300 002 534.

Problem	Solution
No power	<ul style="list-style-type: none">• Ensure that the power adaptor is properly connected.• Ensure that there is power at the AC outlet.• Tap the ⏻ button on the soundbar or press the ⏻ button on the remote to turn the soundbar on.
Remote control does not work	<ul style="list-style-type: none">• Use the remote control closer to the soundbar. Aim directly at the sensor on the front of the soundbar• Insert the battery with its polarities (+/-) aligned as indicated. Please check the battery is installed correctly.• Replace the battery.
No response from the soundbar	<ul style="list-style-type: none">• Disconnect and reconnect the power adaptor, then turn the soundbar on again.
Soundbar not found in the Bluetooth device list when pairing	<ul style="list-style-type: none">• Ensure you have unpaired the previously paired Bluetooth device from the soundbar.• Ensure the Bluetooth function is activated on your Bluetooth enabled device.
General sound issues	<ul style="list-style-type: none">• Make sure the soundbar is connected to power and turned on (LED display on), and that it's set to the correct mode; use the ↺ button on the soundbar or the remote to change the input mode.• To check the system hasn't frozen, press the volume buttons; the number in the LED display should change accordingly.• If only a specific input mode is not working, it's likely the setting is wrong or the cable used is not working.
No sound from Netflix/other apps	<ul style="list-style-type: none">• Go to the TV settings menu, find Audio Output settings, and change the audio output mode to 'PCM' mode (instead of Auto, RAW, etc.)
No sound in USB mode	<ul style="list-style-type: none">• Make sure the USB drive is in FAT32 file format, and it's no greater than 32GB;

Problem	Solution
No sound in HDMI ARC mode	<ul style="list-style-type: none"> • Make sure the input source is set to ARC; the LED will display 'ARC'. • Make sure your TV or external device supports ARC function and connect the HDMI cable to the ARC port of the TV or external device. • In the TV or external device setting menu, turn on the ARC function and the CEC function. • In the TV or external device setting menu, find the audio output settings and change the audio output mode to 'PCM' mode (instead of Auto, RAW, etc.) • Make sure both ends of the HDMI cable are fully plugged into the sockets. • If your TV or external device is muted or no sound output, the LED will flash 'ARC'; once audio signal is available, the LED will display 'ARC'. • If none of these solutions work, try changing the HDMI cable.
No sound in HDMI/ Optical/ Coaxial mode	<ul style="list-style-type: none"> • Make sure the input source is set to the correct mode; the LED will display 'Hd-1/Hd 2', 'OPTI' or 'COAX'. • Increase the volume of the soundbar to make sure it's not muted. • In the TV or external device settings menu, find the audio output settings and change the audio output mode to 'PCM' mode (instead of Auto, RAW, etc.) • For optical, make sure you remove the small caps on either end of the optical cable, and both ends are fully plugged into the sockets. • If your TV or external device is muted or no sound output, the LED will flash 'OPTI' or 'COAX'; once audio signal is available, the LED will display 'OPTI' or 'COAX'. • If none of these solutions work, try changing the optical or coaxial cable. • Make sure the input source of HDMI IN 1 or HDMI IN 2 is not over 2K video resolution.
No sound in BT mode	<ul style="list-style-type: none"> • Increase the volume of the soundbar to make sure it's not muted. Make sure Bluetooth is connected successfully - if not connected, the LED will flash 'BT'; once connected, the LED will display 'BT'. • Make sure the external Bluetooth device is playing normally and its volume is turned up.



Problem	Solution
No sound in AUX IN mode	<ul style="list-style-type: none"> • Make sure the LED screen is displaying 'AUX'. Turn up the volume on the soundbar. • Turn up the volume on the external device and make sure it's not paused or muted. • Make sure the 3.5mm audio cable is properly plugged in at both ends.
No sound output at the rear speakers	<ul style="list-style-type: none"> • Press the 5.1/2.1 button on the remote control to switch the speakers to select 5.1 channel output. • Make sure the signal source supports 5.1 channel output and is on 5.1 channel output mode.
No connection between the soundbar and the subwoofer	<ul style="list-style-type: none"> • If the connection indicator LED lights up red, it indicates that the connection has failed. Turn the soundbar to standby mode and turn off the subwoofer. Wait 1 minute and power on both the soundbar and subwoofer. • If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures. • Please pair the subwoofer manually.
Soundbar and TV does not display which HDMI IN when both inputs are connected	<ul style="list-style-type: none"> • The soundbar will automatically detect the first connected HDMI IN input. Switch off the unwanted device and it will automatically switch to the other HDMI IN device.



Specifications

Soundbar - AC Adaptor input power rating	DC 20V, 1.8A
Rear Speaker - AC Adaptor input power rating	DC 20V, 1.2A
Subwoofer - input power rating	AC 100-240V, 50/60Hz
Power consumption	Soundbar: 36W Subwoofer: 80W Rear Speakers: 24W each
Output power (RMS)	Soundbar: 2 x 20W + 20W Subwoofer: 100W Rear Speakers: 2 x 20W
Remote control operation range – distance, angle	6 metres, 30 degrees (either side of sensor)
Bluetooth pairing operation range – distance	Up to 10 metres
Bluetooth pairing name	BAUHN ADDSB-0122

Bluetooth pairing password	0000
Bluetooth version	5.0
USB output	DC 5V, 200mA (for playback only, not for charging external devices)
Dimensions (W x D x H)	Soundbar: 998 x 115 x 56 mm Subwoofer: 250 x 300 x 315 mm Rear Speaker: 90 x 90 x 150mm
Weight	Soundbar: 3.25 kg Subwoofer: 5.75 kg Rear Speaker: 1.34 kg (for both)

For Technical Support:

1300 002 534

tempo.org/support

Distributed by Tempo (Aust) Pty Ltd,

PO Box 132, Frenchs Forest NSW 1640



Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Dolby

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works.

Copyright © 1992-2021 Dolby Laboratories. All rights reserved.



BAUHN®

Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





Repair and Refurbished Goods or Parts Notice

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 002 534 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO Box 132, Frenchs Forest NSW 1640
Telephone: 1300 002 534 (Aust) - Fax: (02) 8977 3765
Tempo Help Desk: 1300 002 534 (Aust)
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)
Email: tempo.org/support

Notes

Notes

Notes

Online support

Visit bauhn.com.au for software updates to keep your soundbar up-to-date, as well as the latest User Manual for information on the updated features.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 002 534.

ALDI guarantees that our products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Please read the manual

It will help you get the best out of your product.

Still have questions?

Call After Sales Support

1300 002 534

Or visit tempo.org/support

AFTER SALES SUPPORT



1300 002 534



tempo.org/support

MODEL: ADDSB-0122 PRODUCT CODE: 708016 01/2022