 
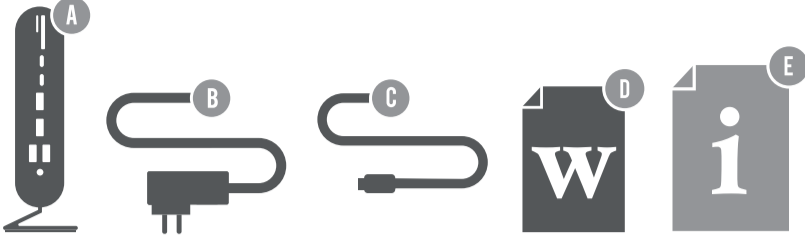 


1 Have you got everything?

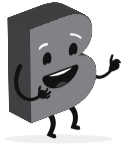 


A. 16 in 1 Docking Station
B. Power Adaptor
C. USB-C to USB-C Cable

D. Warranty Certificate
E. User Guide

Product Overview

1. USB-C PD port (100W Max)
2. USB-C PC port
3. HDMI 1 output port (supports up to 4K@30Hz resolution, Full HD@60Hz resolution)
4. HDMI 2 + DisplayPort (DP) output port (supports up to 4K@30Hz resolution, Full HD@60Hz resolution)
5. VGA output port (supports Full HD@60Hz resolution)
6. LAN port (10/100/1000M)
7. DC IN port
8. TF/Micro SD card slot (supports up to 1TB)
9. SD card slot (supports up to 1TB)
10. USB-C ports
11. USB 3.0 ports
12. USB 2.0 ports
13. Earphone output port
14. Power LED indicator

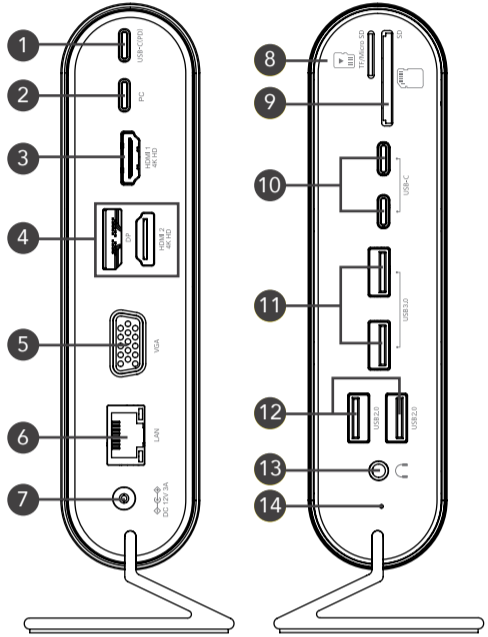

3 Setup

- Connect the supplied power adaptor to the DC IN port of the device and the other end to a power outlet.
- The power LED indicator will light up blue.
- Connect the supplied USB-C to USB-C cable to the USB-C PC port on the device and the other end to your PC/laptop.
- Connect an external device to the desired port using the appropriate cable.
- Connect a PD charger (not included) to the USB-C PD port to charge your device. Supports up to 100W. The PC output power will be 8W less than the PD input port.
- Note: to avoid data loss, do not connect the device to or disconnect from the power adaptor during data transfer.

Detect a Display

- If connected to another display and it is not showing in settings, please refer to the below.

For Windows

- Select Start > Settings > System > Display > Multiple Displays > Detect

For MacOS

- Select Apple > System Preferences > Displays.
- Select "Detect Display" (you may need to press the Option button)

Troubleshooting

Power LED indicator does not light up

- Ensure the supplied power adaptor is securely connected to the DC IN port of the device and the other end to a power outlet.

No output from the USB/USB-C ports

- Check that the USB/USB-C cable is connected securely to the USB/USB-C port and/or try a different USB port.
- Ensure the power adaptor is securely connected to the DC IN port of the device and the other to a power outlet.

No display output

- Ensure the device supports the video output.

No output for HDMI 2 and DP output ports

- The HDMI 2 and DP output ports can only connect to 1 display device. Please unplug one device if both ports are plugged in.

HDMI or DP output ports cannot display 4K resolution

- If the VGA output is connected to a display, the HDMI and DP output ports will sync with the VGA output which supports FHD resolution.

Device cannot charge

- Please check that the PD charger (not included) is securely connected to the USB-C PD port securely and the power outlet is turned on.
- The PC output power will be 8W less than the PD input. Please try another PD charger.
- Check that the device supports PD charging.



Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible. Call our **After Sales Support** on **1300 002 534**.
Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

Enjoy using your device!

Well done, you made it. Now sit back and relax... your device is automatically covered by a 1-year warranty. How nice!





Specifications

AC adaptor input	AC 100-240V, 50Hz, 1.0A
AC adaptor output	12VDC, 3A
HDMI/DP output	Supports up to 4K (3840x2160@30Hz), Full HD (1920 x 1080@60Hz)
VGA output	Supports up to Full HD (1920x1080@60Hz)
PD Input	100W Max.
PC Output	92W Max. (8W less than PD input)
USB 3.0 output	5VDC, 1.5A Max.
USB 2.0 output	5VDC, 0.5A Max.
Card reader	Supports up to 1TB
Weight	400g (approx)
Dimensions (W x H x D)	90 x 170 x 55mm

System Compatibility: Windows 10,8,7, Vista, Mac OS X 10.6 or higher version, Linux 2.6.14 or higher version. To view the full list of compatibility please visit bauhn.com.au/16-in-1-docking-station-02feb/

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

Electrical Safety and Cord Handling

- **Voltage:** Before installing this product, make sure your outlet voltage corresponds to the voltage stated on the products rating label.
- **Protect from moisture:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture; do not use it anywhere near water; do not touch the power plug with wet hands.
- **Power outlet:** Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation.
- **Disconnect:** Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- **Power plug:** Make sure the plug is properly installed before inserting it fully into the outlet. A loose or improperly inserted power plug may cause a fire.
- **Protect the cord:** Do not bend, twist or kink the power cord excessively. Do not allow anything to rest on or roll over the power cord. Doing so may cause a fire or an electric shock. Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- **Damage:** Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- **Disconnect:** Always grasp the plug when disconnecting the power cord. Pulling the cord can damage the internal wire and may cause a fire.
- **Terminals:** Terminals are HAZARDOUS LIVE and the external wiring connected to these terminals requires installation by an instructed person or the use of ready-made leads or cords.
- **Lightning storms:** Unplug this product during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.

Usage Conditions and Restrictions

- **Adjustments:** Follow the instructions in this user guide when installing and adjusting the product. Only adjust those controls that are covered in this user guide as improper adjustment of other controls may result in damage. If this happens, unplug the product and have it serviced by appropriately qualified personnel, or phone the after sales support line for advice.
- **Ventilation:** Do not cover the ventilation openings with items such as newspapers, tablecloths, curtains etc. as this could impede ventilation.
- **Smoke or odour:** If you notice any unusual odours or smoke around the product, immediately disconnect the product from the outlet and contact the service centre. Failure to do so may result in fire or electric shock.
- **When not in use:** When not using the product for long periods of time, disconnect the power cord from the wall outlet. Dust could accumulate over time on the product and cause it to generate heat and ignite, or deteriorate insulation, which in turn may result in an electrical fire.

- **Moving:** When moving the product, be sure to turn it off and unplug it from the wall outlet. Moving the product with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.
- **Packaging:** This product has been packaged to protect it against transportation damage. Unpack the product and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the product when it is not in use.

Installation and Location

- **Location:** Make sure the location for the product is well ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drips or splashes and protected from excessive dust or grease.
- **Wall-mounting:** We assume no liability for any eventual damage to the product or injury to yourself if you mount the product on your own.
- **Heat:** Do not place the product near heat sources (eg. radiators, stoves, electrical equipment, amplifiers).
- **Water:** Do not place containers with liquids (eg. vases) or with small metallic objects on top of the product. If liquid enters the product it may result in short-circuit, fire or electric shock.
- **Fire or explosion:** Do not use or store flammable or combustible materials near the product. Doing so may result in fire or explosion. Do not place any naked flame sources (eg. lit candles, cigarettes) on the product.
- **Ventilation:** Install the product at a minimum 10cm distance around all sides from a wall or unit to ensure sufficient ventilation. If the temperature inside the product rises, it may result in fire.
- **Climate:** If moving the product from one location to another, for example from a cold environment to a warm one, allow sufficient time for the product to acclimatise to the new location before switching on. In tropical climates keep the air surrounding the product sufficiently dry to avoid condensation.
- **Usage restriction:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the product by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the product.

Cleaning and Maintenance

- **Unplug:** To reduce the risk of fire and electric shock, unplug the product before cleaning it.
- **Cleaning:** Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.
- **Repair:** If the product requires repair, contact the after sales support line; never disassemble or modify the product or attempt to service it yourself.
- **Service:** Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, when the product has been exposed to rain or moisture, does not operate normally, or has been dropped.