

1


Have you got everything?



A. Ergonomic Keyboard
B. AA Activ Energy Batteries (2)
C. User Guide
D. Warranty Certificate

2

Product Overview

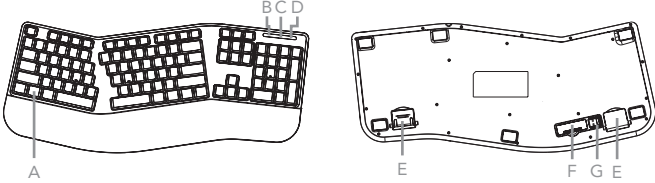

A. Windows key
B. Num lock indicator
C. Caps lock indicator
D. Low battery indicator
E. Keyboard scaffold
F. Battery compartment
G. USB receiver

3

Operation

Connect with the USB receiver

- Open the battery compartment and insert the supplied AA Activ Energy batteries.
- Remove the sticker on the USB receiver and take it out from underneath the keyboard.
- Connect the USB receiver to your computer's USB port.
- Note: when not in use, the keyboard will automatically power off.
- When the low battery indicator lights up on the keyboard, please replace the batteries.

Troubleshooting

Cannot connect with USB receiver

- Ensure they keyboard is on.
- Try a different USB port on your computer

Keyboard not working

- Replace the keyboard's batteries.

Specifications


Connectivity	2.4GHz wireless
Number of functional keys	104
Dimensions	500 x 212 x 35.2mm
Weight	1.1kg

Give us a call

What? You mean this User Guide didn't have ALL the answers?
Speak to us!
We'd love to help you get up and running as quickly as possible.
Call our **After Sales Support** on **1300 002 534**.
Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

Enjoy using your product!

Well done, you made it.
Now sit back and relax... your product is automatically covered by a 1-year warranty.
How nice!



General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

Installation and Location

Location: Make sure the location for the product is well ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drips or splashes and protected from excessive dust or grease.

Heat: Do not place the product set near heat sources (eg. radiators, stoves, electrical equipment, amplifiers).

Water: Do not place containers with liquids (eg. vases) or with small metallic objects on top of the product.

Fire: Do not place any naked flame sources (eg. lit candles, cigarettes) on the product.

Batteries: When removing or replacing batteries, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

Children: Supervise young children to ensure they do not play with the product.

Cleaning and Maintenance

Unplug or turn off the product before cleaning it.

Cleaning: Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.

Recycling and disposal

The National Television and Computer Recycling Scheme was established in 2011 to provide Australian households and small businesses with access to free industry-funded collection and recycling services for televisions and computers, including printers, computer parts and peripherals.

Please dispose of the product responsibly by taking it to a recycling drop-off point. Planet Ark maintains a database of free television and computer drop-off points. Search for recycling near you at:

<https://recyclingnearyou.com.au/ewastescheme/>