 






1 Have you got everything?

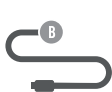

- A. Ergonomic Mouse
- B. USB-C Charging Cable
- C. User Guide
- D. Warranty Certificate

2 Product Overview

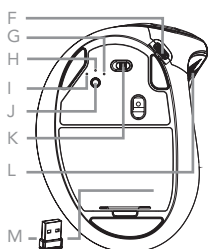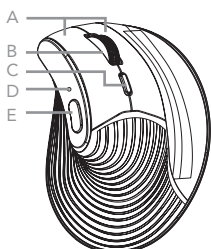

- A. Left & right buttons
- B. Scroll wheel
- C. DPI button
- D. DPI/channel/charging indicator
- E. Desktop button
- F. USB-C charging port
- G. Bluetooth® 2 indicator
- H. Bluetooth® 1 indicator
- I. USB indicator
- J. Mode button
- K. On/off switch
- L. Forward/Back button
- M. USB receiver (under case)

3 Operation

Connect with the USB receiver

- Slide the On/off switch to turn the mouse on.
- Open the case underneath the mouse and take out the USB receiver.
- Connect the USB receiver to your computer's USB port.
- Press the mode button until on USB mode, the USB indicator will flash red.

Connect with Bluetooth®

- Slide the On/off switch to turn the mouse on.
- Press the mode button until on Bluetooth® mode, the Bluetooth® 1 and 2 indicators will flash blue and green slowly.
- Press and hold the mode button until the Bluetooth® 1 and 2 indicators flashes rapidly, indicating it is ready to pair.

For Windows

- Open Bluetooth® devices on your computer and select "add or remove Bluetooth® devices".
- Search for AEM-0222 and select "pair".

For MacOS

- Open System preferences on your computer and select "Bluetooth®".
- Search for AEM-0222 and select "pair".

Charging

- Connect the supplied USB-C charging cable to the USB-C charging port of the mouse and the other end to your power source. While charging, the DPI/channel/charging indicator will light up red.
- Once fully charged (approximately 6 hours), the indicator will light up green.

Troubleshooting



Cannot connect with USB receiver

- Ensure the mouse is on.
- Ensure you are on USB mode, the USB indicator will flash red.
- Try a different USB port on your computer.

Cannot connect via Bluetooth®

- Ensure you are on Bluetooth® mode, the Bluetooth® 1 and 2 indicators will flash blue and green rapidly.
- Ensure your computer's Bluetooth® is turned on.

Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible.

Call our **After Sales Support** on **1300 002 534**.

Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

Enjoy using your product!

Well done, you made it.
Now sit back and relax... your product is automatically covered by a 1-year warranty.
How nice!





Specifications

Connectivity	2.4GHz wireless Bluetooth®
Resolution	1000/1600/2400 DPI
Working distance	10m
Power Input	5VDC, 200mA
Battery	3.7V, 500mAh
Dimensions	112 x 80 x 78mm
Weight	126g (approx.)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

Installation and Location

Location: Make sure the location for the product is well ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drips or splashes and protected from excessive dust or grease.

Heat: Do not place the product set near heat sources (eg. radiators, stoves, electrical equipment, amplifiers).

Water: Do not place containers with liquids (eg. vases) or with small metallic objects on top of the product.

Fire: Do not place any naked flame sources (eg. lit candles, cigarettes) on the product.

Batteries: When removing or replacing batteries, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

Children: Supervise young children to ensure they do not play with the product.

Cleaning and Maintenance

Unplug or turn off the product before cleaning it.

Cleaning: Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.

Recycling and disposal

The National Television and Computer Recycling Scheme was established in 2011 to provide Australian households and small businesses with access to free industry-funded collection and recycling services for televisions and computers, including printers, computer parts and peripherals.

Please dispose of the product responsibly by taking it to a recycling drop-off point. Planet Ark maintains a database of free television and computer drop-off points. Search for recycling near you at:

<https://recyclingnearyou.com.au/ewastescheme/>