 





## 1 Have you got everything?



- A. Foldable Keyboard
- B. USB Cable
- C. User Guide
- D. Warranty Certificate

## Product Overview

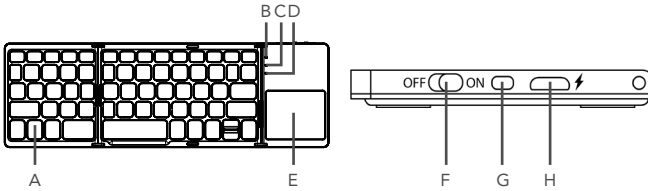

- A. Function key
- B. Battery LED indicator
- C. Bluetooth LED indicator
- D. Caps lock indicator
- E. Touch pad
- F. Power switch
- G. Pair button
- H. USB charging port

## 3 Operation

### Connect via Bluetooth®

- Slide the power switch to on to turn the keyboard on. The Bluetooth LED indicator will light up blue for 3 seconds. Press the Pair button and the LED indicator will flash blue, indicating it is ready to pair.
- Select the correct Operating System (OS) by referring to below:
- For iOS: Press the Fn and Q button
- For Android: Press the Fn and W button
- For Windows: Press the Fn and E button
- On your device, look for "BAUHN AFKBT-0422" and connect.
- Once connection is successful, the LED indicator will stop flashing and turn off.

### Charging the Keyboard

- When the keyboard is low on battery, the battery LED indicator will flash red indicating it needs to be charged.
- Connect the supplied USB cable to the USB charging port on the keyboard and the other end to a power source. The battery LED indicator will light up red during charging, and will turn off once fully charged.

### Touchpad functions

- Note: touchpad functions are not compatible with iOS and Android operating systems.



Finger click:  
Left mouse



Two Finger click:  
Right mouse



Two finger slide:  
Mouse wheel



Two finger stretch:  
Zoom in/out

## Troubleshooting

Cannot connect to Bluetooth

- Select the correct Operating System (OS)
- The keyboard will automatically go into standby mode if Bluetooth is not paired. Press the Pair button to connect.
- Check that the device's Bluetooth is on.

Keyboard not working

- Check that the power switch is on.
- The keyboard will automatically go into standby mode after 10 minutes of no operation. Press any key and the keyboard will turn back on.
- Slide the power switch to Off and slide back to On to restart the keyboard.
- Check that the device's Bluetooth is on and paired with the keyboard.



## Specifications

Power Input	5VDC 1A
Battery	3.7V, 140mAh
Bluetooth	5.1
Bluetooth connection distance	<10m
Number of keys	64
Dimensions	304 x 98 x 8mm (when open) 152.5 x 98 x 14mm (when folded)
Weight	193g

## Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us!  
We'd love to help you get up and running as quickly as possible.  
Call our **After Sales Support** on **1300 002 534**.  
Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

## General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

### Installation and Location

**Location:** Make sure the location for the product is well ventilated, and away from damp and cold, protected from overheating and away from direct sunlight, away from moisture drips or splashes and protected from excessive dust or grease.

**Heat:** Do not place the product set near heat sources (eg. radiators, stoves, electrical equipment, amplifiers).

**Water:** Do not place containers with liquids (eg. vases) or with small metallic objects on top of the product.

**Fire:** Do not place any naked flame sources (eg. lit candles, cigarettes) on the product.

**Batteries:** When removing or replacing batteries, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

**Children:** Supervise young children to ensure they do not play with the product.

### Cleaning and Maintenance

Unplug or turn off the product before cleaning it.

**Cleaning:** Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.

### Recycling and disposal

The National Television and Computer Recycling Scheme was established in 2011 to provide Australian households and small businesses with access to free industry-funded collection and recycling services for televisions and computers, including printers, computer parts and peripherals.

Please dispose of the product responsibly by taking it to a recycling drop-off point. Planet Ark maintains a database of free television and computer drop-off points. Search for recycling near you at:  
<https://recyclingnearyou.com.au/ewastescheme/>

GENERAL SAFETY WARNINGS 

## Enjoy using your product!

Well done, you made it.  
Now sit back and relax... your product is automatically covered by a 1-year warranty.  
How nice!

