



Mini Hi-Fi System with Bluetooth®

Model Number: AMHFB-0319

INSTRUCTION MANUAL

AFTER SALES SUPPORT

 (AUS) 1300 886 649

 www.tempo.org

Model: AMHFB-0319 Product Code: 7311 03/2019



Welcome

Congratulations on choosing to buy a BAUHN® product.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Version 1.0
Date 12/2018

Contents

Welcome	2
Warranty Details	4
General Safety Instructions	5
Remote Control	8
Product Overview	11
Getting Started	12
Instructions	13
Troubleshooting	18
Specifications	20
Repair and Refurbished Goods or Parts Notice	21



Mini Hi-Fi System with Bluetooth®

Warranty Details

Register your purchase at www.aldi.com.au/en/about-aldi/product-registration to stay updated with important product information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.

This product complies with Australian Safety standard AS/NZS 60065 to ensure the safety of the product.



The product is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require connection to electrical earth.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

Important Warnings and Cautions



To reduce the risk of electric shock, do not remove the cover (or back). This unit contains no user-serviceable parts inside. Refer all servicing to qualified service personnel only.



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert you to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equi-lateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This unit employs an optical laser beam system in the disc mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful to the human eye.

This is a Class-1 laser product. Use of controls, adjustments or procedures other than those specified herein may result in hazardous laser light beam exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel. The laser mechanism in the unit corresponds to the stylus (needle) of a record player. Although this product uses a laser pick-up lens, it is completely safe when operated according to directions.

General Safety Instructions (Cont.)

Electrical Safety and Cord Handling

- **Protect from moisture:** Do not expose this equipment, the power supply cord and plug to rain or moisture. Do not use it anywhere near water or where water splashes or drips, such as a bathroom or near a swimming pool. Do not touch the power plug with wet hands.
- **Voltage:** Before connecting this equipment to the mains power supply, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- **Mains power connection:** When connecting this equipment to the mains power supply, only use cord and plug supplied. Align the plug properly and insert it fully. Do not overload the power outlet.
- **Damaged cord:** When the power cord is damaged, it must be replaced by the manufacturer or similarly qualified personnel in order to avoid a hazard.
- **Protect the power cord:** Do not let the cord hang over the edge of a table or counter, or touch any hot surface. Do not allow anything to rest on or roll over the power cord. Run any cords so no one steps on or trips over them. Do not run the cord near heat-producing appliances such as radiators or stoves.
- **Disconnect:** Switch off and unplug the unit during lightning storms, and when it is not going to be used for a while. Grasp the plug, not the cord, when disconnecting.
- **Disconnect device:** This unit must be unplugged for complete disconnection from the mains power supply. Ensure the mains plug remains readily accessible for disconnection.

Usage Conditions and Restrictions

- **Instructions:** Follow the instructions in this manual when installing and adjusting this equipment. Only adjust those controls that are covered in this instruction manual, as improper adjustment of other controls may result in damage. If this happens, unplug the equipment and have it serviced by appropriately qualified personnel.
- **Location:** When using the equipment, make sure to place it:
 - In a well ventilated area, keeping a clearance of at least 20cm above and 5cm on each side of the unit to ensure proper ventilation.
 - Away from heat sources such as radiators, heat registers, stoves or other equipment (including amplifiers) that produce heat.
 - Away from areas with high temperatures, high humidity or direct sunlight.
 - Away from excess dirt and dust.
 - Away from strong magnetic fields.
- **Accessories:** Only use attachments/accessories specified by the manufacturer or sold with the apparatus. Use of the soundbar with accessories that are not recommended in this manual may cause injury or damage, and will void the warranty.
- **Usage restriction:** The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the equipment. Close supervision is always necessary when an appliance is used by or near children.
- **Protect the equipment:** Prevent metal objects falling onto the equipment. Do not place heavy objects on top of the equipment or step on it. Do not place objects filled with water (such as vases), or naked flame sources (such as candles), on or near

General Safety Instructions (Cont.)

the equipment. If liquid or metal parts enter the system, unplug the power cable immediately and call our After Sales Support centre to arrange a service before further use.

- **Ventilation:** Openings on the cabinet are provided for ventilation and to protect the unit from overheating. To ensure proper operation, do not cover them with things such as newspapers, tablecloths, curtains etc.
- **Climate:** If moving the apparatus from one location to another, for example from a cold environment to a warm one, allow sufficient time for the apparatus to acclimatise to the new location before switching on. In tropical climates, keep the air surrounding the unit sufficiently dry to avoid condensation forming.
- **Transporting:** Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use.
- **Storage:** When the soundbar is not in use, disconnect it from the power source and store in a cool, dry and well ventilated location out of direct sunlight. Ensure that it is not subject to humidity.
- **Cleaning:** Unplug the equipment from the power outlet before cleaning. Clean the equipment only with a clean, dry or slightly damp cloth. Do not use liquid or aerosol cleaners or volatile solvents.

Before First Use

- **Packaging:** Unpack the product and remove protective material. Keep all packaging materials until you have made sure your new Mini Hi-Fi System is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- **Hazard:** Inspect the cord and plug for damage. Do not use the product if the cord or plug have been damaged or are not working properly.
- **Voltage:** Do not connect the unit to the mains power supply until you have made sure that your outlet voltage and circuit frequency correspond to the voltage stated on the product rating label and before all other connections have been made.
- **Vents:** Do not cover any vents and make sure to keep a space of several centimetres around the unit for ventilation.

Service or Repair


- **Service:** Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, it has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **Repair:** If the unit requires repair, contact the After Sales Support line; never disassemble or modify the unit or attempt to service it yourself.
- **Liability:** We accept no liability for any damage caused by non-compliance with these instructions or mishandling of the equipment.

WARNING!

Do not expose batteries to excessive heat such as sunshine, fire or sources of heat.

Remote Control

- 1 **Power/Standby:** Power on/ Standby the unit.
- 2 **USB:** Switch to USB mode.
- 3 **MEMORY:** Save FM radio stations as presets.
- 4 **REPEAT:** Press once to repeat a track; press twice to repeat an album; press again to cancel repeat.
- 5 **◀◀ REWIND:** Rewind playback.
- 6 **A-B:** Press to repeat from A to B. Press once to set the start point A, then press again to set the end point B. Playback will repeat from A to B. Press again to cancel the A-B function.
- 7 **Number Keys:** enter numbers or select a track. For a number higher than 10, for example 28, you would press the [10+] button twice and then press the [8].
- 8 **PROGRAM:** You can program specific tracks to play (CD or USB mode).
Operation steps: Press the **■ STOP** button if music is playing. Press the **PROGRAM** button; the 7-segment LED display will show "P1 _ _". Input the track number using the number keys on the remote, then press the **PROGRAM** button to confirm and the display will show P2. After you set up the tracks, press the **▶▶ PLAY** button to start playing the selected tracks.

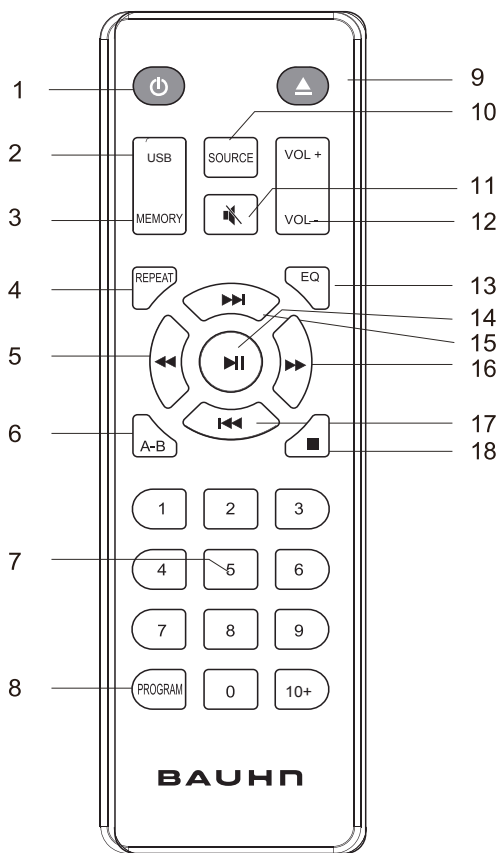

Remote Control (Cont.)

To cancel the Program, press the "Stop" once to stop the programmed play. Press the "Stop" again to cancel the Program. LED display will display "PRO CAN".

- 9 ▲ OPEN: Open the disc tray.
- 10 SOURCE: Select the playback input source. (To enter USB mode, press the USB button on the remote.)
- 11 🔊 MUTE: Mute the playback (the LED will display VOL 00 when muted).
- 12 VOL+ / VOL-: Increase or decrease the volume.
- 13 EQ: Change the equalizer mode (EQ is only available in CD and USB mode).
- 14 ▶|| PLAY: Play/Pause playback.
- 15 ►► NEXT: Skip to the next track.
- 16 ►► FAST FORWARD: Fast forward playback.
- 17 ◀◀ PREVIOUS: Return to the previous track.
- 18 ■ STOP: Stop playback.

Remote Control (Cont.)

Using the Remote Control


Inserting Batteries

Install the batteries as shown on the right.

- Open the cover at the back of the remote control unit completely.
- Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place so they can power the remote control unit.
- Put the cover back into position.

Battery Service Life

- The service life of batteries depends on usage and environmental conditions. They should normally last for about one year.
- If the remote control fails to work even when it is operated near the unit, replace the batteries.

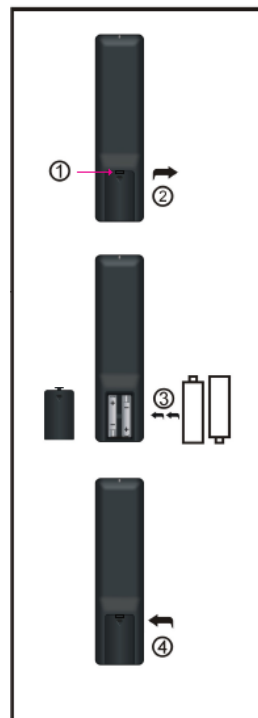


Precautions When Using Batteries


- Do not use old and new batteries together.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Note that there are chargeable and non-chargeable batteries. Do not attempt to charge non-chargeable batteries.
- Remove the batteries from the remote control unit if you do not intend to use the unit for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to fire or other sources of extreme heat.

Product Overview

Front panel

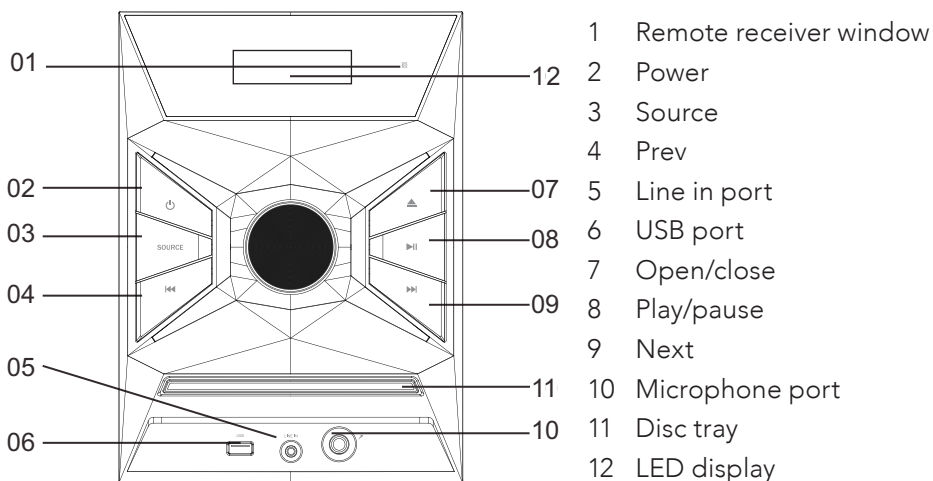

Rear panel

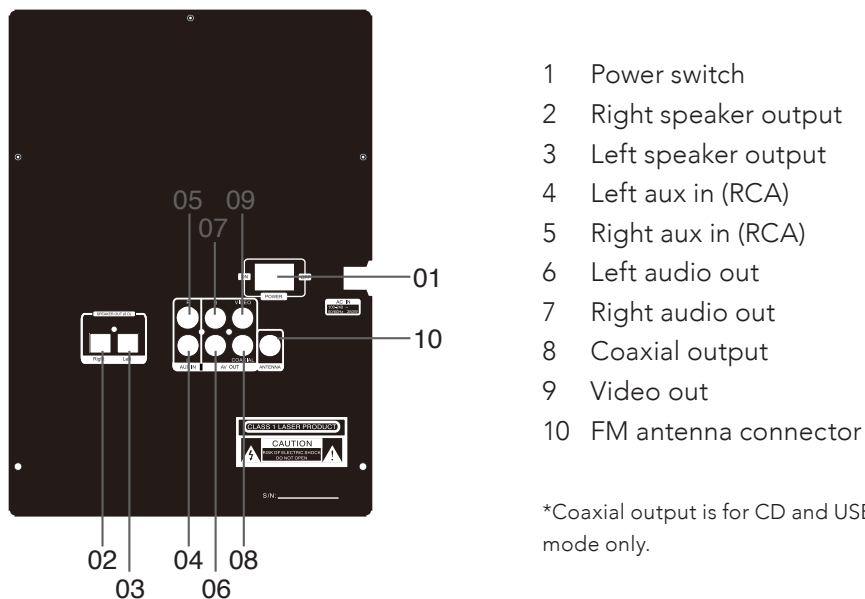

Getting Started

Connecting the Speakers

- Connect the speaker wires to the speaker terminals located on the back of the unit.

Power

- Connect the power cord to a power outlet then turn the power switch on the back of the unit to ON. The unit will go into Standby mode.
- Press the POWER button on the front panel. The LED display should now be backlit and the system is ready to play music.

Volume Control

- Press the VOL+/- buttons on the remote control or turn the master volume control knob to adjust the volume level.
- Press the MUTE button on the remote to mute the sound; press it again to restore the sound.

NOTE: the speaker LED will light up when the volume is set over 26; this is also affected by the music itself. The LED light will display differently for various music content and audio levels.

Instructions

Radio Operation

For Best Reception

Make sure the wire is totally unravelled and the antenna is fully extended in the straight upwards position.

Auto Tuning

- While the unit switched ON, press the SOURCE button to switch to FM mode. The LED display will show the current frequency.
- Press the ►|| button once to start auto search. The unit will start searching for stations and will save all the available stations. When the unit has finished searching, it will play the first station. Press the ►|| / ||◄ button to switch between stations.
- To manually tune stations, press the ◄◄ / ►► buttons on the remote to adjust the frequency in 0.1 MHz increments. Then you can use the MEMORY button on the remote to save the station.

NOTE: You can use the number keys on the remote to select a channel. To enter a two digit channel number, press the first digit then quickly press the second digit. For example, to select channel 18, press 1 then press 8.

Instructions (Cont.)

Playing CDs

- Press the SOURCE button repeatedly to switch the unit to DISC mode; the LED display will show 'LOAD'.
- Press the OPEN/CLOSE button to open the disc tray. Place the CD into the tray, then press the OPEN/CLOSE button to close the tray and it will load the disc.
- Once the disc is loaded, press the Play/Pause button to begin playback.

NOTE: The Hi-Fi system can play normal CD discs and MP3 CD discs.

Play/Pause Mode (▶||)

- To pause playback, press the ▶|| PLAY/PAUSE button once and playback will pause with the || symbol on the display. Press the ▶|| button again to resume normal playback.

Stop Mode (■)

- Press the STOP button anytime during play/pause mode to stop.

Skip Mode (▶▶ / ◀◀)

- During play/pause mode, press the NEXT button to go to the next track.
- During play/pause mode, press the PREVIOUS button to go to the previous track.

Note: In CD and USB modes, you can use the number keys on the remote to select tracks directly. To select track numbers above 10, use the 10+ key. For example, to select track 28, press the 10+ key twice, then press 8.

MP3 Track Format Requirements

Playback performance of MP3 discs varies depending on the quality of the recording disc and the method of recording. Also, because of the different format, the searching lead-time for an MP3-CD is longer than for a normal audio CD.

Repeat Mode (for both audio CDs and MP3 discs)

Press the REPEAT button on the remote control before or during playback to select from the following modes: Repeat One / Repeat All / Off.


Instructions (Cont.)

USB Media Playback

The system is able to decode and play back MP3 files stored in the memory media connected to the USB port.

Playback of MP3 Files

- Insert your storage media (as illustrated on the right).
- Make sure a FAT32 formatted USB device is fully inserted into the USB port.
- Connecting the USB device upside down could damage the Hi-Fi System or the USB device. Make sure the direction is correct before insertion.
- Press the USB button on the remote to switch to USB mode. The LED display will show 'LOAD'.
- Press the Play/Pause button to start playing the songs.
- Playback functions for MP3 files are the same as for playing a CD/MP3-CD, as described on the previous pages.

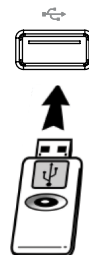

NOTE:

- Some MP3 files may not work properly when connected to this Mini Hi-Fi System via the USB socket. This is not a malfunction of the system but due to variances in MP3 encoding formats.
- The USB port on this Mini Hi-Fi System does not support connection with a USB extension cable and is not designed for direct communication with a computer. Do not use the USB port to charge an external device.
- If you want to enter USB mode without using the remote, press the SOURCE button on the unit to enter CD mode. If you do not insert a CD, the unit will go into USB mode.

Removing a USB Device

- To remove a USB device, turn off the power or set the SOURCE mode to either AUX IN, BT or FM.
- Unplug the USB device by pulling it safely out of the port.

Instructions (Cont.)

Streaming Audio via Bluetooth® Wireless Technology

- Press the SOURCE button on the remote control repeatedly to select 'BT' mode. You will see 'BT' appear on the display.
- On the mobile device, enable *Bluetooth* mode, and then search for new devices. (Please refer to the instruction manual of your mobile device for how to operate *Bluetooth* mode.)
- 'BAUHN AMHFB-0319' should appear in the list on your mobile phone - select this for pairing. Some mobile phones require entering a code on initial pairing. If required, enter the default password '0000'.
- When pairing is successful, you will hear a confirmation sound.
- Now you can listen to music files on your mobile device through the Mini Hi-Fi system. Use the ►||, ►► and ◀◀ buttons on the front panel, remote control or your mobile device to select tracks and control playback.
- To remove the pairing, disconnect or unpair from your mobile phone or press and hold the ►|| button on the remote or the unit for 2 seconds.

Auxiliary Audio Device (AUX-IN) Operation

- Press the SOURCE button on the unit or the remote control repeatedly to select 'AUX' mode. Audio devices such as MP3 players and mobile phones can be connected to the unit via the AUX IN socket with a 3.5mm to RCA audio cable (not included).
- Connect the RCA plug to the AUX IN socket at the back of the unit and the other end to the headphone output socket of your audio device.
- Ensure the headphone volume on your audio device is turned up, then adjust the volume using the VOLUME CONTROL knob on the front panel.

NOTE: Playback cannot be controlled from the front panel when using AUX IN mode and must be performed using the controls on your connected audio device.

Instructions (Cont.)

Microphone (MIC) Operation


- Press the SOURCE button on the remote control repeatedly to select 'CD' mode.
- Connect the 6.35mm jack of your microphone into the MIC socket at the front of the Mini Hi-Fi System.
- Turn the VOLUME CONTROL knob to adjust to the desired volume level.

NOTE: The microphone function only works in CD mode.

EQ Function

This unit provides seven different sound modes to enhance your listening experience.

- Press the EQ button on the remote repeatedly to select the desired effect from the following sequence:

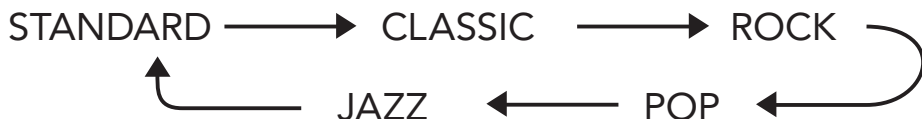

NOTE: The EQ function is available for CD and USB mode only.

Troubleshooting

Problem	Solution
No power	<ul style="list-style-type: none"> The power cord is not plugged in. Plug in the power cord. Check whether electricity failed. Check the condition by operating other electronic devices.
No sound	<ul style="list-style-type: none"> Check whether the unit is muted or set to the lowest volume; turn up the volume or use the volume knob to adjust the volume; this will un-mute the speaker if it's muted. Check whether you select right SOURCE mode. Press SOURCE button and check the selected function. Check the speaker cables are connected correctly in the back of the main unit, and check whether the speaker cable is damaged unexpectedly.
The unit does not start playing a CD	<ul style="list-style-type: none"> No disc is inserted. Insert a disc. An unplayable disc is inserted. Insert a playable disc. This unit only supports CD and MP3 CD discs - it cannot read VCD/ DVD etc. The disc is dirty. Clean the disc. The disc is scratched or damaged. The disc is inserted upside down. Place the disc with the label or printed side facing upwards.
The unit does not start playing songs on USB	<ul style="list-style-type: none"> Press the Play/Pause button; playback is not automatic when you insert USB drive. Check the music file type. Only MP3 files are supported. Check the file system format of the USB storage device is FAT32 format. USB disc malfunction, make sure to use standard good quality USB drive.

Troubleshooting (Cont.)

Radio stations cannot be tuned in properly or are not clear	<ul style="list-style-type: none">• Make sure the antenna is fully extended to its highest position.• The signal strength of the radio station is too weak. Try to tune to the station manually.• No stations have been preset, or preset stations have been cleared.
The remote control does not work properly	<ul style="list-style-type: none">• The remote control is too far from the unit. Operate the remote control within about 6 metres of the unit. The angle should be within 30 degrees.• There is an obstacle between the remote control and the unit. Remove the obstacle.• The batteries in the remote control are exhausted. Replace the batteries with new ones of the same type.

Responsible disposal of the packaging

The packaging of this product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Specifications

Power	AC 100V-240V 50/60Hz
Remote Control Batteries	AAA x 2
Power Consumption	260W
Weight (whole set)	7.8kg
Dimensions (w x h x d)	Main unit: 190 x 267 x 232 mm Each speaker: 205 x 338 x 213mm
Tuner	
Receiving Bands	FM
Tuning Range	87.5-108 MHz
Bluetooth	
Specification	Bluetooth 4.2 + EDR
USB	
Supported Codec	MP3
Max USB Capacity	32GB
Rated Voltage / Current	DC 5V 500mA
Audio Section	
Speakers	2 x 15W + 2 x 100W
Speaker Impedance	6 ohms

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.



Mini Hi-Fi System with Bluetooth®

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO Box 6056 Frenchs Forest, NSW 2086, Australia

Tempo Help Desk: 1300 886 649 (Aust)

(Operating Hours: Monday-Friday 8:30am-6pm; Saturday 9am-6pm AEST)

Email: info@tempo.org





Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.