




2.0 Premium Bluetooth® Soundbar

with Enhanced Bass

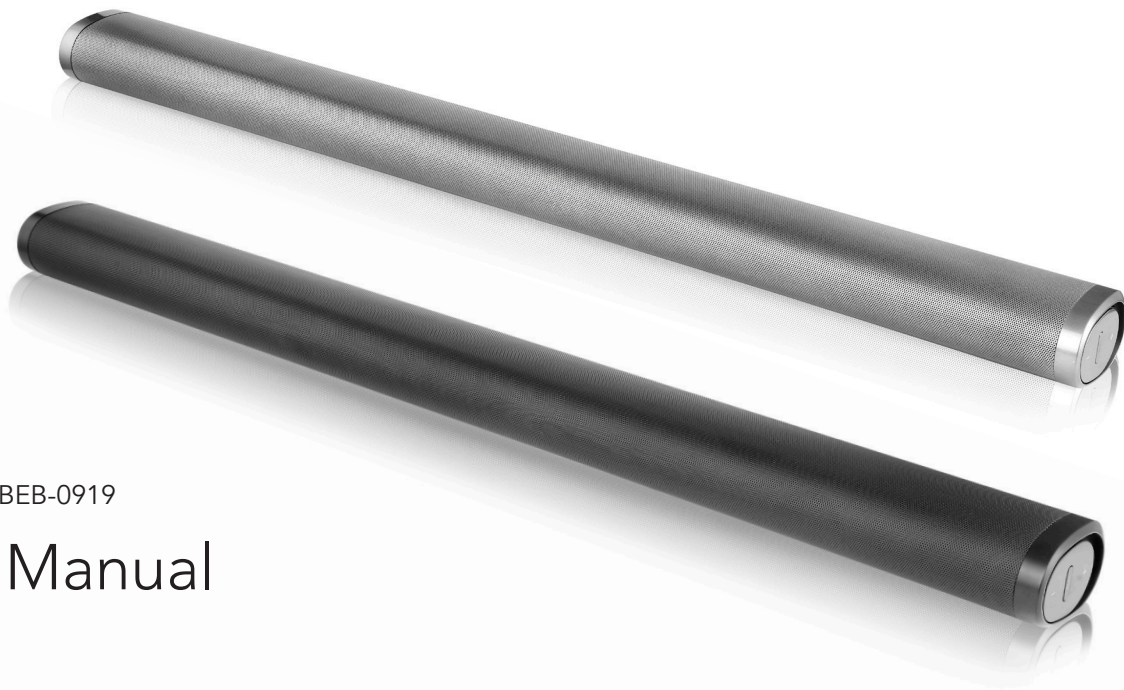

MODEL: ASBEB-0919

User Manual



Welcome

Congratulations on your purchase!


This manual tells you all you need to know about using your new Bauhn® product.

Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents


Welcome	2	Operation	17
Unpack and Prepare	4	General Operation	17
What's in the box	4	Input Modes	17
 Important Tips	5	Bluetooth®	18
Installation	6	Pairing Bluetooth® Devices	18
Wall mounting instructions	8	Bluetooth® Playback	19
Connect to power	10	Troubleshooting	20
Controls and Connections	11	Specifications	22
Get to know your Soundbar	11	Compliance and Responsible Disposal	23
Buttons on the Soundbar	11	Warranty Information	24
Rear Ports on the Soundbar	12	Repair and Refurbished Goods or Parts Notice	25
Remote Control	14		
Setup	14		
Using the Remote Control	15		
Remote overview	16		

Unpack and Prepare

What's in the box

Before setting up your new Soundbar, check you have everything:

- A. Soundbar
- B. Remote Control
- C. 3.5mm AUX Cable
- D. Optical Cable
- E. Installation Kit
- F. AAA Batteries
- G. AC Power Cable
- H. Quick Start Guide
- I. Warranty Certificate
- J. User Manual

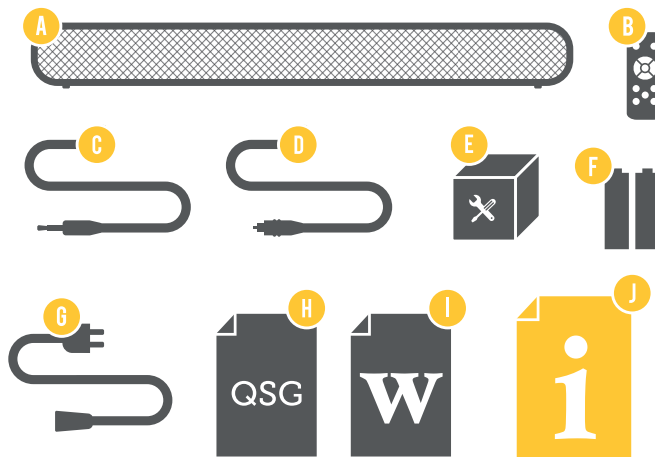

You will need:

- Phillips-head screwdriver and a drill (for wall mount installation)
- HDMI Cable, if you want to set up and use HDMI CEC.
(Otherwise you can use the included optical cable if you don't use HDMI.)


Important Tips

- Place the Soundbar on a level surface.
- Place the Soundbar away from any source that may generate heat or vibrations.
- Make sure there is enough space around the Soundbar for airflow.
- The remote control works up to 6 metres away from the Soundbar.
- Unplug the Soundbar before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- Keep liquid, children and pets away from the Soundbar at all times.




Installation

This soundbar can sit free-standing on a surface, or it can be mounted to a wall.

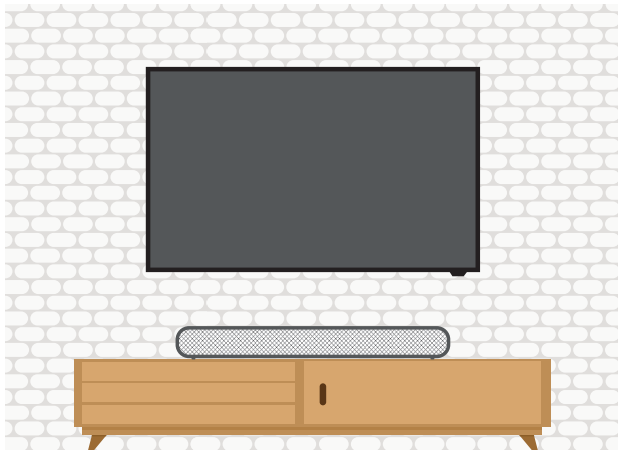

Free-standing

Place on a secure, flat surface. Make sure the soundbar is standing on its rubber pads (on the left and right sides of the soundbar) and no other area of the bottom of soundbar is touching the surface.

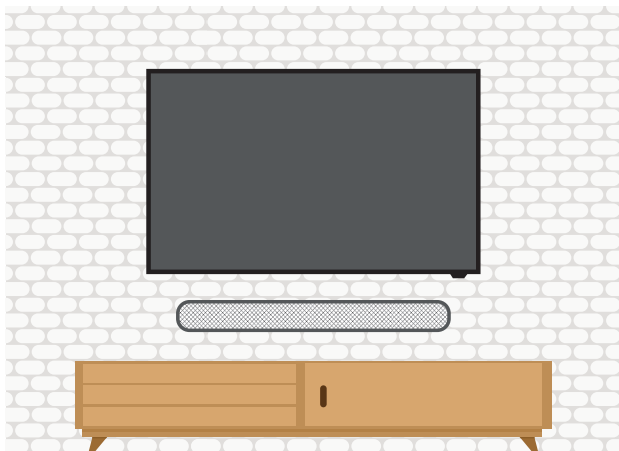

Wall mounted

Wall mounting instructions are on the following pages.



- Wall-mounted installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage! If you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing, which may be hidden inside or behind the wall.
- It is the installer's responsibility to verify and confirm that the wall will safely support the total load of the unit and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Use an electronic stud finder to check the wall type before drilling and mounting.

Wall mounting instructions


1




Fix the supplied wall-mounting brackets (marked with "s") to the bracket fixing holes on the back of the soundbar with the supplied short screws. Affix the brackets as shown in the illustration (left).

2

Use a pencil to make drill hole marks on the wall for the anchors. Make sure the marks are level before drilling. Use a 6mm bit and power drill (not supplied) to drill holes on the marks.

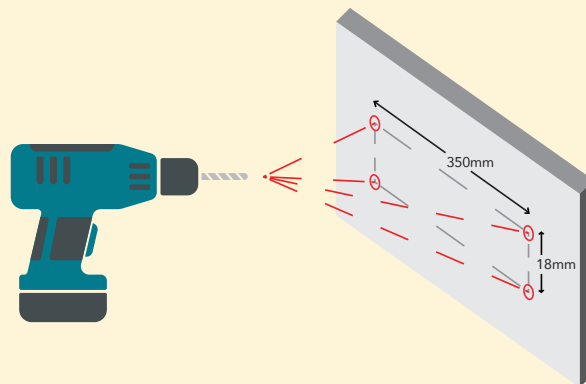


Place the soundbar with wall-mounting brackets (marked with "S") onto the mounting brackets (marked with "W"), which are fixed to the wall. Use the included short screws to tighten them. Make sure the soundbar is attached firmly to the wall.

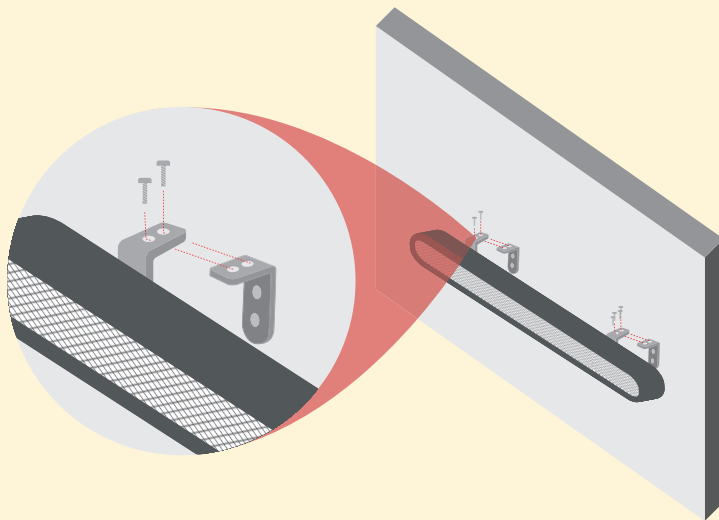

4

3


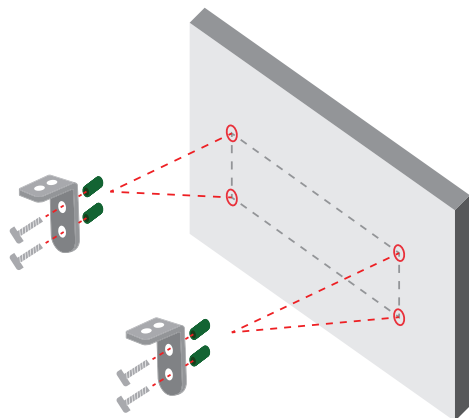


Insert the included plastic anchors into the holes and push in until they are flush with the wall. Secure the supplied metal brackets (marked with "W") to the wall by screwing the included tapping screws into the anchors and tighten until the screw head is fully inserted and flush with the metal bracket.

Connect to power



 
Make sure the soundbar is **switched off** at the power outlet until you have finished connecting your cables.

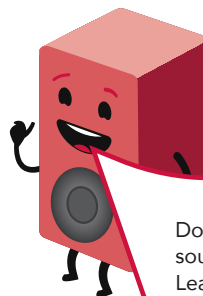


Don't forget to plug in the soundbar to the power outlet. Leave the power switched off until installation is finished.

Controls and Connections


Get to know your Soundbar

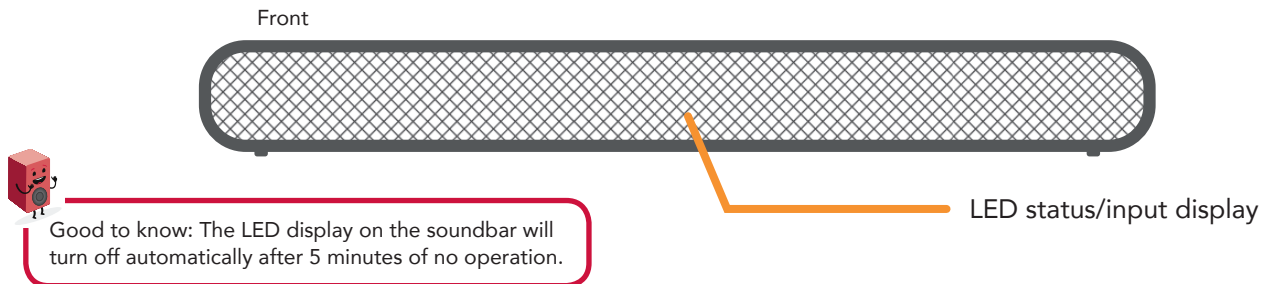

Buttons on the Soundbar

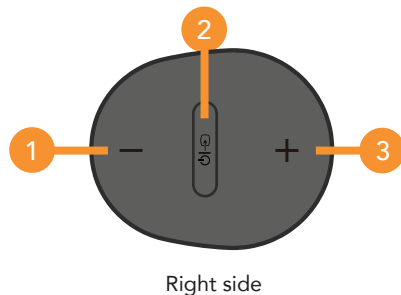

1. **-** : Decrease the volume level.
2. **Power button/Mode**: Press to turn on. Press to select your preferred input source. Press and hold to put in Standby mode.
3. **+** : Increase the volume level.
4. **USB Port** : Insert a USB device for audio playback

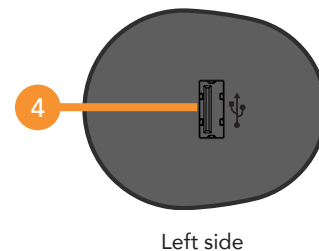











See next page for more info on the connections.



Rear Ports on the Soundbar




1	HDMI (ARC)			SOUND	The ARC (Audio Return Channel) function allows you to send audio input from an ARC-compliant TV to an ARC-compliant audio device (e.g. soundbar) without the need for an additional audio cable connection.
2	Optical			SOUND	Connect an OPTICAL cable (included) to the OPTICAL OUT socket of your device (e.g. TV, DVD player) and the OPTICAL socket on the soundbar.
3	Coaxial			SOUND	Connect a COAXIAL cable (not included) to the COAXIAL OUT socket of your device (e.g. TV, DVD player) and the COAXIAL socket on the soundbar.
4	AUX In			SOUND	Use the supplied 3.5mm to 3.5mm audio cable to connect the headphone socket of the connected audio device, such as a media player, to the AUX socket on the unit.
5	AC In			POWER	Before connecting the AC power cable, ensure you have completed all other connections. Connect the power cable to the soundbar AC IN socket first, then plug in the power cable to the mains supply socket.


Rear Ports on the Soundbar

HDMI (ARC)

To use the ARC function, make sure the soundbar's TO TV (ARC) socket is connected via HDMI cable (not included) to the HDMI (ARC) socket of your ARC compliant TV. Then just use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the connected audio device. In the TV settings menu, turn on the ARC and CEC function (when CEC is turned on, the sound bar will turn on/off automatically when the TV is turned on/off).

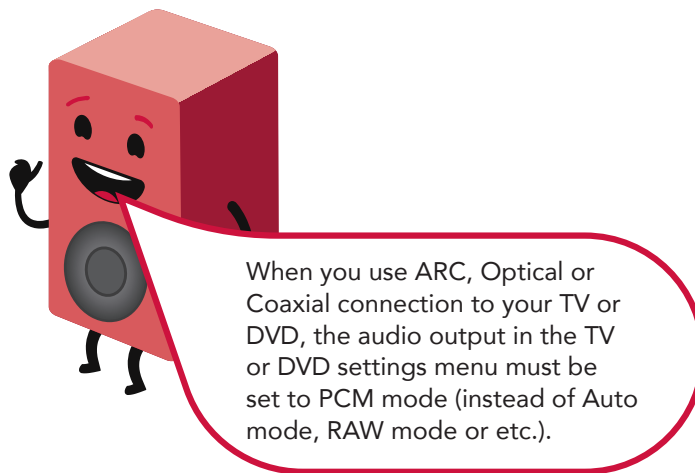

Remote Control

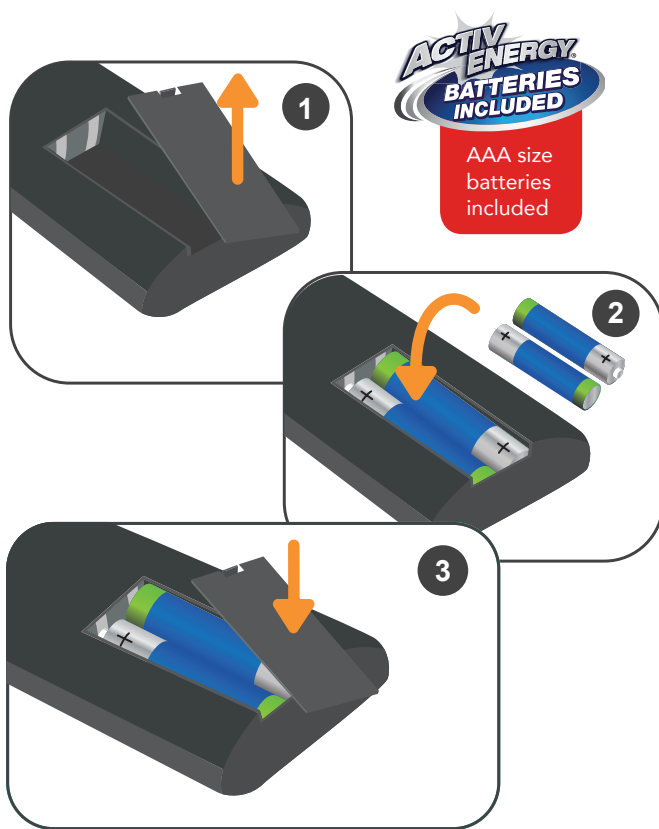

Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.




Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the soundbar. The remote will not operate if its path is blocked.


The remote has a range of up to about 6 metres from the soundbar at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

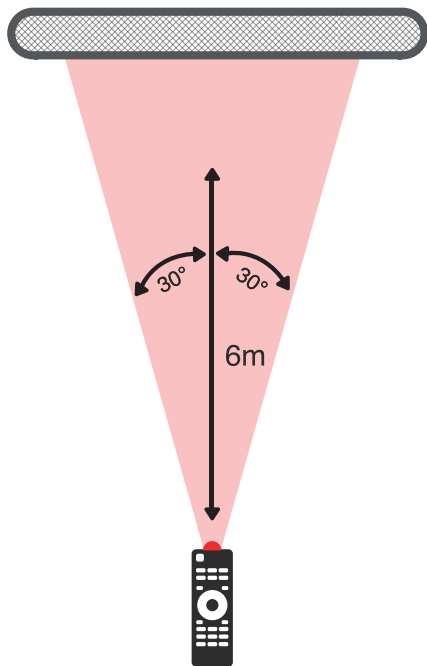

Remote Use


- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.

Remote overview

 **POWER**: Switch the unit to ON or Standby.

MODE: Switch between the input sources.

 : Increase the volume level.


 : Skip to the previous track


 : Decrease the volume level.


TREBLE -: Decrease the treble.

BASS -: Decrease the bass.



 : Mute the sound.

 : Skip to the next track.

 : Start or pause playback.


TREBLE +: Increase the treble.

BASS +: Increase the bass.

EQ: Change the equaliser preset.





 




Tips

- Press and hold the  button for 3 seconds to un-pair a Bluetooth® device.
- Press the **TREBLE** button and hold for 6 seconds to reset the audio settings (volume and EQ).

Operation

General Operation

Function	Action
Turn the soundbar ON	Press the POWER  /MODE button on the right side of the soundbar, or press the POWER  button on the remote control to switch the soundbar on.
Turn the soundbar OFF	Press and hold the POWER  /MODE button on the sound bar or press the POWER  button on the remote control.
Change the input source/mode	Short press the POWER  /MODE button repeatedly on the soundbar, or press the MODE button on the remote repeatedly to change the input source.
Increase/Decrease the volume	Press the + / - buttons on the unit or  /  on the remote control to adjust the volume level.

Input Modes

Input	Display
Bluetooth®	BT
Optical	OPT
Coaxial	COX
HDMI	ARC
AUX	AUX
USB	USB



When you turn on your soundbar, the LED display will light up and show the last used mode.

Bluetooth®


You can listen to tracks from a media device if connected to the unit via Bluetooth® wireless technology.

Pairing Bluetooth® Devices

The first time you use your Bluetooth® device with the soundbar, you will need to pair them with one another.

Activate Bluetooth on your compatible device, and set it to search for compatible devices.

Select the speaker name: 'BAUHN ASBEB-0919' from the list of found devices.

Note: Only one playback unit can be connected to the speaker. If the speaker is already connected to another playback unit, the speaker will not appear in the Bluetooth selection list. To disconnect the existing paired device, press and hold the  button on the remote for 3 seconds.

If your device asks for a passkey (depending on the device manufacturers, model, and software version), then enter digits "0000" and press OK.



The operational range between this player and a Bluetooth® device is approximately 10 metres (without any object between the Bluetooth enabled device and the unit). Any obstacle between the devices can reduce the operational range.

Before you connect a Bluetooth® enabled device to this unit, ensure you know the device's capabilities. Compatibility with all Bluetooth devices is not guaranteed.

If the signal strength is weak, your Bluetooth® receiver may disconnect, but it will re-enter pairing mode automatically.



If a mobile phone on which you are playing music receives a call, the music will be interrupted. The phone call audio however is not played via the speaker. Once you end the call, the devices are connected to each other again and playback resumes.

Your device will also be disconnected when your device is moved beyond the operational range. If you want to reconnect your device, place it within the operational range.

If the connection is lost, follow the instructions (left) to pair your device to the player again.



Bluetooth® Playback

Function	Action
Increase the Volume	Press the + button on the unit or ▲ on the remote.
Decrease the Volume	Press the - button on the unit or ▼ on the remote.
Play/Pause	Press ▶ on the remote.
Skip/Rewind	Press ⏮/⏭ on the remote to skip tracks.
Un-pair a Bluetooth® device	Press and hold the ▶ button on the remote for 3 seconds.



Troubleshooting

If you have problems with the soundbar, check below for advice. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
No power	<ul style="list-style-type: none">• Ensure that the AC power cable is properly connected.• Ensure that there is power at the AC outlet.• Press the POWER ⏻ button on the soundbar or remote to turn the unit on.
Remote control does not work	<ul style="list-style-type: none">• Use the remote control closer to the unit. Aim directly at the sensor on the front of the unit• Insert the battery with its polarities (+/-) aligned as indicated. Please check the battery is installed correctly.• Replace the battery.
No response from the unit	Disconnect and reconnect the AC power cable, then turn the unit on again.
Soundbar not found in the Bluetooth device list when pairing	<ul style="list-style-type: none">• Ensure you have unpaired the previously paired Bluetooth device from the soundbar.• Ensure the Bluetooth function is activated on your Bluetooth enabled device.
General sound issues	<ul style="list-style-type: none">• Make sure the soundbar is connected to power and turned on (LED display on), and that it's set to the correct mode; use the mode button on the unit or remote to change the input mode.• To check the system hasn't frozen, press the volume buttons; the number in the LED display should change accordingly.• If only a specific input mode is not working, it's likely the setting is wrong or the cable used is not working.
No sound from Netflix/other apps	Go to the TV settings menu, find Audio Output settings, and change the audio output mode to 'PCM' mode (instead of Auto, RAW, etc.)

Problem	Solution
No sound in HDMI ARC mode	<ul style="list-style-type: none"> • Make sure the input source is set to ARC; the LED will display 'ARC'. • Make sure your TV or external device supports ARC function and connect the HDMI cable to the ARC port of the TV or external device. • In the TV or external device setting menu, turn on the ARC function and the CEC function. • In the TV or external device setting menu, find the audio output settings and change the audio output mode to 'PCM' mode (instead of Auto, RAW, etc.) • Make sure both ends of the HDMI cable are fully plugged into the sockets. • If none of these solutions work, try changing the HDMI cable.
No sound in Optical/ Coaxial mode	<ul style="list-style-type: none"> • Make sure the input source is set to the correct mode; the LED will display 'Opt' or 'COX'. • Increase the volume of the soundbar to make sure it's not muted. • In the TV or external device settings menu, find the audio output settings and change the audio output mode to 'PCM' mode (instead of Auto, RAW, etc.) • For Optical, make sure you remove the small caps on either end of the Optical cable, and both ends are fully plugged into the sockets. • If none of these solutions work, try changing the optical or coaxial cable.
No sound in BT mode	<ul style="list-style-type: none"> • Increase the volume of the soundbar to make sure it's not muted. Make sure Bluetooth is connected successfully - if not connected, the LED will flash 'BT'; once connected, the LED will display solid 'BT'. • Make sure the external Bluetooth device is playing normally and its volume is turned up.
No sound in AUX IN mode	<ul style="list-style-type: none"> • Make sure the LED screen is displaying 'AUX'. Turn up the volume on the soundbar. • Turn up the volume on the external device and make sure it's not paused or muted. • Make sure the audio cable is properly plugged in at both ends.
No sound in USB mode	<ul style="list-style-type: none"> • Make sure the USB drive is in FAT32 file format, and it's no greater than 32GB; • Make sure the music file is mp3, flac or wav format.



Specifications

Power supply	AC 100-240V, 50/60 Hz
Power consumption	45W
Speaker output	2 x 20W RMS
Remote control operation range – distance, angle	6 metres, 30 degrees (either side of sensor)
Bluetooth pairing operation range – distance	Up to 10 metres
Bluetooth pairing name	BAUHN ASBEB-0919
Bluetooth pairing password	0000
Bluetooth version	5.0
USB output	DC 5V, 200mA (for playback only, not for charging external devices)
Media codecs supported in USB mode	mp3, wav, flac
Dimensions (W x H x D)	893mm x 56mm x 85mm
Weight	1.9kg

For Technical Support:

Ph: 1300 886 649

W: www.tempo.org

E: info@tempo.org

Distributed by Tempo (Aust) Pty Ltd,
PO Box 6056, Frenchs Forest DC 2086

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Compliance

This product complies with the Australian Safety Standard AS/NZS 60065 to ensure the safety of the product.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.





Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





Repair and Refurbished Goods or Parts Notice

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO Box 6056, Frenchs Forest, NSW 2086, Australia
Telephone: 1300 886 649 (Aust) - Fax: (02) 9975 2688
Tempo Help Desk: 1300 886 649 (Aust)
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)
Email: info@tempo.org



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.