

BAUHN®
EFFORTLESS TECHNOLOGY

58"

4K Ultra HD TV

MODEL: ATV58UHD-0719

User Manual



Welcome

Congratulations on your purchase!


This manual tells you all you need to know about using your new Bauhn® product.

Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents

Welcome	2	On-Screen Set Up	17	Specifications	40
Unpack and Prepare	4	TV Setting Menus	18	Compliance and Responsible Disposal	41
What's in the box	4	Picture	20	Warranty Information	42
 Important Tips	5	Sound	22	Repair and Refurbished	
Attaching the stand	6	TV (DTV and ATV)	23	Goods or Parts Notice	43
Wall-mounting the TV	7	Lock	25		
Connect to power	8	System	26		
Connect your antenna	8	Time	29		
Controls and Connections	9	TV Guide	30		
Get to know your TV	9	Recording	31		
Buttons on the TV	9	Recording Live TV	32		
Ports on the TV	10	Scheduled recording	32		
Remote Control	12	Playback	32		
Setup	12	Pause Live TV (Time-shift)	33		
Using the Remote Control	13	USB Mode	34		
Standard Remote	14	Set up	34		
Easy Remote	16	Troubleshooting	37		

Unpack and Prepare

What's in the box

Before installing your new TV, check you have everything needed.

In the box you will find:


- A. Ultra HD TV
- B. Remote Control
- C. Easy Remote Control
- D. AAA Batteries
- E. Quick Start Guide
- F. Warranty Card
- G. AV Cable
- H. Stands
- I. Screws (for the stands)
- J. User Manual

You will need:

- Phillips-head screwdriver (for stand installation)
- Someone to help you lift and install your TV
- Antenna cable (to watch live TV)




See the inside flap of the box for how to handle the TV without damaging it!

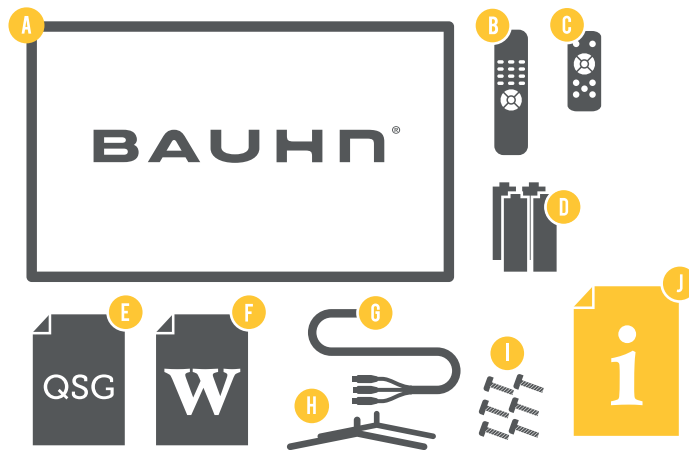

Important Tips

- Place the TV on a level surface.
- Place the TV away from any source that may generate heat or vibrations.
- Make sure there is enough space around vents for airflow.
- The remote control works up to 5 metres away from the TV.
- Unplug the TV before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- It is highly recommended to use safety straps for securing the TV in place.
- Keep liquid, children and pets away from the TV at all times.

Attaching the stand

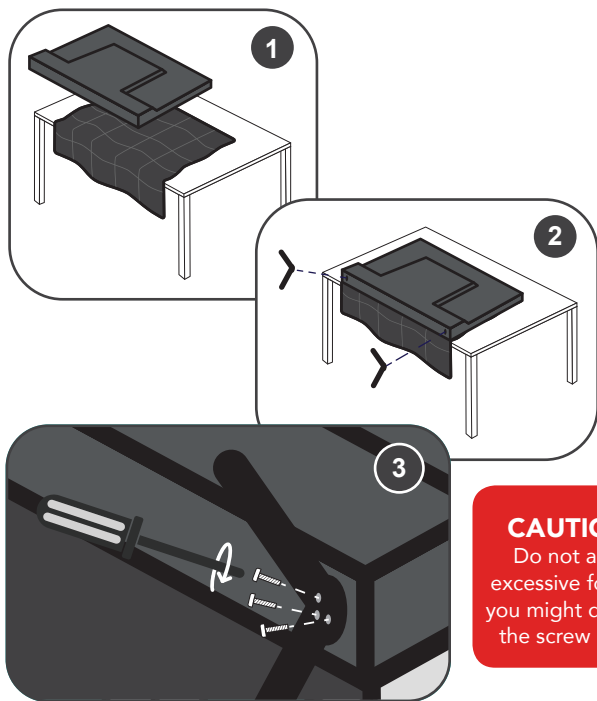

CAUTION!
Do not apply
excessive force as
you might damage
the screw holes.



- This TV is heavy! We recommend asking someone to help you lift it.
- Unplug the TV from the power outlet before installing or removing the stand.
- Only touch the frame, not the screen.
- It is highly recommended to use safety straps for securing the TV.


Unless you are wall-mounting the TV, you will need to attach its stand/legs.

1. Lay the TV face-down on a soft, flat surface (like the sofa, or a towel on a table).
2. See the 'L' and 'R' markings on the stand? Match them to the installation points on the underside of the TV.
3. Attach the stand to the TV at the installation points using the screws provided. (Grab a screwdriver for this bit). Make sure the legs are facing away from each other (not leaning inwards).


Wall-mounting the TV



- Unplug the TV from the power outlet before wall-mounting.
- Contact a professional for assistance with wall-mounting the TV.

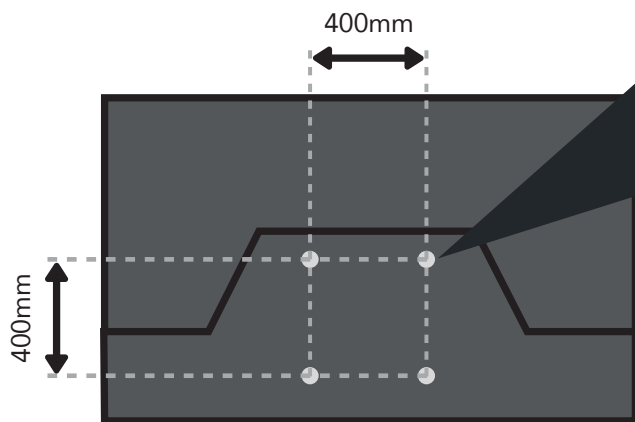

Back of the TV

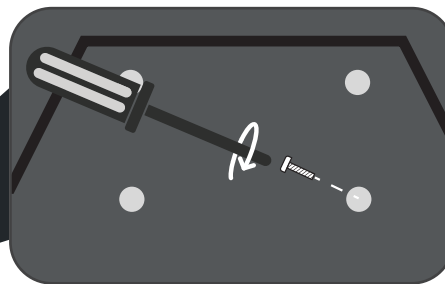

Required

- VESA Mounting Bracket
- 4 x M6*12mm screws (or longer as required)


The TV comes with holes on the back panel for use with wall-mounting brackets (bracket not included).

Use four standard M6*12mm screws (or longer, depending on the mounting bracket) to wall-mount this TV (screws are not included).



The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, consult a qualified installer for advice on bracket support and wall support.

Connect to power

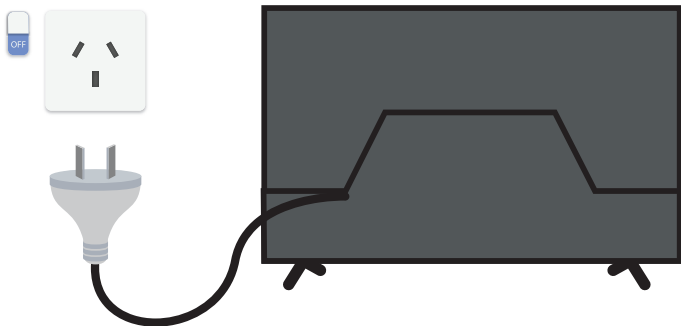

Don't forget to plug in the TV to the power outlet. Leave the power switched off until installation is finished.

Connect your antenna


Free-to-air TV in HD (High Definition)

Example
HD Channels


ABC HD
SBS ONE HD
7HD
9HD
10 HD
PRIME7 HD
WIN HD

High Definition (HD) channels provide the best viewing quality and are available with a digital antenna connection.

TV channels in Ultra HD resolution are not currently available in Australia. Therefore when you watch HD broadcast signals on an Ultra HD TV, the picture can appear 'soft' and lacks the detail you see when watching the same content on an HD TV.

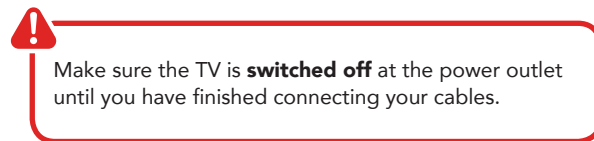

Make sure the TV is **switched off** at the power outlet until you have finished connecting your cables.

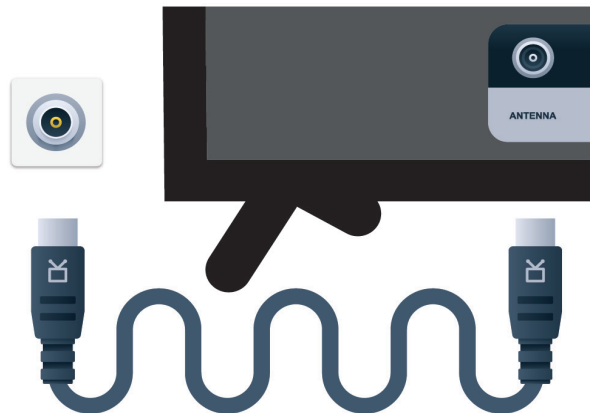


Antenna cable not included.

Controls and Connections

Get to know your TV



Buttons on the TV

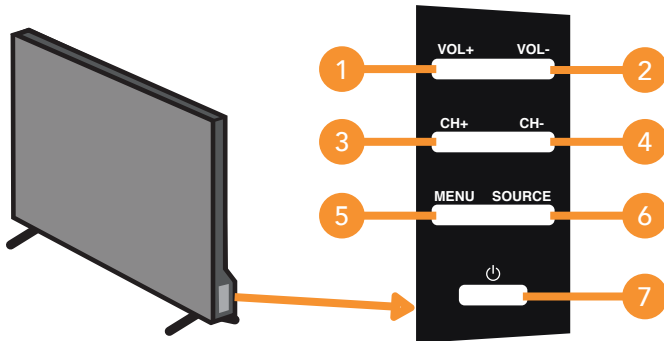


1. VOL + : Increase the volume level or move left.
2. VOL - : Decrease the volume level or move right.
3. CH + : Select the next channel or move up.
4. CH - : Select the previous channel or move down.
5. MENU : Enter the settings menu.
6. SOURCE : Change the input source.
7. ⏻ : Switch the TV ON or to Standby.


See next page for more info on the connections.





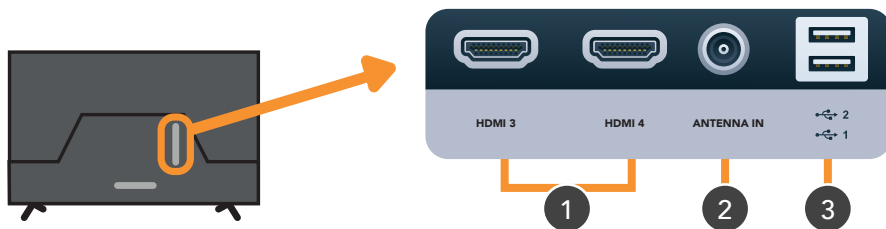


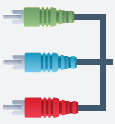


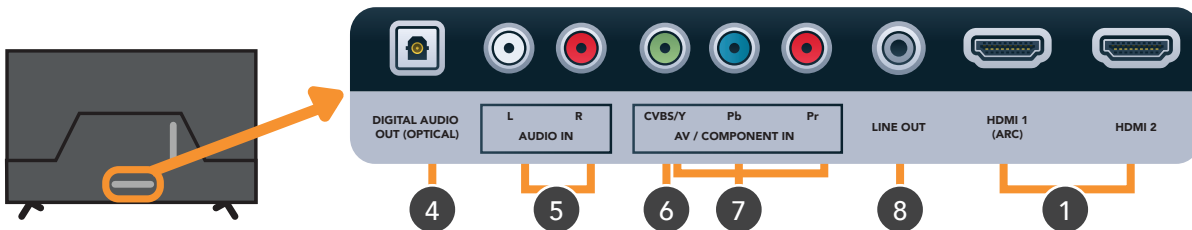

Ports on the TV




1	HDMI Use a high-speed HDMI cable for best picture and sound quality.		SOUND PICTURE COMPUTER	All-digital connection between the TV and any HDMI device. Supports Ultra HD. Requires a High Speed HDMI cable (not included).
2	Antenna		FREE-TO-AIR TV	Connect your antenna for live TV. (Antenna cable not included.)
3	USB		STORAGE	<ul style="list-style-type: none"> » PVR record and pause live TV » Play your stored media files (supported file codecs and extensions may vary). Supports up to Full High Definition (FHD) picture quality. » Software updates



4	Digital Audio Out (Optical)			SOUND	Connect an external digital audio device. Use an Optical cable (not included) to connect the unit with an amplifier, soundbar or other audio decoding device for digital audio signal output.
5	AUDIO IN			SOUND	You can use this to connect Audio to your TV for AV or Component video inputs. Requires an RCA Stereo Audio cable (not included).
6	AV IN			PICTURE	You can use this to connect your DVD player. Supports Standard Definition (SD) picture quality. Requires an AV cable (included).
7	Component IN			PICTURE	You can use this to connect your DVD player. Supports Full High Definition (FHD) picture quality. This also requires Requires a component cable (not included).
8	Line Out			SOUND	Connect to your headphones, amplifier or audio device, using an AUX cable (not included). (Audio output is at a fixed level, so use your external device to control the volume.)

Remote Control

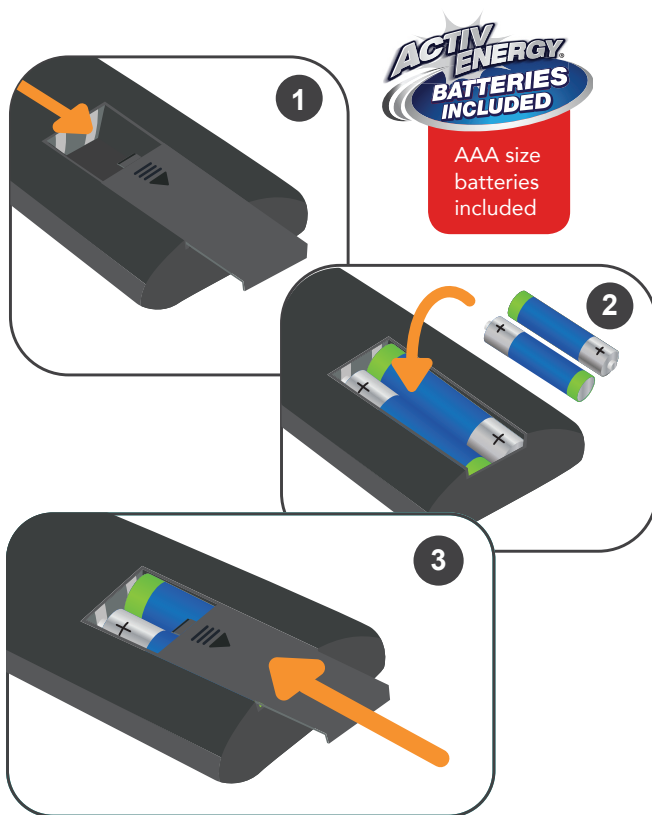

Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.




Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the TV. The remote will not operate if its path is blocked.

The remote has a range of up to about 5 metres from the TV at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

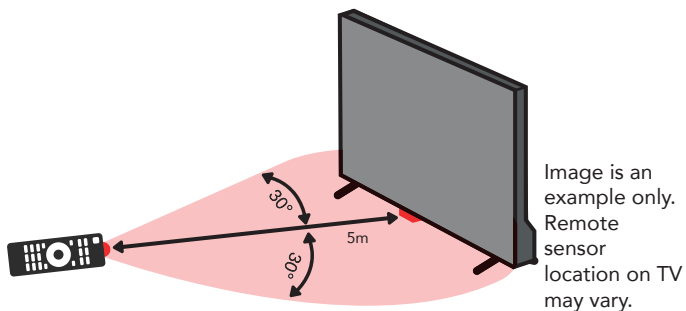

Remote Hints and Tips

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.

Standard Remote



POWER: Switch the TV to On or Standby.

GOTO: Jump to a different chapter of the DVD.*

ANGLE: View DVD playback from different angles, if the DVD has this feature.*

FAV: Press to display your favourite program in DTV mode.

TEXT: Switch between TV and Teletext mode.**

SUBTITLE: Enable/disable subtitles.

SIZE/ZOOM: Change the picture size.

MEDIA: Select USB mode.

|| : PLAY/PAUSE in TIMESHIFT and USB mode.


REC / D.SETUP: Record program in DTV mode / Display the main disc menu.*

■ : Stop playback.

MENU: Display the main TV menu.

▲ / ▼ / ◀ / ▶ : Press the UP/DOWN/LEFT/RIGHT buttons to navigate the on-screen menus and adjust the system settings.

OK: Display the channels list (DTV).

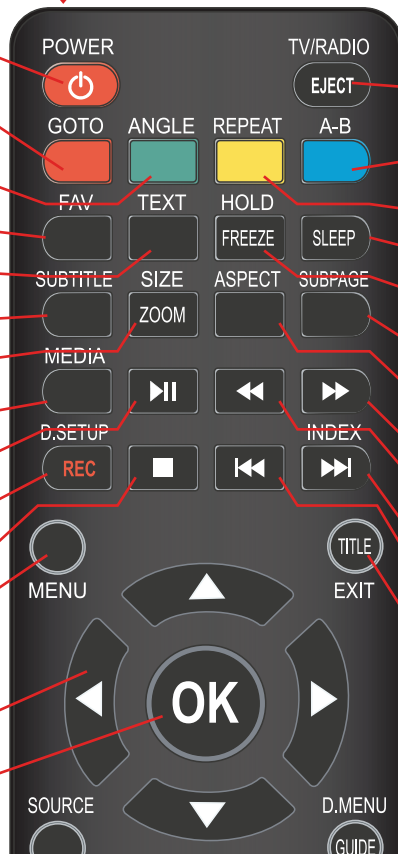

TV/RADIO / EJECT: Switch between TV or radio in DTV mode / Eject a disc (DVD).

A-B: Repeat selected DVD scenes.*

REPEAT: Repeat playback of a selected chapter, title, or the entire DVD.

SLEEP: Set the TV sleep timer.

FREEZE: Hold the picture temporarily.

SUBPAGE: Manually jump to the previous or next subpage of Teletext.**

ASPECT: Change the size of the image on your screen.

▶▶ : Move fast forward.

◀◀ : Move fast backward.

▶▶ / INDEX: Play next file./ Display the recorded programs list (DTV).

◀◀ : Play the previous file.

TITLE: Display the DVD title menu.*

SOURCE: Switch the input source.

MUTE: Mute the sound. Press again or press V+ to restore the sound.

VOL +/-: Turn the volume up/down.

DISPLAY: Display information of the current program.

NUMBER BUTTONS (0-9): Press to select a TV channel directly when watching TV.

-/-: Switch the digits.

AUDIO/LANG: Switch the available sound-track language (DTV/DVD).

GUIDE: Launch the TV Guide (DTV).

CH +/-: Change to the next or previous channel.

↶: Return to the previous channel.

S-MODE: Cycle through the different sound modes.


P-MODE: Cycle through the different picture modes.

* DVD-related function do not apply to this model TV.

** Teletext is no longer available in Australia.




Easy Remote

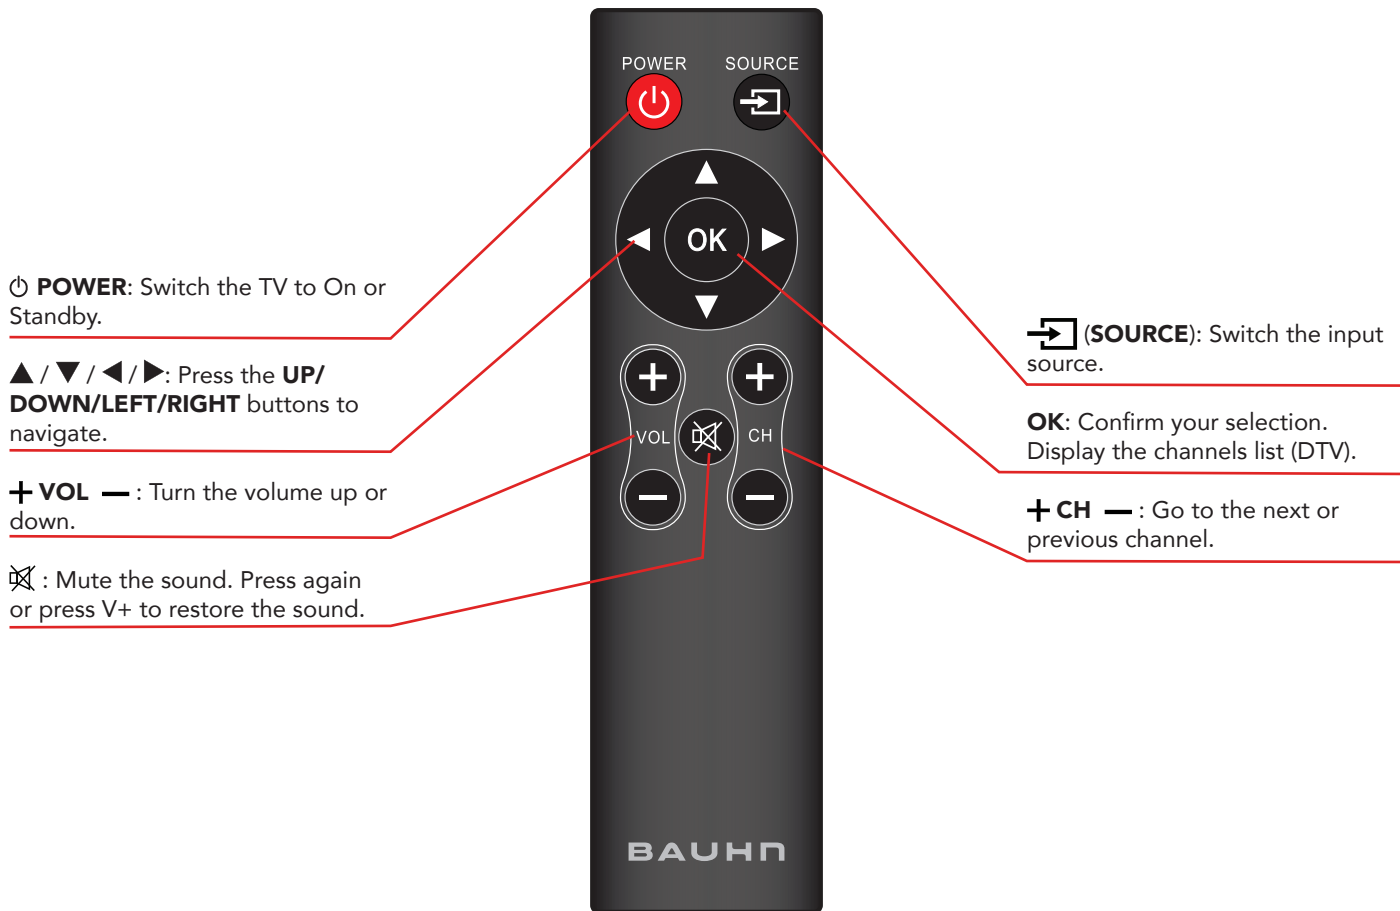

On-Screen Set Up





Make sure equipment is properly connected (as shown on pages 10-11) before connecting the TV to power.

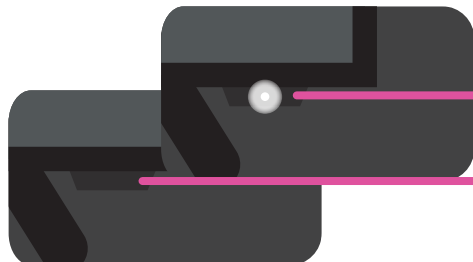

On/Standby light is WHITE in standby mode.

On/Standby light is off when the TV is on.

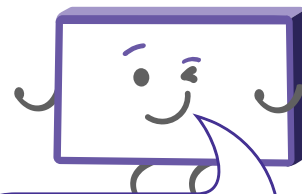





Make sure the TV is plugged in at the power socket and switched on. Press the  (ON) button to turn on the TV.



First Time Setup menu

When you turn the TV on for the first time, the First Time Setup menu will appear.

Follow the prompts using the  /  /  /  buttons to select your preferences. You will be able to adjust:

System Language **Country** **Time Zone** **Tune Type**

Press **OK** to start auto tuning free-to-air channels.

If you make an error, you can update your preferences in the settings menu later.



TV Setting Menus

Menu Navigation Buttons

Press the **MENU** button to display the TV settings menu. See the guide below for all the other buttons you'll need to use to adjust and change your settings.

Function	Remote Button
----------	---------------


Display the main menu	
-----------------------	--



Select different sub-menus	
----------------------------	--



Enter a sub-menu	
------------------	--

 

Select preferred option	
-------------------------	--




Adjust a value	
----------------	--



Return to the previous menu	
-----------------------------	--



Exit a menu	
-------------	--

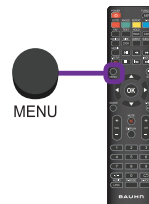

Once you have programmed any settings, the unit will retain them in its memory until you change them, even after turning the TV off.

Menu Index



Picture

- Picture Mode
- Brightness
- Contrast
- Sharpness
- Saturation
- Tint
- Colour Temperature
- Noise Reduction
- Aspect Ratio
- HDMI Mode

20



Sound 22

- Sound Mode
- Treble
- Bass
- Balance
- Auto Volume Level (AVL)
- S/PDIF Mode
- Audio Delay
- AD (Auto Description) Switch



TV (DTV and ATV) 23

- Auto Tuning
- ATV Manual Tuning
- DTV Manual Tuning
- Programme Edit
- Schedule List
- Signal Information



Lock 25

- System Lock
- Set Password
- Channel Lock
- Parental Lock
- Key Lock



System 26

- System Language
- Audio Language
- Subtitle Language
- Hearing Impaired
- PVR File System
- HDMI CEC
- HDMI UHD
- Blue Screen
- Shipping Condition
- Reset to Defaults
- Software Update (USB)
- System Information



Time 29

- Clock
- Timezone
- Sleep Timer
- No Action Auto Sleep
- Auto Standby
- OSD Timer

Picture



Picture Mode

Home (default): Basic picture suitable for home use, with reduced power consumption.

Bright Room: Enhanced picture brightness for bright home environments.

Dynamic: Enhanced brightness with lower contrast, colour depth and edges for standing out in very bright places such as storefronts.

Mild: Enhanced brightness but lower contrast, colour depth and edges.

Personal Adjust settings to best suit your viewing environment and content.

Personal Mode settings

Option	Description
Brightness	Adjust the depth of shadow in the picture. The closer to 0, the darker shadows will look, losing detail in darker images.
Contrast	Adjust the intensity of highlights/white in the picture. The closer to 100, the brighter highlights will look, losing detail in brighter images.
Sharpness	Adjust the sharpness of the picture. The closer to 100, the sharper and clearer the image.
Saturation	Adjust the saturation. The closer to 100, the deeper the colour.
Tint	Adjust the on-screen colour tone (for NTSC system only).

Original



Images are for reference only.

Brightness



Contrast



Sharpness



Saturation



Picture Settings

Option

Description

Colour Temp

Adjust the on-screen colour temperature.

Normal

Warm

Cold

Noise
Reduction

Reduces noise to improve picture quality.

OFF

Low

Medium

High

Aspect Ratio

Adjust the video size. Sizes may differ between input sources.

Auto

4:3

Just Scan

16:9

Zoom1

Zoom2

HDMI Mode

Adjusts HDMI input mode to best suit your device.

Auto

Video

PC



Sound

Option

Description

Sound Mode

Standard **Music** **Movie** **Sports** **Personal**

Treble

Adjust the levels of higher pitched sounds (adjustable when in Personal mode).

Bass

Adjust the levels of lower pitched sounds (adjustable when in Personal mode).

Balance

Adjust the audio output between the left and right speakers.

Auto Volume Level
(AVL)

Turn On to keep the volume level consistent.

S/PDIF Mode

Set the digital sound output setting.

Auto **PCM**

Audio Delay

Adjust if the sound and picture are not synchronized.

AD (Audio
Description) Switch




Audio Description (AD) provides an additional audio track for visually challenged persons (DTV only, subject to programme).



Want to set up your soundbar or AV receiver with HDMI-ARC? See page 28 for details.






TV (DTV and ATV)



Option	Description
Auto Tuning	Automatically tune all available free-to-air TV channels. Adjust settings (default settings are set for Australia). Press OK to start scanning.
ATV Manual Tuning	<p>Manually select and tune analog TV channels. (Analog TV is no longer supported in Australia.)</p> <p>Current channel: Press the ◀/▶ buttons to select the channel number to save the tuned signal.</p> <p>Colour System: Select the colour system (PAL in Australia).</p> <p>Sound System: Select the sound system (BG in Australia).</p> <p>Fine-Tune: View the file tune setting.</p> <p>Search: Press the OK button to start tuning.</p>
DTV Manual Tuning	Manually select and tune digital TV channels. Use ◀/▶ to select the broadcast channel. Press OK to begin scanning.
Programme Edit	See the next page for more information.
Schedule List	Manage scheduled recordings. Press  YELLOW to add a new programme to record. Press  BLUE to edit an existing schedule. Press  RED to delete an existing schedule.
Signal Information	Display current signal information (DTV mode only).

Programme Edit

Use the ▲ / ▼ buttons to highlight a channel.

Option	Description
Move	Move the channel location on the list. Press  YELLOW to enter Move mode. Use the ▲ / ▼ buttons to select a position and press  YELLOW to confirm.
Delete	Press  RED to delete the highlighted channel.
Skip	Press  BLUE to skip the highlighted channel.
Favourite	Press  FAV to add the channel to the Favourites list.

Lock



Enter the factory password '0000' using the number buttons on the remote and select 'OK' on-screen. If you changed your password but forgot it, you can still use the master password.



Factory Password: 0000
Master Password: 4711

Option

Description


System Lock

Enable/disable the lock on the system.

Set Password

Input a new password using the number buttons on the remote and confirm to set the new password.

Channel Lock

Lock selected channels. Press the ▲ / ▼ buttons to select the channel you want to lock. Press  **GREEN** repeatedly to lock/unlock the highlighted channel.

Parental Lock

This item is used to block access to specific program ratings.

No Block

Unrestricted

Block G
and above



General

Block PG
and above



Parental guidance
recommended

Block M
and above



Recommended for
mature audiences

Block MA
and above



Not suitable for
people under 15.
Under 15s must be
accompanied by a
parent or adult
guardian

Block AV
and above

Not suitable for
people under 15.
Under 15s must be
accompanied by a
parent or adult
guardian

Block R
and above



Restricted to 18 and
over

Block All

Restricted

Key Lock

Enable/disable the lock on TV button operation.

System

Option	Description
System Language	Select your preferred On Screen Display language.
Audio Language	Select your preferred audio language. (Available for digital channels, depending on the programme.)
Subtitle Language	Select the language for subtitles (available for digital channels, depending on the programme).
Hearing Impaired	Turn On or Off. This function can assist hearing impaired users to understand a scene or action via the caption instead of audio (available for digital channels, depending on the programme).
PVR File System	See page 27 for more information.
HDMI CEC	See page 28 for more information.
HDMI UHD	Set to 'Enhanced' when watching 4K UHD content. Set to 'Standard' when watching HD content.
Blue Screen	When there is no signal or a poor signal, a blue screen will appear.
Shipping Condition	Restore the TV back to original shipping condition.
Reset to Defaults	Restore the system settings to the factory default.
Software Update	Upgrade the software using a USB storage device.
System Information	Look up the TV model number, software version and Technical Support phone number.

PVR Settings

To make changes to PVR (Personal Video Recording), ensure your USB drive is inserted into the TV. Check the troubleshooting section if you're having problems setting up your USB device.

Option	Description
Select Disk	Select the USB drive.
Check PVR File System	Check the health of the USB drive file system.
Format	Format the USB drive. Warning: all data will be lost. Do not remove the USB drive while it's being formatted.
Free Record Limit	Set the free recording time limit.



HDMI CEC Setup

This feature allows for your TV and your connected HDMI device to be controlled by one remote.

Press the **SOURCE** button on the unit or remote control to select the HDMI input source.

Option	Description
HDMI CEC (Consumer Electronics Control)	Turn HDMI CEC On/Off.
Device Auto Power Off	Allow HDMI connected devices to automatically turn off when the TV is turned off.
TV Auto Power On	Allow the TV to automatically turn on when HDMI connected devices are turned on.
ARC (Audio Return Channel)	If this function is enabled, sound from the TV can be sent to an HDMI-ARC supported external audio device.
Device List	Display available connected devices.



Make sure your device supports CEC! Also remember to turn on its ARC function.

Time



Option

Description

Clock

Displays time values from the TV broadcast signal. (Not user adjustable.)

Time Zone

Select your timezone.

Sleep Timer

Select the desired Auto Sleep (Standby) duration.

Options: **OFF** **15 min** **30 min** **45 min** **60 min** **90 min** **120min** **240min**

No Action Auto Sleep

Set the amount of time to lapse before the TV enters Standby mode due to inactivity.

Options: **OFF** **ON**

Auto Standby

Set the amount of time to lapse before the TV enters standby mode.

Options: **OFF** **3h** **4h** **5h**

OSD Time

 





Select the desired OSD (on screen display) menu duration.

Options: **10 sec** **15 sec** **20 sec** **30 sec**

TV Guide


(Free to air TV)

TV Guide Functions


Function	Remote Button
Move between columns.	◀ / ▶
Select a channel or programme.	▲ / ▼
View TV Guide for the next day.	 BLUE
View TV Guide for the previous day.	 YELLOW
Schedule a reminder for the selected programme.	 GREEN
Schedule a recording for the selected programme.	 REC
Press the button repeatedly to change the schedule mode: R = Record once; D = Record everyday; W = Record weekly; A = Record auto.	
Display full programme information.	DISPLAY 
Exit TV Guide menu	TITLE EXIT 

To access the TV guide, press the **GUIDE** button on the remote.

To activate the TV Channels use the ▲ / ▼ buttons to select a channel in the left column, then press OK to confirm.

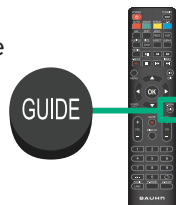

Recording

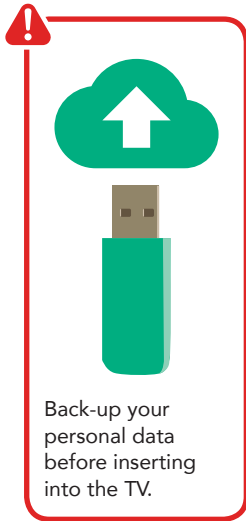

Important Tips:

- Back-up your personal data before plugging in your USB to the TV. We do not assume liability for any loss of data due to misuse or malfunction.
- You cannot change channels while in recording mode.
- If the signal is interrupted while in recording mode, the recording will stop until the signal is established.
- Do not turn the TV off while it is in time-shift mode.
- The file recorded can only be used on this TV. Do not copy it to any other device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored on it may be damaged.





Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



Recording Live TV

Instant Recording

Press **REC** once - start recording.

Stop Recording

Press **STOP** twice - display the dialogue box.

Select **YES** to stop recording.

Select **NO** to continue recording.



Scheduled recording

See TV Guide Functions on page 30 to schedule recordings and Schedule List functions on page 23 to manage schedules.

When a program is being recorded in the background (while the TV is in standby mode), the Standby/ON light will flash white.



Recording, scheduled recording and pause live TV functions only work in DTV mode (free-to-air).

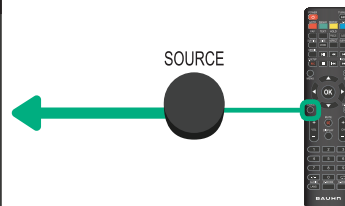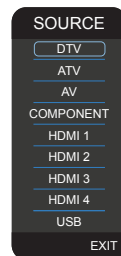

Playback

Press the **INDEX** button to display the list of recorded programs.

Use the **▲ / ▼** buttons to select a recorded file.

Press the **OK** button to start playback in Full Screen Mode.

Press **RED** to delete the selected file.



Pause Live TV (Time-shift)

Temporarily pause the live TV signal, then resume playback at your convenience.



Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



Start Time-shift

Press the **⏸** button on the remote to enter time-shift mode.



Press the **⏸** button to resume playing the program.

Stop Time-shift




Press the **■ STOP** button to exit time-shift.

Press the **DISPLAY** button twice to bring up the on-screen display. Use the **◀/▶** buttons to select OSD buttons and press OK to control playback.



Recording, scheduled recording and pause live TV functions only work in DTV mode (free-to-air).

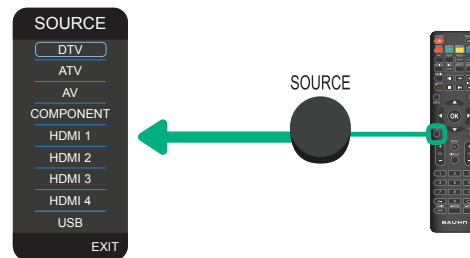

The USB storage device won't retain recorded data after you exit the time-shift function.


USB Mode



Set up

Insert your USB into a USB port on the TV.

Press the **SOURCE** button to select 'USB' mode or press the **MEDIA** button on the remote.

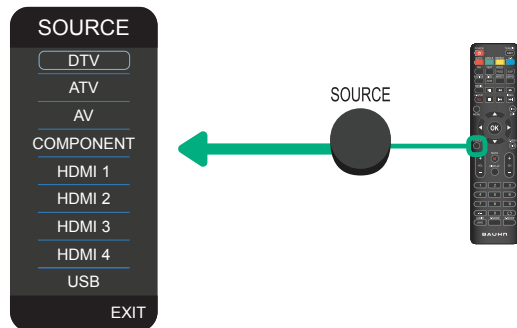

You can only play Photos in the Photo category, Music in the Music category and so on. Make sure you select the correct category for the file you wish to play.

Function	Remote Button
----------	---------------

Navigate media categories and file system	◀ / ▶ / ▲ / ▼
---	---------------

Start playing your media	OK or ▶▶
--------------------------	----------

Return to the previous screen	TITLE EXIT
-------------------------------	---------------

Exit Media mode	SOURCE
-----------------	--------

Playback Functions


Playback of different media types have different controls.

Photo

Function	Remote Button
Navigate to a folder or file	◀ / ▶ / ▲ / ▼
Display a photo	OK or ▶▶
Hide or display the on-screen toolbar	DISPLAY ●
Return to file list	TITLE EXIT

Music

Function	Remote Button
Navigate to a folder or file	◀ / ▶ / ▲ / ▼
Play a track	OK or ▶▶
Fast forward or rewind the track	◀◀ / ▶▶
Skip or restart the current track	◀◀ / ▶▶
Return to the file list	TITLE EXIT

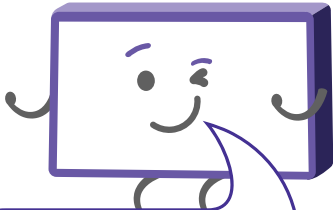

When the on-screen toolbar is visible, select the on-screen buttons to control playback. This applies to all of the media modes.




Video

Function	Remote Button
Navigate to a folder or file	◀ / ▶ / ▲ / ▼
Play a video	OK or ▶▶
Pause the video	▶▶
Resume playback	▶▶
Stop playback	■
Fast forward or rewind the track	◀◀ / ▶▶
Skip or restart the current track	◀◀ / ▶▶
Display or hide the toolbar	DISPLAY ●
Return to file list	TITLE EXIT

Text

Function	Remote Button
Navigate to a folder or file	◀ / ▶ / ▲ / ▼
Open the text file	OK or ▶▶
Navigate to the next/previous page	◀ / ▶
Return to the file list	TITLE EXIT

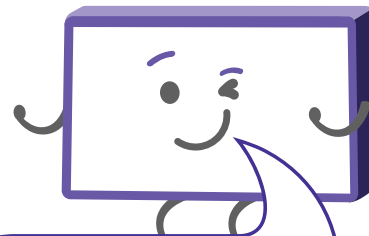

Only supported file types will be displayed. See the specifications table for supported file types.

Troubleshooting

If you experience problems with your TV, check below for advice. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
No power	<ul style="list-style-type: none">• Check the power outlet is turned on.• If using a multi-outlet, check if it is working properly. To check whether a power strip is working properly, plug the TV's power plug directly to a wall outlet and make sure the white indicator light on the TV is lit.• Try to power on using the button on the TV.
Button operation is not effective (unit and/or remote control)	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static electricity or other factors.)
No operations can be performed with the remote control unit	<ul style="list-style-type: none">• Check the batteries are correctly installed.• The batteries may be exhausted: replace them.• Make sure to point the remote control at the remote control sensor and try it again.• Make sure to use the remote control at a distance of no more than 5 metres from the sensor.• Remove any obstacles between the remote control and remote control sensor.• When you press the power button on the remote, check that the power indicator light on the TV blinks.



Problem	Solution
Picture issues	<ul style="list-style-type: none"> • Ensure that all equipment is connected properly. If you are using an external device, turn it off, then turn it on again. If it says there is no signal on the screen, choose the correct source input. • Adjust the antenna position. • Move the TV away from electronic equipment or devices that could cause interference. • Auto-tune free-to-air TV channels again. • Try another channel. • When HDMI devices are connected, if the image keeps flickering, make sure the cable is: a high-speed HDMI cable; correctly connected to the port; and not faulty (bent or broken). • When trying to watch 4K UHD picture, if the image keeps flickering or there is no image, go to Menu > System > HDMI UHD and adjust the setting to 'Enhanced'.
Sound issues	<ul style="list-style-type: none"> • Ensure all equipment is connected properly. • Ensure the input setting for the TV is correct. • Ensure source input and audio settings on the external device are set correctly. • Ensure the volume is not muted. If it is, press the MUTE button to restore the sound. • If earphones are connected, unplug them. • Adjust the volume to a suitable level by pressing the VOL+ / VOL- button. • If you are using an external audio device, check that the Menu > Sound > S/PDIF setting is 'PCM'. • If you are using an external audio device via an HDMI cable, make sure the audio device supports HDMI-ARC. • If the TV sound is not synchronised with the picture, go to Menu > Sound > Audio Delay and adjust the sync.

Problems relating to your USB media storage device

Problem	Solution
My TV does not recognise my USB device or my external hard disk	<ul style="list-style-type: none">• First, refer to the instructions describing how to use USB devices with this TV.• If the problem still occurs, your USB device may not be compatible.• This TV has been tested with the majority of Flash memory-based devices and hard disks (media players with HDD) on the market; however, it may not be compatible with certain devices, in particular external self-powered hard disks.• Some USB storage devices may not be compatible with this TV.• Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.
'Disk not ready' error	When you are in time-shift recording mode, without removing the USB recording device, you may experience some difficulty with a scheduled recording. You will need to remove the USB device as it is required to reset after each recording to protect the device from damage. If you see the message 'DISK NOT READY' displayed, remove the device, reconnect and proceed with your recording.
My media is loading slowly	For large file sizes and large capacity storage devices, the loading speed may be slower. The recognition speed of a USB storage device may vary depending on the device.
There is an 'unsupported file' message	If an "Unsupported File" message is displayed, it means the file extension, video codec, image resolution or frame rate is unsupported.



Specifications

Active screen size (diagonal)	57.5"(146.1cm)	
Resolution	3840 x 2160	
Display colours	16.7M	
Aspect ratio	16:9	
Refresh rate	60Hz	
HDMI version	2.0	
HDCP version	2.2	
Multimedia playback formats (USB mode)	Video	AVI, MPG, MKV, MP4
	Music	MP3
	Photo	JPG/JPEG
	Text	TXT
USB output	DC 5V 500mA	
Power supply	AC 100-240V, 50/60Hz	
Power consumption	145W	

Dimensions (W x D x H)		With stand: 1299 x 254 x 821 mm
		Without stand: 1299 x 84 x 759 mm
Weight	Net	14.42kg
	Gross	18.95kg

For Technical and Warranty Support

1300 886 649

www.tempo.org

info@tempo.org

Distributed by Tempo (Aust) Pty Ltd,
PO Box 6056, Frenchs Forest DC 2086

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.



Product

At the end of its working life, do not throw this product out with your household rubbish.

An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



National Television and Computer Recycling Scheme

The careful disposal of e-waste is important because many televisions and computers contain materials which are hazardous to people and the environment. There are no fees for householders or small businesses disposing of e-waste at a scheme collection service.

Individuals can contact their local council for information on local e-waste management services, find scheme services listed on Planet Ark's website at www.recyclingnearyou.com.au, or call Planet Ark on 1300 733 712.

Compliance

This product complies with the Australian Safety Standard AS/NZS 60065 to ensure the safety of the product.





Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





Repair and Refurbished Goods or Parts Notice

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO Box 6056, Frenchs Forest, NSW 2086, Australia
Telephone: 1300 886 649 (Aust) - Fax: (02) 9975 2688
Tempo Help Desk: 1300 886 649 (Aust)
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)
Email: info@tempo.org



Online support

Visit www.bauhn.com.au for software updates to keep your TV up-to-date, as well as the latest Instruction Manual for information on the updated features.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.