



Please read the User Guide

It will help you get the best out of your product.

Still have questions?  
Call After Sales Support  
1300 002 534  
Or visit [tempo.org/support](http://tempo.org/support)

## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 002 534.

AFTER SALES SUPPORT



1300 002 534

[tempo.org/support](http://tempo.org/support)

Model: ASW-0823

Product Code: 712451 08/2023

## Sports (Training)

On the main menu, tap on the icon to enter the multi-sport screen. There are 24 sport modes for you to choose from.

When you want to pause/stop the activity, swipe right and the screen will pause and display the play/stop icon. Tap the icon to resume/stop play. You can also start the activity on the GloryFit app on your smart phone and it will sync data to the watch.

Virtual GPS connection: select the icon on the GloryFit app to enter the Sports menu. Select the sport mode or you can tap "+" to add desired sport mode.

Tap "GO" on the screen and select OK to confirm GPS access. The sport mode will start on the app and watch and synchronise.

Tap the icon to display the GPS map. Tap the icon to return to the sport menu. Tap the pause icon to pause the sport and tap and hold the stop icon to stop the sport. The GPS exercise data will be saved.

13

**NOTE:** The smart watch will only save data if the distance is more than 200 steps/5 minutes in duration. GPS function must be turned on mobile and be connected to the mobile network.

## Bluetooth Calls

On the main menu, tap on the icon to enter the Bluetooth call menu where you can view call history, contact list and dialer. Tap the "Switch" to turn the Bluetooth call function on. The function will automatically turn off after 15 minutes if not connected with your smart phone.

**NOTE:** Your smart phones Bluetooth must be paired to "ASW-0823" to use the function.

To enable the watch for your smart phone's Bluetooth calls, music playback and remote capture, please refer to the below:

For Android devices: Go to your mobile settings > Bluetooth. Select "Pair new device" and select "ASW-0823" from the list.

For iOS devices: Go to your mobile settings > Bluetooth. Select "ASW-0823" from the "Other Devices" list.

Please ensure the shortcut menu shows .

14

## Call Operation

After your smart phone is connected to the watch, you can directly answer/reject incoming calls through the watch.

To answer an incoming call, tap the icon. To reject the call, tap the icon. During the call, tap the icon to mute/unmute. Tap the icon and swipe up/down to adjust the volume.

## Bluetooth Music Playback

- On the main menu, tap the icon to enter the Bluetooth music playback menu.
- Open the music app on your smart phone.
- Tap play/pause icon to play/pause music.
- Tap previous/next icon to play the previous/next song.

Your smart phones Bluetooth must be connected to "ASW-0823" to use the function.

**NOTE:** For iOS devices, music playback and remote capture will not work if you do not pair "ASW-0823(ID-XXXX)" on the pop up screen.


15

## Weather

On the main menu, tap on the icon to view live weather (you can see up to a 3 day forecast). You must be connected to the GloryFit app.

**NOTE:** You must have Internet/mobile connection for this function to work. Your phone location/GPS must also be turned on. The weather displayed may not be the same as your phone's default weather app.

## Shortcut menu

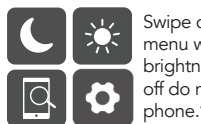

Swipe down to access the shortcut menu where you can adjust brightness, enter settings, turn on/off do not disturb mode and 'find phone.'

## Find Phone

After your smart phone is connected to the watch, tap the find phone icon and your smart phone will ring or vibrate.

16

**NOTE:** before using the Find Phone function, Bluetooth Call function must be turned off on the watch.

The ringing and vibration duration will differ between iOS and Android phones.

## Settings

On the main menu, tap on the icon to enter the settings menu to change the below:

- : Change watch face screen.
- : Adjust touch screen brightness.
- : Display Bluetooth, Mac address and software version.
- : Turn off the watch.
- : Reset to factory settings.

## Function

On the main menu, tap on the icon to enter the function menu to access the below:

- Stopwatch
- Timer
- Flashlight
- Tap the icon and your smart phone will ring or vibrate.

17

## Specifications

Display	1.7", 240 x 280 pixels
Ingress protection	IP68
Charging time	1.5 hrs (approx.)
Charging base input	5V=150mA
Bluetooth Range	< 10m
Built-In Battery	Li-ion 3.7V 220mAh
Weight	47g (approx.)
Dimensions (mm)	39 (W) x 51 (H) x 11.7 (D)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

18



**BAUHN®**

## Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

19

## Repair and Refurbished Goods or Parts Notice

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 002 534 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252  
PO Box 132, Frenchs Forest, NSW 1640, Australia  
Telephone: 1300 002 534 (Aust) - Fax: (02) 8977 3765  
Tempo Help Desk: 1300 002 534 (Aust)  
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm EST)  
Email: [tempo.org/support](mailto:tempo.org/support)

20

**BAUHN®**



Smart Watch  
with Sleep Tracking

User Guide



AFTER SALES SUPPORT



1300 002 534

[tempo.org/support](http://tempo.org/support)

Model: ASW-0823

Product Code: 712451 08/2023

## Parts of the watch



1. Touch screen
2. Side button
3. Microphone
4. Charging pins
5. Heart rate, blood pressure and oxygen sensor
6. Speaker

**NOTE:** The images in this guide are for reference only. Your watch may be a different colour.

## First Time Use

Charge your watch before using for the first time, you will need to charge it for about 3 hours.

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337