 





### 1 Have you got everything?

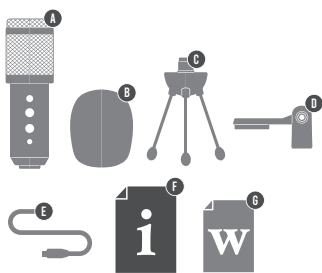

- A. Condenser Microphone
- B. Foam Cap
- C. Tripod
- D. Microphone Mount
- E. USB Cable
- F. User Guide
- G. Warranty Certificate
 
### 2 Product Overview




- A. MUTE: Press the button to mute the microphone (The button will light up red). Press again to unmute (button light will be off).
  - B. ECHO KNOB: Adjust the knob to increase/decrease the echo of the microphone.
  - C. VOLUME KNOB: Adjust the knob to increase/decrease volume level.
  - D. HEADPHONE JACK: Connect to your headphones for monitoring audio playback.
- Note:** The volume knob is for adjusting the microphone and will not adjust the headphones volume.

### 3 Operation

 
#### Setting Up

- Extend the tripod legs so that the tripod can stand on a flat surface.
- Screw the microphone mount onto the tripod as illustrated, ensuring it is securely screwed in.
- Screw the condenser microphone onto the microphone mount until it is securely locked in.
- Cover the microphone with the supplied foam cap to avoid wind noise and distortion.

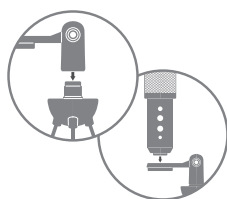

#### Connect to Computer

 - Plug in the supplied USB cable to the USB port on the bottom of the microphone as illustrated, and the other end to a USB port on your PC/laptop.
- Once connected, your PC/laptop will automatically recognize the device and install the driver.

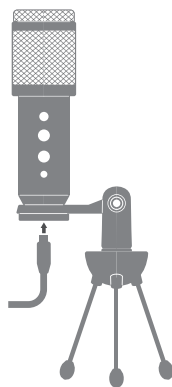

#### For Windows:

- Go to Device Manager > Audio inputs and outputs > The "Bauhn Microphone" should appear.

#### For MacOS:

- Open system preference and select Sound.
- Select "Bauhn Microphone" for both the input and output tab options.
- Note: A USB hub (not included) is required if your MacOS system does not have a USB port.

#### Voice Recorder

- You will need to install the relevant software for this function to work.

#### For Windows:

- Download and install the Windows Voice Recorder (if not already installed) on the Microsoft store.

#### For MacOS:

- Download and install the Voice Memo app (if not already installed) on the apple store.

### Troubleshooting

#### No volume

- Ensure you are not on mute.
- Adjust the volume knob.

#### Computer cannot detect microphone

- Ensure the USB cable is securely connected on both the microphone and your laptop/PC.
- Open the control panel. Select "Add a device" tab and manually search & install the microphone.



## Specifications

USB Input	5VDC, 1A
Dimensions	160 x 55 x 48mm
Weight	230g (not including tripod)

Give us a call



What? You mean this User Guide didn't have ALL the answers? Speak to us!  
We'd love to help you get up and running as quickly as possible.

Call our **After Sales Support** on **1300 002 534**.

Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

## General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

### IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat sources.

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Do not expose the product to microwaves.

Clean using a dry cloth only - do not use water or chemicals.

Keep the product away from oils, chemicals or any other organic liquids.

Use this appliance only for its intended purpose as described in this guide.

#### Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

#### Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Enjoy using your product!

Well done, you made it.  
Now sit back and relax... your product is automatically covered by a 1-year warranty.  
How nice!

