

BAUHN®

STYLUS PEN

Simply unscrew the cap and it is ready to use!



To replace the stylus tip, pull out as pictured below and simply insert the supplied replacement stylus tip.



AFTER SALES SUPPORT

W¹



AUS

1300 002 534



tempo.org/support

MODEL: ABTWPDQ-0224-S PRODUCT CODE: 715115 02/2024