



## 1 Have you got everything?



- A. 35mm Disposable Camera
- B. User Guide
- C. Warranty Certificate

## 2 Product Overview

- A Flash** For taking images in low light. Use on indoors, on cloudy days or at night. Use the flash when subject is from 1-3 meters away.
- B Camera Lens** Keep clean and free for dust or dirt.
- C Flash button** Press and hold the button to arm the flash. The flash is ready when the flash ready indicator, lights up red.
- D Film Advance Winder** For winding the film forward, ready to take another photo. Turn the wheel until it stops. You may hear a small click.
- E Camera shutter button** Once you can see the image you want through the view finder. Press the camera shutter button to take a picture.
- F View Finder** Looks through here to point your camera at the subject you wish to photograph.
- G Photo Number indicator** Displays how many photo are left to be taken.
- H Flash Ready indicator** Red LED will light up when the flash is ready.



### Taking a photo

1. Stand between 1M to 3M from subject.
2. Turn the film advance winder until it stops.
3. Press and hold the flash button until flash ready light comes on.
4. Press camera shutter button to take picture.
5. After the last photo is taken, turn the advance wheel until the E/O appears in the counter.

## Troubleshooting

Film not winding on	<ul style="list-style-type: none"> <li>• Check how many photos have been taken</li> <li>• Has the film already been wound forward. It maybe ready to take a photo.</li> </ul>
Flash not firing	<ul style="list-style-type: none"> <li>• Press the flash button at the front of the camera before taking a picture.</li> <li>• Check for the red LED at the top of the camera. This indicated the flash is charged and ready.</li> </ul>
Camera shutter button not depressing	<ul style="list-style-type: none"> <li>• Has the film been wound forward?</li> <li>• Is the film finished? the number on the indictaor at the top of the camera, displays the number of photos left to take.</li> </ul>
Can not see through view finder	<ul style="list-style-type: none"> <li>• Ensure that your camer view finder is clear of dirt or grease. Check both front and back of view finder.</li> </ul>

## Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us!  
 We'd love to help you get up and running as quickly as possible.  
 Call our **After Sales Support** on **1300 002 534**.  
 Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

## Enjoy using your product!

Well done, you made it.  
 Now sit back and relax... your product is automatically covered by a 1-year warranty.  
 How nice!





# Specifications

Disposable 35mm Camera	Single use only
Available images	Loaded with ISO 400 film 27 exposures
Battery	1 x AA Battery (inbuilt - non replaceable)
Focus Free	Distance 1m - ∞
Built in flash	Usable upto 3m
Camera size	126(W) x 63 (H) x 37 (D)mm
Camer Weight	92g (approx.)

## General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

### IMPORTANT

#### Usage Environment

- When using the equipment, make sure to place it:
- Away from heat sources such as radiators, heat registers, stoves or other equipment (including amplifiers that produce heat.
- Away from areas with high temperatures, high humidity or direct sunlight.
- Away from excess dirt and dust.

#### Usage Conditions and Restrictions

- Instructions: Follow the instructions in this manual when installing and adjusting this equipment. Only adjust those controls that are covered in this instruction manual, as improper adjustment of other controls may result in damage.
- Usage restriction: The equipment is not intended for use by persons (including children) with reduced
- physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given
- supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children: Young children should be supervised to ensure they do not play with the equipment. Close
- supervision is always necessary when an appliance is used by or near children.
- Ventilation: Openings on the cabinet are provided for ventilation and to protect the unit from overheating. To
- ensure proper operation, do not cover the openings.

- Protect the equipment: Prevent metal objects falling onto the equipment. Do not place heavy objects on
- top of the equipment or step on it. Do not place objects filled with water or naked flame sources (such as
- candles) near the equipment.
- This product is to be used for indoor use only.

#### Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

#### Responsible disposal of the packaging

The packaging of the product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

#### Cleaning the product

Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power sockets and plug pins with a clean, dry cloth.



#### WARNING!

DO NOT look directly at the flash or risk your eye damage.