

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the speaker, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat sources.

Only charge the product via the supplied USB cable. Do not charge it any other way.

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Do not expose the product to microwaves.

Keep the product away from oils, chemicals or any other organic liquids.

Do not place speakers too close to ears. Damage may occur to ear drums, especially in young children.

Use this appliance only for its intended purpose as described in this guide.

Battery:

Do not expose the device to very low or high temperatures, which may cause device or battery failure, fire or explosion.

Do not shake the equipment, batteries and charger excessively, which may cause device or battery failure, fire or explosion.

The battery incorporated in this device is non user-replaceable, do not attempt to replace the battery yourself, replacing the battery may compromise safety of the device and void warranty.