

General Safety Warnings

Read the manual thoroughly before first use and keep it in a safe place for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

- **Environment:** Do not use this product where it is excessively hot, cold, dusty or humid, or where it is exposed to strong magnetic fields or long periods of sunshine.
- **Water:** Do not expose this product to water; do not use it where it can fall into water (such as near a pool, pond, bath etc.).
- **Handling:** Do not drop this product or shake it vigorously to avoid damaging it.
- **Volume:** Always select the appropriate volume when using the music or video function. The volume should not be too loud when using earphones. If the sound distorts, turn down the volume or turn off the device.
- **Battery:** Please note that the battery can only reach top performance level after it has been fully charged and discharged two or three times.
- **Usage:** The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the device inappropriately. Close supervision is necessary when the device is used by or near children.
- **CAUTION!** Battery safety: There is a risk of explosion if the battery is replaced with an incorrect type. Safely dispose of used batteries according to the instructions.
- **Back-up:** To avoid loss of data, we recommend always backing up any important information, especially before upgrading the hardware. We assume no liability for any damage and/or data loss due to lack of back-up.
- **Accessories:** Only use the device with the accessories that are supplied. Use of other accessories not recommended in this manual may cause damage to the product and will void your warranty.
- **Usage:** Only operate the device according to the instructions in this manual. We assume no responsibility for faulty use or inappropriate handling.

Maintenance

- Keep the device dry. Do not let the device, battery or charger come into contact with water vapour or operate it with wet hands. Contact with water will cause the device to short-circuit, corrode or cause electric shock.
- Do not shake the equipment, batteries and charger excessively, which may cause device or battery failure, fire or explosion.

- **Cleaning:** Clean the housing of the device lightly with a dry or moist cotton cloth. Do not use alcohol, thinners, benzene or any other chemical cleaners.
- **Repair:** This device is a high precision electronic product. It contains no user-serviceable parts inside. Do not try to dismantle, modify or repair it yourself.
- **Damage:** In case of damage, contact the After Sales Support line for advice.
- **Disposal:** Observe local regulations and dispose of this device appropriately for recycling. Contact your local authorities for advice on facilities.
- **Unpacking the product:** Unpack the product and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the product when it is not in use.
- **Climate:** If moving the product from one location to another, for example from a cold environment to a warm one, allow sufficient time for the apparatus to acclimatise to the new location before switching on. In tropical climates, keep the air surrounding the unit sufficiently dry to avoid condensation forming.

Maintenance

- Do not expose the device to very low or very high temperatures, which may cause device or battery failure, fire or explosion.
- Do not disassemble the device and accessories. Disassembly by unauthorised persons will void the warranty.

Safety

- Do not use the device while driving, so as not to impede safe driving regulations.
- In health facilities, observe the relevant rules or regulations. Turn off the tablet in the vicinity of medical devices.
- Obey all regulations when boarding an airplane in order to avoid interference with aircraft radio signals.
- Stay away from magnetic equipment; Tablet radiation may erase the information stored on the device.

