

1 Have you got everything?



Note: Only one charger (black or white) is supplied.

- A. 3 in 1 Foldable Wireless Charger
- B. 1 x USB-C Cable
- C. 1 x USB-A to C Adaptor
- D. User Guide
- E. Warranty Certificate



 
Note: USB-C cable and adaptor included



Product Overview

2

- A. Earbuds charging pad
- B. Mobile phone charging pad
- C. Smart Watch charging pad
- D. USB-C port
- E. Charging LED indicator

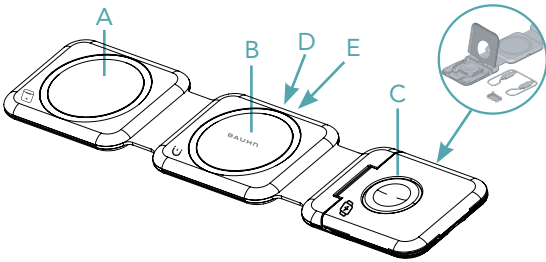


Operation

Connect to power source


Take out the USB-C cable and the USB-A to C adaptor from the cable compartment. Plug in the cable into a power source and plug in the other end into the 3 in 1 foldable wireless charger.

 Make sure the power source is switched on and working. The charging indicator turn on for 3s and then turn off as the charger enters standby mode.

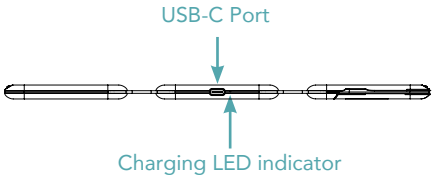


Charging your devices

 1. Wireless charging pad for compatible earphones or earbuds devices.
2. Wireless charging pad for compatible mobile phones. Place your mobile phone on the centre of the charging pad, display screen facing up to charge.
3. Wireless charging pad for smart watches that supports wireless charging. Place the back of the smart watch against the charging pad to charge.
Note: Smart watch charging pad has no LED indicator.

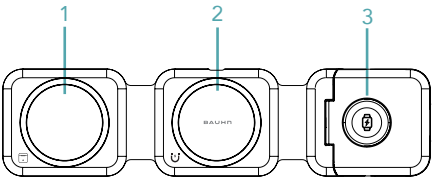

Charging Layout Method

 
The 3-in-1 foldable wireless charger can be set up in various ways for charging depending on your preference.

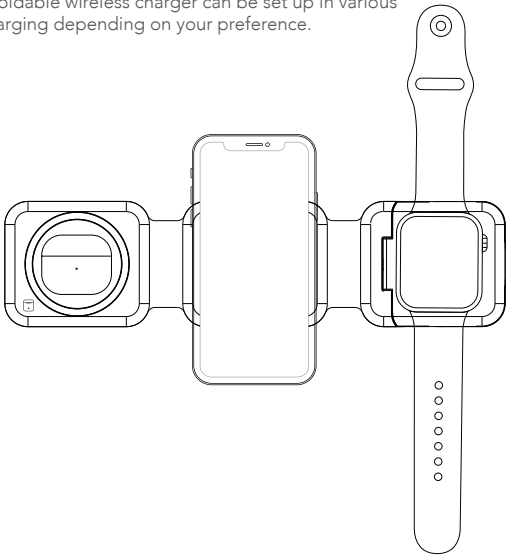

Open Layout


- Full layout for charging the one device, smart watch, and earbuds at the same time.

 Folded Layout



- Folded layout for charging one device only and minimize the required space for operation.

 Pyramid Layout

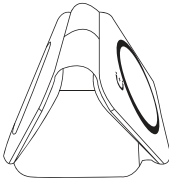

- Pyramid layout for charging the mobile phone and can use as a phone stand in landscape mode.

Troubleshooting



Mobile Phone is not charging

- Check that your smart phone supports wireless charging.
- If you have a smart phone case, you must remove it when charging.



- Ensure the smart phone is facing up, making sure the centre of the smart phone is aligned to the centre of the wireless charging pad.
- Check and remove any metal or other objects between the smart phone and the wireless charging pad.

Smart Watch is not charging

- Check that your smart watch supports wireless charging.
- Ensure the back of the smart watch is aligned to the centre of the wireless charging pad.
- Check and remove any metal or other objects between the smart watch and the wireless charging pad.

Earbuds not charging

- Check that your earbuds case supports wireless charging.
- Ensure the earbuds case is facing up, making sure the centre of the case is aligned to the centre of the wireless charging pad.
- Check and remove any metal or other objects between the earbuds case and the wireless charging pad.

Charging LED indicator does not light up

- Ensure that the USB-C cable is connected to the USB-C port securely.
- The wireless charger enters standby mode.

Charging LED indicator flashing

- If the wireless charging pad encounters interference (metal objects etc.) or the input power is too high, it will enter protection mode and the LED will flash.

Specifications

3 in 1 Foldable Wireless Charger

USB-C Input	5V \approx 3A, 9V \approx 3A
Wireless Output	Magnetic Phone Charger: 15W Max. Watch Charger: 3W Max. Earbuds Charger: 5W Max. Total Output: 20W Max.
Dimensions	260 x 65 x 26mm
Weight	106g

* Output is dependent on input power

** Only supported on some devices compatible with 15W wireless charging.

*** Compatible with Apple watches from series 3 onwards.

Give us a call



What? You mean this User Guide didn't have ALL the answers? Speak to us!
We'd love to help you get up and running as quickly as possible.
Call our **After Sales Support** on **1300 002 534**.
Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat sources.

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Do not expose the product to microwaves.

Clean using a dry cloth only.

Do not use water or chemicals.

Keep the product away from oils, chemicals or any other organic liquids.

Use this appliance only for its intended purpose as described in this guide.

Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Enjoy using your product!

Well done, you made it.
Now sit back and relax... your product is automatically covered by a 1-year warranty.
How nice!