

**BAUHN®**



# 24" Full HD IPS Monitor

**MODEL: A24MT-0125**


## User Manual



**AFTER SALES SUPPORT**

  1300 002 534



 [tempo.org/support](https://tempo.org/support)

MODEL: A24MT-0125 PRODUCT CODE: 718299 01/2025

# Welcome

Congratulations on your purchase!

This manual tells you everything you need to know about using your new BAUHN® product.

Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety. As part of our philosophy of customer service and satisfaction, our products are backed by our comprehensive 1 Year Warranty.

For domestic use only: This product is intended for indoor domestic use only. It is not suitable for commercial, industrial or outdoor use. Do not use this product for anything other than its intended purpose, and only use it as described in this manual.

We hope you will enjoy using your purchase for many years to come.

# Contents


Welcome	2
Contents	3
Product Overview	4
Before Using the Product	5
Installation	6
Connection	7
Position Adjustment	8
Control Panel	9
Operation / OSD Menu	10
Second Screen Mode	13
Troubleshooting	14
Specifications	16
Compliance and Responsible Disposal	17
Safety Strap Installation	18
Warranty Information	19

# Product Overview


## What's in the box

Before setting up your new product, check you have everything:


- A. 24" Full HD IPS Monitor
- B. Leg Stand
- C. Power Adaptor
- D. HDMI Cable
- E. User Manual
- F. Warranty Certificate
- G. General Safety Warnings

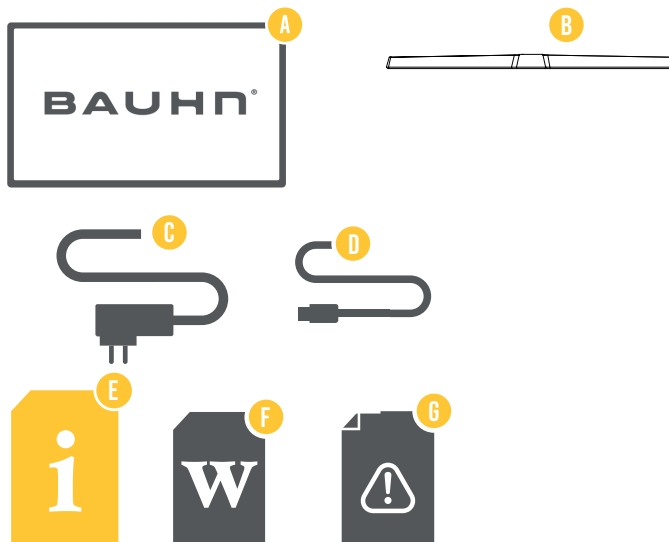


# Before Using the Product

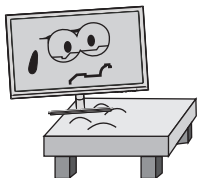


Please put the monitor in a flat plane to avoid falling and damage.

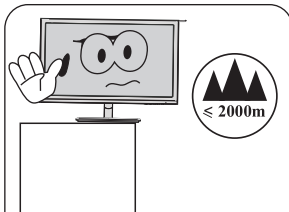


The warning signs are marked on the back of the monitor, indicating that the adapter is only for safe use at an altitude of 2000m and below.

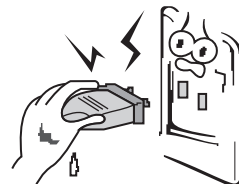


Do not plug with wet hands, it may cause electric shock. Please make sure that the plug is in good contact. Poor contact may cause a fire.

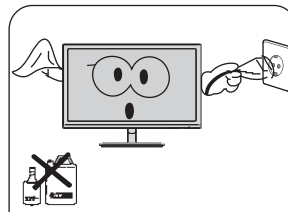


Please unplug the monitor when cleaning. Do not use industrial chemicals, and be careful not to let water come into contact with the monitor.

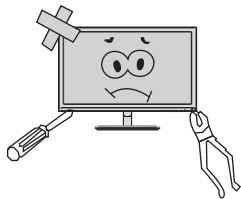


Please do not disassemble the monitor by yourself. Contact our Support Team if there is a malfunction.

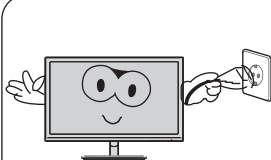

If there is any abnormal smell or sound inside the monitor, please cut off the power immediately and contact our Support Team.

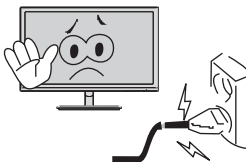

Never use a damaged power plug. Be careful not to place the power cord near any heat source. Doing so may cause electric shock or fire.

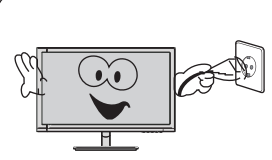

Please cut off the power, if you do not use the monitor for a long time, otherwise, it may cause electric shock or fire.



Note:




For other questions about the monitor, please contact



1300 002 534

[tempo.org/support](https://tempo.org/support)


# Installation

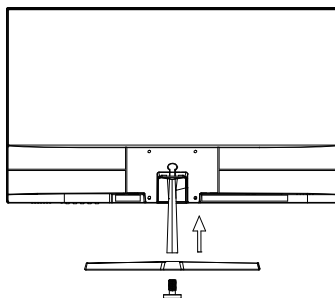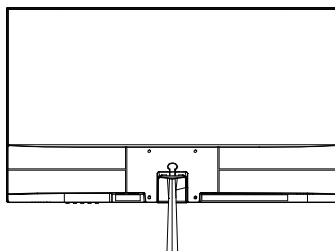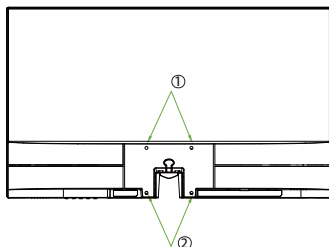

1. First, place the monitor face down on a flat surface with a soft cloth underneath.

2. Slide the neck attachment into the back cabinet aligning the plastic slots with the metal neck attachment. Slide forward until a click is heard. If at any stage the stand is to be removed, press the plastic tab on the rear cabinet and slide the neck backwards.


3. Align the base with the base screw hole and insert the screw to fix it

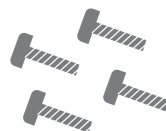







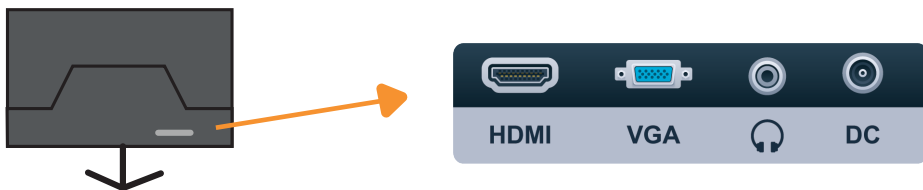

4 screws  
Diameter 4mm  
Length 8mm and 10mm

# Connection

## Connecting the cable



HDMI			SOUND & PICTURE	All-digital connection between the monnitor and computer. Supports Full HD resolution. Requires a HDMI cable (included).
VGA			PICTURE	Analog connection between the monitor and any computer. Supports Full HD resolution. Requires a VGA cable (not included).
Headphone			SOUND	Connect to your headphones, amplifier or audio device, using an AUX cable (not included).
DC IN			DC IN	DC power connection. Use only the supplied DC adaptor.

Your monitor can connect to a computer via HDMI or VGA cable.

The preferred way to connect your monitor is via the included HDMI cable as this will provide the best picture quality.

Simply plug one end of the cable into the HDMI port and the other end into your computer.


To connect via VGA cable, use a VGA cable (not included) and plug into the VGA port shown above.

# Position Adjustment

## Adjust the Angle



The screen can be tilted forward and backward. The specific adjustment angle depends on different models. Generally, it is  $5\pm 2$  degrees forward and  $15\pm 2$  degrees backward.

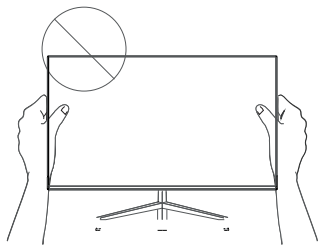


When adjusting the position of the monitor, be careful not to touch or press the screen area.


### Safe wall mounted installation, using wall mounted installation method (not provided)

1. Remove the base;
2. Please install the monitor on the wall using four M4 \* 10mm screws and bolts, as well as the wall \ mounting kit. (Not provided)



# Control Panel
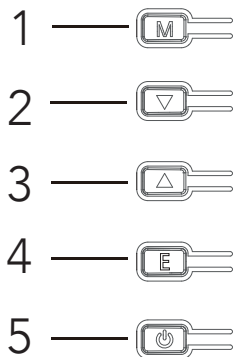
## Key Indication

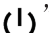 




1	“M”	Activate OSD menu or function confirmation.
2	“▼”	When the menu is activated, it acts as the up or right selection key. Long press to decrease the progress bar. When the menu is closed, it also acts as the volume key.
3	“▲”	When the menu is activated, it acts as the down or left selection key. Long press to increase the progress bar. When the menu is closed, it also acts as the volume key.
4	“E”	When the menu is activated, it acts as an exit key. When the menu is closed, press this button to enter the auto-adjustment function. The auto-adjustment function will automatically set the horizontal or vertical position, clock and focus.
5	“  ”	Power Button; press this button to turn on/off the monitor.



# Operation / OSD Menu

OSD Menu	Primary Menu	Secondary Menu	Description
	BRIGHTNESS	0-100	Adjust brightness
	CONTRAST	0-100	Adjust contrast
	ECO	MOVIE	Movie usage mode
		GAME	Game usage mode
		STANDARD	Standard usage mode
		RTS	RTS usage mode
		FPS	FPS usage mode
		TEXT	Text usage mode
	DCR	ON	Turn on dynamic contrast
		OFF	Turn off dynamic contrast
	HDR MODE	AUTO	Automatically adjust HDR mode
		2084	Adjust to 2084 mode
		OFF	Turn off HDR MODE
	H.POSITION	0-100	Adjust the horizontal position of the image (used under VGA)
	V.POSITION	0-100	Adjust the vertical position of the image (used under VGA)
	CLOCK	0-100	Adjust the image clock to reduce vertical line noise (Used under VGA)
	PHASE	0-100	Adjust image phase to reduce horizontal line noise (Used under VGA)
	ASPECT	16:9	Adjust the image scale to 16:9 mode
		4:3	Adjust the image scale to 4:3 mode

# Operation / OSD Menu Cont.

OSD Menu	Primary Menu	Secondary Menu	Description
	COLOR TEMP.	WARM	Set as warm color temperature
		COOL	Set to cool color temperature
		USER	User defined settings
	RED	0-100	Adjust the red color temperature (in user setting mode)
	GREEN	0-100	Adjust green color temperature (in user setting mode)
	BLUE	0-100	Adjust blue color temperature (in user setting mode)
	SATURATION	0-100	Adjust saturation
	LOW BLUE LIGHT	0-25-50-75-100	Adjust low blue light mode
	LANGUAGE	NOTHING	(ENGLISH、FRANÇAIS、  体中文、DEUTSCH、ITALIANO、ESPAÑOL、PORTUGUÊS、TURKE、POLSKI、NEDERLANDS、日本語、한국)
	OSD H. POS.	0-100	Adjust the horizontal position of OSD
	OSD V. POS.	0-100	Adjust the vertical position of OSD
	OSD TIMER	0-60	Adjust OSD display time
	TRANSPARENCY	0-100	Adjust OSD transparency


# Operation / OSD Menu Cont.


OSD Menu	Primary Menu	Secondary Menu	Description
	IMAGE AUTO ADJUST	NOTHING	Automatically adjust the horizontal/vertical position, focus, and clock of the image
	COLOR AUTO ADJUST	NOTHING	Perform color white balance adjustment
	RESET	NOTHING	Load Factory Default Settings
	SIGNAL SOURCE	VGA	VGA (analog) signal input
		HDMI	HDMI (digital) signal input
	BLACK LEVEL	0-100	Adjust the black level mode
	VOLUME	0-100	Speaker volume adjustment
	OD	ON	Open response time
		OFF	Close response time

# Second Screen Mode

## Display Mode Settings

- Once you have connected the monitor to your PC/laptop, select screen resolution/display settings on your PC/laptop.
- Choose the desired display mode.

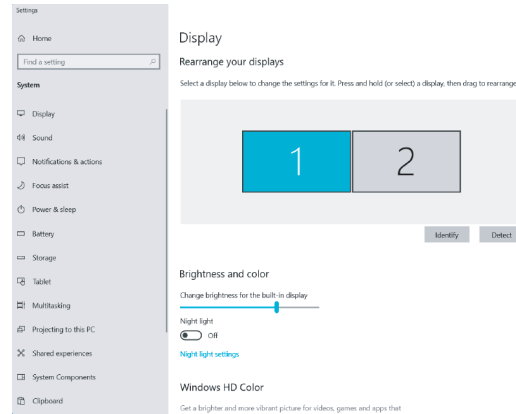

- For Windows 10 computers, you can also press the keyboard  + "P" button to quickly choose the display mode.
- Images are for reference only. Your PC/laptop version may look different to the above image.
- For Windows 11 computers, Press Win + I on your keyboard to quickly launch the Settings app.
- Select System from the left sidebar and then click Display on the right.

# Troubleshooting

 
Problems	Possible solution
The power indicator does not light up	Check if the power is turned on and whether the power cable is connected.
Can't achieve plug and play	Whether the PC matches with plug and play. Whether the display card matches plug and play. Whether the 15-pin D-type connector of the signal cable is bent.
Dim image	Adjust brightness and contrast.
The image bounces or a ripple appears	There may be electrical equipment causing electronic interference nearby.
The power indicator is on (flashing), but there is no image on the monitor	Whether the computer power is turned on. Whether the computer keyboard is plugged in. Whether the signal cable of the monitor is correctly connected to the computer. Check the monitor signal cable plug and make sure that the ends are not bent. Observe the indicator light by pressing the Caps Lock key on the PC keyboard to confirm whether the computer is working.

# Troubleshooting

Problems	Possible solution
Lack of color (red, green, blue)	Check the monitor signal cable and make sure that the pins are not bent
The picture is not in the middle or the size is not right	Adjust the clock (CLOCK)
The image has a color difference (Inaccurate color rendering)	Adjust RGB color or reselect color temperature
Picture fonts are blurred under the VGA signal	Select the hotkey "E"



# Specifications

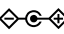Model	A24MT-012523.8"
Screen Size	23.8"
Color	Black
Light Type	LED-backlit
Aspect Ratio	16:9
Optimum Resolution	1920x1080 FHD
Response Time	14ms(MPRT)
Color Gamut	16.7M , 72% NTSC
Brightness	250cd/(Typ.)
Refresh Rate	75Hz (HDMI、DP)
Visual Angle	89/89/89/89 (Typ.)(CR≥10)
Interface	HDMI, VGA Headphone(Output)
Adaptor Input	100-240V~,50/60Hz 1.0A Max
Adaptor Output	12.0V $\equiv$ 2.5A 
Adaptor Model	Use only with <BSY036A120250S W> supply unit
Product Size	540*319mm (+Base)
Base Size	280*99mm (Detachable)
Net /Gross Weight	2.6kg / 3.9Kg
Wall Mounting	Supported VESA Aperture of M4

## Conditions

Storage Temperature	-20°C to 45°C
Operating Temperature	0°C to 40°C
Operating Humidity	10% to 85%

## For Technical and Warranty Support

1300 002 534

[tempo.org/support](http://tempo.org/support)

Distributed by Tempo (Aust) Pty Ltd,

PO BOX 6097, North Sydney NSW 2059, Australia

# Compliance and Responsible Disposal



## Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children. Please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.



## Product

At the end of its working life, do not throw this product out with your household rubbish.

An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



## National Television and Computer Recycling Scheme

The careful disposal of e-waste is important because many televisions and computers contain materials which are hazardous to people and the environment. There are no fees for householders or small businesses disposing of e-waste at a scheme collection service.

Individuals can contact their local council for information on local e-waste management services, find scheme services listed on Planet Ark's website at [www.recyclingnearyou.com.au](http://www.recyclingnearyou.com.au), or call Planet Ark on 1300 733 712.

## Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.





**BAUHN®**

## Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





**BAUHN®**

## **Repair and Refurbished Goods or Parts Notice**

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 002 534 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252  
PO BOX 6097, North Sydney NSW 2059, Australia  
Telephone: 1300 002 534 (Aust) Fax: (02) 8977 3765  
Tempo Help Desk: 1300 002 534 (Aust)  
(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)  
Email: [tempo.org/support](mailto:tempo.org/support)

## Online support

Visit [bauhn.com.au](http://bauhn.com.au) for the latest User Manual.

## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 002 534.

ALDI guarantees that our products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



### Please read the manual

It will help you get the best out of your product.

### Still have questions?

Call After Sales Support

**1300 002 534**

Or visit [tempo.org/support](http://tempo.org/support)

### AFTER SALES SUPPORT



AUS 1300 002 534



[tempo.org/support](http://tempo.org/support)

MODEL: A24MT-0125 PRODUCT CODE: 718299 01/2025

# 1

YEAR WARRANTY