 


1 Have you got everything?

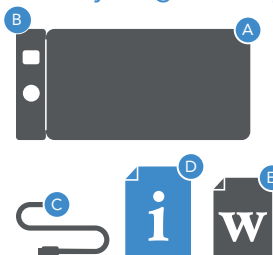

 
- A. Desktop Mat
- B. Wireless Charging Pad
- C. USB-C Cable
- D. User Guide
- E. Warranty Certificate



Product Overview

2

- A. USB-C port
- B. LED indicator light
- C. Earbuds charging pad
- D. Smart phone charging pad
- E. Detachable charging pad

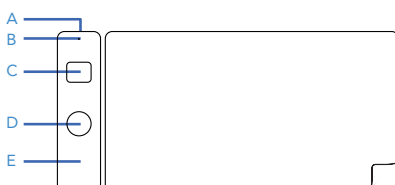

3 Operation

 
Connect to a power source

- Use the supplied USB cable and connect to the USB-C port on the product and the other end to a power source. The LED indicator will light up white.

Charging smart phone and/or earbuds


- Ensuring the wireless charging pad is connected to a power source with the supplied USB-C cable, place your smart phone face up on the smart phone charging pad and put earbuds on the earbuds charging pad.
- The LED indicator will light up green when charging either the smart phone and/or earbuds.

Note: Your smart phone and earbuds must support wireless charging.

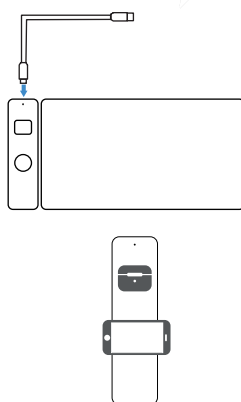

Detaching charging pad or changing sides

 - Your wireless desktop charging mat can be aligned left or right.
- To change which side the wireless charging pad sits on, please detach it, then rotate the desktop mat 180°.
- Now you can reconnect the wireless charging pad to the desktop mat.

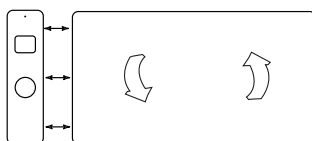

Troubleshooting



Cannot charge smart phone

- Check that your smart phone supports wireless charging.
- If you have a smart phone case, you must remove it when charging.
- Ensure the smart phone is facing up, making sure the centre of the smart phone is aligned to the centre of the charging pad.
- Check and remove any metal or other objects between the smart phone and the charging pad.
- Note: If the wireless charging pad encounters interference as mentioned above it will enter protection mode and the LED will flash green.

Cannot charge Earbuds case

- Check that your earbuds case supports wireless charging.
- Ensure the earbuds case is facing up, making sure the centre of the case is aligned to the centre of the charging pad.
- Check and remove any metal or other objects between the case and the charging pad.
- Note: If the wireless charging pad encounters interference as mentioned above it will enter protection mode and the LED will flash green.

LED indicator light does not light up

- Ensure that the USB-C cable is connected to the USB-C port securely.
- Check that the power source is switched on.
- Ensure that the power supply voltage is in the correct range.



Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible.

Call our **After Sales Support** on **1300 002 534**.

Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

PO BOX 6097, North Sydney NSW 2059 Australia

Enjoy using your product!

Well done, you made it.

Now sit back and relax... your product is automatically covered by a 1-year warranty.

How nice!





Specifications

Output:	Magnetic Wireless Output for Smart Phone: 5W, 7.5W, 10W, 15W Wireless Output for Earbuds: 5W Max. Total Output: 15W Max.
USB-C Input:	5V = 3A, 9V = 3A
Dimensions:	780 x 370 x 8.5mm (when laid out flat)
Weight	560g

* Output is dependent on input power

** Only supported on some devices compatible with 15W wireless charging.

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging Paderials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat sources.

In case of damage, do not disassemble, repair or modify the product yourself.

Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only. Children should be supervised to ensure they do not play with the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Do not expose the product to microwaves.

Clean using a dry cloth only - do not use water or chemicals.

Keep the product away from oils, chemicals or any other organic liquids.

Use this product only for its intended purpose as described in this guide.

Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly Paderials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging Paderials are out of reach and are safely disposed of. Please recycle these Paderials rather than throwing them away.

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw Paderials can be recycled. Electrical and electronic items contain Paderials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.