

User Guide

Model: AMPDQ-0525-MP

4 in 1 Multiport Wireless Charging Station

1 Have you got everything?



Note: Only one charging station (black or white) is supplied.


- A. 4 in 1 Multiport Wireless Charging Station
- B. Power Adaptor
- C. USB-C Cable
- D. User Guide
- E. Warranty Certificate



Product Overview

.

- A. Wireless Charging Pad
- B. Wireless Charging LED Indicator
- C. Ambient Light Button
- D. USB-C Output
- E. USB-A Output
- F. USB-C Input

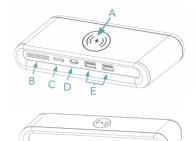

Operation

Connect to a power source

Connect the supplied power adaptor and USB C cable to the $4\ \text{in}\ 1$ multiport wireless charging station.

Make sure the power source is switched on and working. The charging station will power on and works standby mode.

Note: Please always use the supplied power adaptor.

Otherwise, the charging station may not work properly if the input power source does not have sufficient power input.

 
Charging your devices

- 1. Wireless charging pad Place your smart phone facing up on the wireless charging pad. Once the phone is correctly aligned, the charging process will auto start. The wireless charging LED indicator solid blue light indicates the charging is in progress. If the LED is off, your mobile phone may not support wireless charging, or it is not aligned to wireless charging pad or it is fully charged.
- Charging devices using the USB-C port Plug one end of your USB-C cable into the USB-C port, and the other end into your mobile device.
- 3. Charging devices using the USB-A port Plug one end of your USB-A cable into the USB-A port, and the other end into your mobile device.

Using the ambient light

Press the ambient light control button to turn on/off the light and switch the light mode.









Troubleshooting



Wireless charging not working

Check that your smart phone supports wireless charging.
 If you have a smart phone case, you must remove when charging.

 Ensure your smart phone is facing up and aligned to the centre of the wireless charging pad, and remove any metal or other objects between the smart phone and the wireless charging pad.

No output from th

USB ports

Check that the USB cable is connected securely to the USB port and/or try a different USB port.

No power output or not work properly

- The total output current for the USB ports are 3A. Remove devices using the other USB ports.
- Use another USB cable
- The charging station may not work properly if the input power source has no sufficient power input.
- Please always use the supplied power adaptor.



Specifications

Input	USB-C 12V 3A
Output	Wireless Output: 5W, 7.5W, 10W, 15W USB-C1 / A1 / A2 Output: 5V == 3A (Total USB Output 15W Max if more than 1 output use)
Ambient Light	8 light mode

Ambient Light 8 light mo

Dimensions 174 x 82 x 34mm

Weight 165g

* Output is dependent on input power
** Only supported on some devices compatible with 15W wireless charging







What? You mean this User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible. Call our After Sales Support on 1300 002 534.

Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Do not expose the product to microwaves.

Clean using a dry cloth only.

Do not use water or chemicals

Keep the product away from oils, chemicals or any other organic liquids.

Use this appliance only for its intended purpose as described in this guide.

Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Enjoy using your product!

