

1 Have you got everything?



- A. Solar Powerbank 20000mAh
B. Compass
C. Detachable Hook
D. USB-C Cable
E. User Guide
F. Warranty Certificate

Product Overview

2



1. Power Button
2. Camping & SOS Light
3. Solar Panel
4. Wireless Charging Pad
5. USB I/O Ports
6. Solar Charging LED Indicator (Red)
7. Fast Charging LED Indicator (Green)
8. Battery LED Indicators (White)
9. Wireless Charging LED Indicator (Blue)
10. Hook

3 Operation

Install the Hook

- The compass and hook can be installed on your power bank.
- Note:** Because of slight variations in the magnetic field, your compass may not point to North on your map, it will point to Magnetic North.

Charging your device

- Press the power button to turn the power bank on.
- Connect the supplied USB-C cable or your devices cable to the relevant port and the other end to your device.
- Press and hold the power button for 3 seconds to turn the power bank off. If no devices are being charged or the charging load is too low, the power bank will turn off after about 30 seconds.

Charging your power bank

- Connect the supplied USB-C cable to the USB-C port of the power bank and the other end to your power source. The battery LED indicators will blink.
- The USB-C port can be used for both charging the power bank and device.
- Solar charging in direct sunlight environment. A hook has been provided for attachment to backpack or hook.

Note: The built-in 1.5W solar charging panel is used to extend the usable charging environment and should not be relied on as the only charging method. It is always recommended to use USB-C for fast charging.

Wireless Charging


- Place your smart phone facing up on the wireless charging pad. Once the phone is correctly aligned, the charging process will auto start.
- Note:** If the LED indicator is flashing blue, this means an error has occurred. Either the smart phone does not support wireless charging or other objects are obstructing the wireless charging pad.

Fast Charging

- When charging your devices or charging your power bank, the fast charging LED indicator will light up if fast charging is activated.
- The power bank will auto quit fast charging mode if using more than one output.
- Charge device whilst charging power bank will auto quit fast charging mode.

Camping & SOS Light

- Double click power button to turn the LED camping light ON/OFF.
- Press again to switch modes (Always on / ECO mode / SOS light / Flashing).
- When on, press and hold the power button to increase or decrease the lamp brightness.

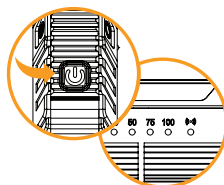

LED Light (● ON ○ OFF ◐ Flashing)	Capacity
○ ○ ○ ○	0%
○ ○ ○ ○	<5%
● ○ ○ ○	5%-25%
● ● ○ ○	25%-50%
● ● ● ○	50%-75%
● ● ● ●	75%-100%

Troubleshooting



Cannot charge device

- Make sure the USB cable is plugged into the output port; unplug the USB cable and try again.
- Try another USB cable and/or USB port.
- Some devices require higher outputs to charge. Please check with your devices spec to confirm compatibility.
- The power bank will turn off automatically when an minimum load (about 80mA) is not detected.
- The power bank has built-in temperature protect sensor. Keep the power bank away from heat and high temperatures.

Wireless charging not working

- Check that your smart phone supports wireless charging.
- If you have a smart phone case, you must remove when charging.
- Ensure your smart phone is facing up and aligned to the centre of the wireless charging pad, and remove any metal or other objects between the smart phone and the wireless charging pad.

No indicator when charging device

- Connect the power bank to your power source to ensure the power bank has sufficient battery.
- Press the battery status button to check battery status.

4 CARE & CLEANING

- Clean the solar panel with a damp cloth. Do not use any chemicals or abrasives.
- Keep the solar panel free from debris to allow the battery to charge properly.

Enjoy using your product!

Well done, you made it.

Now sit back and relax... your product is automatically covered by a 1-year warranty.

How nice!



Specifications

Input	USB-C or Micro USB, 5V=2A, 9V=2A, 12V=1.5A
Output*	USB-C, 5V=3A, 9V=2.22A, 12V=1.67A USB-A1/A2, 5V=3A, 9V=2A, 12V=1.5A Wireless output 15W Max. Total output 20W Max if more than 1 output in use.
Battery	Li-ion Polymer 3.7V 20000mAh, 74Wh
Solar Panel	DC 5.5V, 1.5W Max
LED Light	1W
Ta	25°C
Dimension	182 x 94 x 29mm
Weight	560g

* Output is dependent on the mobile device's input power and the charging cable.



Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us! We'd love to help you get up and running as quickly as possible. Call our **After Sales Support** on **1300 002 534**.

Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming this product, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Do not expose the product to microwaves. Keep the product away from oils, chemicals or any other organic liquids.

Use this appliance only for its intended purpose as described in this guide.

Notes for battery disposal

The batteries used in this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information please contact your local authority or retailer where you purchased the product.

Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



CAUTION

This appliance contains batteries that are non-replaceable.