


1 Have you got everything?

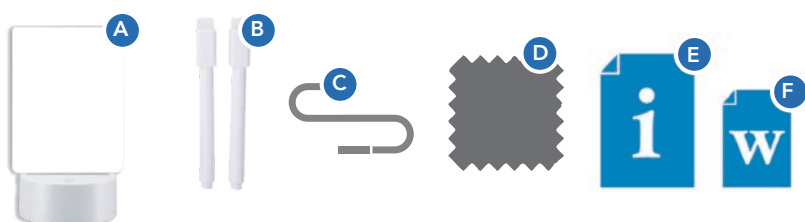

Unpack the box (be gentle) and make sure all of these items are there:

- A. 1 x LED Noteboard with Stand
- B. 2 x Markers
- C. 1 x USB-C Cable

- D. 1 x Cleaning Cloth
- E. 1 x User Guide
- F. 1 x Warranty Certificate

2 Product Overview



3 Operation

1. Power On/Off

- Install the noteboard onto the base stand.
- Remove the protective paper before writing on the transparent noteboard.
- Connect the supplied USB cable to the USB-C port of the stand and the other end to your computer or power adaptor (not included).
- Touch the button to turn on/off the LED light and switch the light mode.
- Touch and hold the button for 2s to turn off the LED light.


2. Changing light mode

- The light will turn on once the power is on. The default light is white.
- Touch the button to cycle through the different light modes.

3. Battery Replacement

- The noteboard stand can also be powered by 3 x AA alkaline batteries (not included).
- The LED light brightness will drop when the remaining battery capacity is low.
- When the batteries require replacement, replace with 3 x AA alkaline batteries. Following the polarity (+/-) diagram in the compartment. Do not mix old and new batteries, or mix different brands or types of batteries.

Note: Replace the battery in a timely manner when the power is low, as failing to do so may lead to liquid leakage and potential damage to the device.

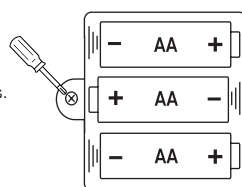

Troubleshooting

Screen not lighting up

- Check that you are connected to a power source. (USB adaptor or computer source.)
- Check the batteries in good condition.
- Replace batteries as necessary.
- Check if the batteries are empty. Replace as necessary.

Enjoy using your product!

Well done, you made it.
Now sit back and relax... your product is automatically covered by a 1-year warranty.
How nice!





Input	USB-C 5V $\overline{\text{---}}$ 0.5A or 3 x 1.5V $\overline{\text{---}}$ (AA Batteries)
Dimensions	Ø 98 x 186mm (Base diameter x height)
Weight	118g



Give us a call

What? You mean this User Guide didn't have ALL the answers? Speak to us!
We'd love to help you get up and running as quickly as possible.
Call our **After Sales Support** on **1300 002 534**
Operating hours: Monday-Friday, 8:30am-6pm; Saturday, 9am-6pm AEST

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1:2022 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.



This symbol indicates that it is for indoor use only.



This equipment is a Class III electrical appliance.

IMPORTANT

Environment: Do not use this product where it is excessively hot, cold, dusty or humid, or where it is exposed to strong magnetic fields or long periods of sunshine.

Water: Do not expose this product to water; do not use it where it can fall into water (such as near a pool, pond, bath etc.).

Handling: Do not drop this product or shake it vigorously to avoid damaging it.

Accessories: Only use the device with the accessories that are supplied. Use of other accessories not recommended in this manual may cause damage to the product and will void your warranty.

Usage: Only operate the device according to the instructions in this manual. We assume no responsibility for faulty use or inappropriate handling.

Usage: The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.

Children: Supervise young children to ensure they do not play with the device inappropriately. Close supervision is necessary when the device is used by or near children.

Cleaning: Clean the housing of the device lightly with a dry or moist cotton cloth. Do not use alcohol, thinners, benzene or any other chemical cleaners.

Repair: This device is a high precision electronic product. It contains no user-serviceable parts inside. Do not try to dismantle, modify or repair it yourself.

Damage: In case of damage, contact the After Sales Support line for advice.

Disposal: Observe local regulations and dispose of this device appropriately for recycling. Contact your local authorities for advice on facilities.

Unpacking the product: Unpack the product and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the product when it is not in use.

Climate: If moving the product from one location to another, for example from a cold environment to a warm one, allow sufficient time for the apparatus to acclimatise to the new location before switching on. In tropical climates, keep the air surrounding the unit sufficiently dry to avoid condensation forming.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture; do not use it anywhere near water; do not touch the adaptor with wet hands.

INTENDED USE

This appliance is only intended for household use.

As this appliance is for household use only, it is not intended for use in and the guarantee will not apply for:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.

MAINTENANCE

Keep the device dry. Do not let the device or power adaptor come into contact with water vapour or operate it with wet hands. Contact with water will cause the device to short-circuit, corrode or cause electric shock.

Do not shake the equipment and power adaptor excessively, which may cause device failure, fire or explosion.

Do not expose the device to very low or very high temperatures, which may cause device failure, fire or explosion.

Do not disassemble the device and accessories. Disassembly by unauthorised persons will void the warranty.

Unplug the unit from the power outlet before cleaning. Clean the unit only with a dry, clean cloth. Do not use liquid or aerosol cleaners.

SAFETY

Do not use the device while driving, so as not to impede safe driving regulations.

In health facilities, observe the relevant rules or regulations. Turn off the tablet in the vicinity of medical devices.

Obey all regulations when boarding an airplane in order to avoid interference with aircraft radio signals.

Stay away from magnetic equipment; Tablet radiation may erase the information stored on the device.

RESPONSIBLE DISPOSAL OF THE PACKAGING

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

RESPONSIBLE DISPOSAL OF THE PRODUCT

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

