


## 1 Have you got everything?

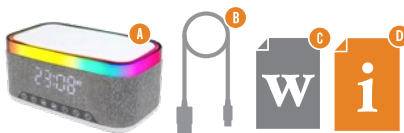

- A. Clock Radio with Wireless Charging
- B. USB-A to USB-C Cable
- C. Warranty Certificate
- D. User Guide

## Product Overview

2

**A LED Display**

**B Wireless Charging Pad**

**C Control Buttons**

**D Microphone**

**E Ambient Light**

**F DC Input (USB-C)**

**G Charging Indicator**

**H Micro SD (TF Card) Input**

**I USB Flash Drive Input**

**J AUX Input**



## 3 Operation

Press POWER (⏻) button for 2 seconds to turn the clock radio on/off.

### Charging the Clock Radio

- When battery is too low, the clock radio will turn off automatically. Connect the supplied USB-C power cable to the DC input. The charging indicator will light up red during charging. Once fully charged, the indicator light will turn off. Charging time is approximately 4-5 hours.
- Note: When using wireless charging pad simultaneously, the clock radio may not be charged before your smart phone fully charged.

### Wireless Charging Pad

- Connect the supplied USB-C power cable to the DC input and the other end to a USB charging adaptor (not included).
- Place your smart phone facing up on the wireless charging pad. Once the phone is correctly aligned, the charging process will auto start. The wireless charging LED indicator solid blue light indicates the charging is in progress. If the LED is off, your mobile phone may not support wireless charging, or it is not aligned to wireless charging pad or it is fully charged.
- Note: Please always connect DC input. Otherwise, the wireless charging pad will not work.

### Bluetooth Mode

- Press MODE (⏮) button for 2 seconds to switch to Bluetooth mode.
- The Bluetooth pairing name is AWCRCM-0925-F. After connected your smart phone, you can play music and directly answer/reject incoming calls through the clock radio.
- The clock radio supports TWS and can pair with another clock radio (same model). Press ALARM (⏻) button twice to switch on/off TWS mode. Once TWS successfully paired with each other, music will now be played on both clock radio simultaneously.
- Press MODE (⏮) button to play/pause music.
- Press PREV/NEXT (⏮) button to select the previous or next track.
- Press and hold PREV/NEXT (⏮) button to adjust volume.

### Micro SD (TF Card) Mode

- Press MODE (⏮) button for 2 seconds to switch to Micro SD (TF Card) mode.

### AUX Input Mode

- Press MODE (⏮) button for 2 seconds to switch to AUX input mode.
- Use an 3.5mm audio cable (not included) to connect your external device to the port.

### FM Mode

- Press PREV/NEXT (⏮) button to select FM station.
  - Press MODE (⏮) button for 2 seconds to switch to FM mode.
  - Press ALARM (⏻) button for 2 seconds to start auto searching FM stations.
- Connect a USB-C cable into the clock radio for the antenna. The other end does not need to be plugged in.
- Note: On FM mode, the LED light may generate interference when the FM signal is weak, please switch off the LED light if interference occurs.

### USB Mode

- Press MODE (⏮) button for 2 seconds to switch to USB mode.

### Relaxing Background Sound Mode (Night Sound)

- Press MODE (⏮) button for 2 seconds to switch to night sound mode.
- Press PREV/NEXT (⏮) button to select sound type.

### Setting the Clock

- Press CLOCK (⌚) button for 2 seconds to enter clock settings.
- You can adjust the clock hour and minute by pressing CLOCK (⌚) button and PREV/NEXT (⏮) button.
- Press CLOCK (⌚) button twice to switch between 12 & 24 hour mode.

### Time Synchronization

- The product will request access message of the Bluetooth paired Android smart phone. After granted access, the product will auto synchronize clock when reconnect smart phone. This synchronization function is also working with iPhone.

### Setting the Alarm

- Press ALARM (⏻) button to switch alarm on/off.
- Press ALARM (⏻) button for 2 seconds to enter alarm settings. You can adjust the alarm hour, minute and alarm sound by pressing PREV/NEXT (⏮) button.
- When the alarm bell starts to ring and the ALARM (⏻) button is not pressed to stop the alarm. The alarm will enter snooze mode and the alarm bell will ring again after 5 minutes.

### Sleep Timer

- Press SLEEP  button to set the sleep timer for 15/30/60 minutes.

### Ambient Light

- Press LIGHT  button twice to turn on/off the ambient light.
- When light is on, press LIGHT  button to select the light mode.

### Reset

- Press POWER  button 5 times to reset the product.


## Troubleshooting



Product not switching on

- Ensure the battery of the product is charged.

Operation or display is abnormal

- If the function is abnormal or the display is abnormal (such as nothing is displayed on the screen) when the power is plugged in, press POWER  button 5 times to reset the product to factory default.

Display is not easy to read

- Make sure the battery of the product is charged.

Wireless charging not working

- Check that your smart phone supports wireless charging.
- If you have a smart phone case, you must remove it when charging.
- Ensure your smart phone is facing up and aligned to the centre of the wireless charging pad.
- Remove any metal or other objects between the smart phone and the wireless charging pad.

Capacity drops

- It is normal for the battery capacity to slowly drop after a certain usage cycle.



## Specifications

Input	USB-C 5V $\overline{\text{---}}$ 2A or 9V $\overline{\text{---}}$ 2.22A (20W Max.)
Wireless Output	15W Max.
USB Output	5V $\overline{\text{---}}$ 50mA
Battery	Li-ion 3.7V 2200mAh, 8.14Wh
Operating Temperature	5°C~35°C
Operating Humidity	10%~35% RH
Storage Humidity	5%~60%RH
Operating Altitude	below 2000m
Dimensions (L x W x H)	180 x 100 x 90 mm
Weight	700g (approx.)

**WARNING** - Electrical Safety This product is equipped with over-voltage and over-current protection to safeguard internal components and ensure user safety.

- Do not exceed the specified voltage or current limits.
- Connecting the device to an unstable or overloaded power source may result in malfunction, fire, or electric shock.
- Ensure all power connections comply with the technical specifications provided in this manual.
- Do not use a charger or adapter that exceeds the product's specified ratings.
- To connect the product, insert the USB connector firmly into a USB port on a computer or other SELV power source at a safe low voltage (DC 5V $\overline{\text{---}}$  2A or 9V $\overline{\text{---}}$  2.22A) via the supplied USB cable. Please always checking the marking on the product. before charging.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

## Enjoy using your product!

Well done, you made it.

Now sit back and relax... your product is automatically covered by a 1-year warranty.

How nice!



## General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury. This product complies with Australian Safety standard AS/NZS 62368.1 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.



Class III- Class III appliance is designed to be supplied from a separated extra-low voltage (SELV) power source.

## IMPORTANT

- **Environment:** Do not use this product where it is excessively hot, cold, dusty or humid, or where it is exposed to strong magnetic fields or long periods of sunshine.
- **Water:** Do not expose this product to water; do not use it where it can fall into water (such as near a pool, pond, bath etc.).
- **Handling:** Do not drop this product or shake it vigorously to avoid damaging it.
- **Cleaning:** Clean the housing of the device lightly with a dry or moist cotton cloth. Do not use alcohol, thinners, benzene or any other chemical cleaners.
- **Usage:** Only operate the device according to the instructions in this manual. We assume no responsibility for faulty use or inappropriate handling.
- **Usage:** The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the device inappropriately. Close supervision is necessary when the device is used by or near children.

- **Repair:** This device is a high precision electronic product. It contains no user-serviceable parts inside. Do not try to dismantle, modify or repair it yourself.
- **Damage:** In case of damage, contact the After Sales Support line for advice.
- **Disposal:** Observe local regulations and dispose of this device appropriately for recycling. Contact your local authorities for advice on facilities.
- **Unpacking the product:** Unpack the product and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the product when it is not in use.
- **Climate:** If moving the product from one location to another, for example from a cold environment to a warm one, allow sufficient time for the apparatus to acclimatise to the new location before switching on. In tropical climates, keep the air surrounding the unit sufficiently dry to avoid condensation forming.
- **Accessories:** Only use the device with the accessories that are supplied. Use of other accessories not recommended in this manual may cause damage to the product and will void your warranty.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the battery is installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- **WARNING:** If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children.
- **WARNING:** If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not change or modify the appliance in any way.
- Only use the attachments/accessories specified by the manufacturer.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas

**Responsible disposal of the packaging**

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

**Responsible disposal of the product**

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

**Maintenance**

- Keep the device dry. Do not let the device to come into contact with water vapour or operate it with wet hands. Contact with water will cause the device to short-circuit, corrode or cause electric shock.
- Do not shake the equipment excessively, which may cause device failure, fire or explosion.
- Do not expose the device to very low or very high temperatures, which may cause device failure, fire or explosion.

**Maintenance**

- Do not disassemble the device and accessories. Disassembly by unauthorised persons will void the warranty.

**Safety**

- Do not use the device while driving, so as not to impede safe driving regulations.
- In health facilities, observe the relevant rules or regulations. Turn off the product in the vicinity of medical devices.
- Obey all regulations when boarding an airplane in order to avoid interference with aircraft radio signals.
- Stay away from magnetic equipment; product radiation may erase the information stored on the device.