


BAUHN®

32"

HD Smart TV

powered by WebOS Hub



MODEL:ATV32HDW-0425

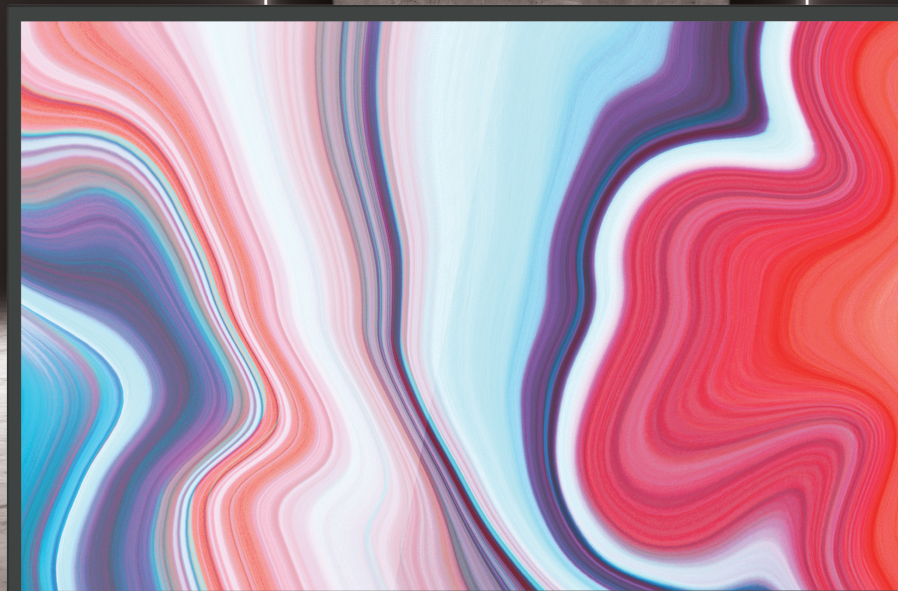


BAUHN

User Manual

AFTER SALES SUPPORT

  1300 002 534



 tempo.org/support

MODEL: ATV32HDW-0425 PRODUCT CODE: 719143 04/2025

Welcome

Congratulations on your purchase!

This manual tells you all you need to know about using your new BAUHN® product.


Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

Domestic use only: This product is intended for indoor domestic use only. It is not suitable for commercial, industrial or outdoor use. Do not use this product for anything other than its intended purpose, and only use it as described in this manual.

We hope you will enjoy using your purchase for many years to come.

Contents

Welcome	2	LG ThinQ App	17
Unpack and Prepare	4	Advanced Controls (TV Setting Menus)	18
What's in the box	4		
 Important Tips	5	Troubleshooting	19
Attaching the stand	6	Specifications	22
Wall-mounting the TV	7	Compliance and Responsible Disposal	23
Connect to power	8		
Connect your antenna	8	Warranty Information	24
Controls and Connections	9	Repair and Refurbished, Goods or Parts Notice	25
Get to know your TV	9		
Buttons on the TV	9		
Ports on the TV	10		
Remote Control	12		
Setup	12		
Using the Remote Control	13		
Buttons on the Remote	14		
On-Screen Set Up	16		

Unpack and Prepare

What's in the Box

Before installing your new TV, check you have everything needed.

In the box you will find:


- A. 32" HD Smart TV
- B. Remote Control
- C. AAA Activ Energy Batteries (2)
- D. TV Stands (2)
- E. Screws for TV Stands (2)
- F. Power Cord
- G. Warning Sheet
- H. TV Toppling Safety Message
- I. Quick Start Guide
- J. Warranty Certificate
- K. General Safety Warnings
- L. User Manual
- M. Safety Straps (2)

You will need:

- Phillips-head screwdriver (for stand installation)
- Antenna cable (to watch live TV)
- Broadband internet connection (to use smart apps)




See the flap of the box for how to handle the TV without damaging it!

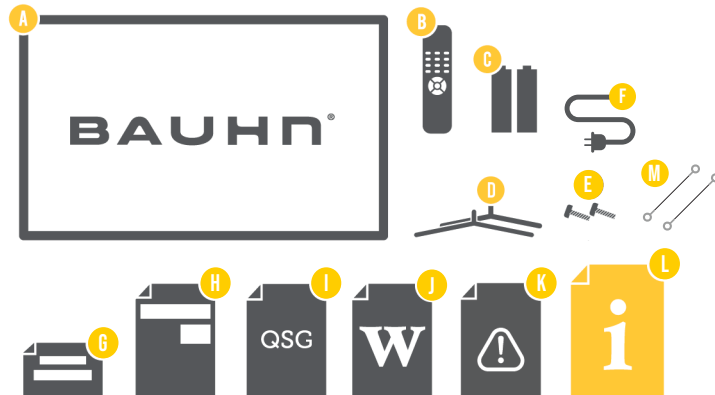

Important Tips

- Place the TV on a level surface.
- Place the TV away from any source that may generate heat or vibrations.
- Make sure there is enough space around vents for airflow.
- The remote control works up to 5 metres away from the TV.
- Unplug the TV before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- It is highly recommended to use safety straps for securing the TV in place.
- Keep liquid, children and pets away from the TV at all times.

Attaching the Stand

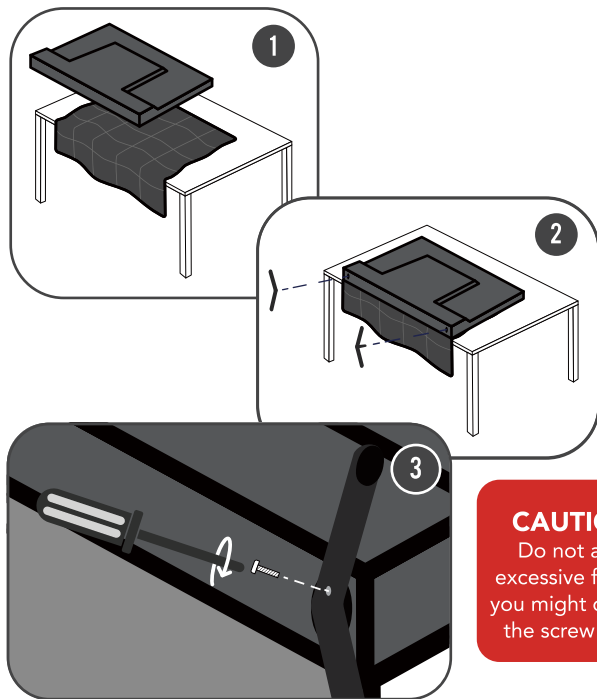

CAUTION!
Do not apply
excessive force as
you might damage
the screw holes.



- This TV is heavy! We recommend asking someone to help you lift it.
- Unplug the TV from the power outlet before installing or removing the stand.
- DO NOT place the TV standing upright without its stand attached; it could damage the remote sensor at the bottom of the TV.
- Only touch the frame, not the screen.
- It is highly recommended to use safety straps for securing the TV.


Unless you are wall-mounting the TV, you will need to attach its stand/legs.

1. Lay the TV face-down on a soft, flat surface (like the sofa, or a towel on a table) larger than the TV itself.
2. Match the stands to the installation points on the underside of the TV.
3. Attach the stands to the TV at the installation points using the screws provided. (Grab a screwdriver for this bit).

Wall-Mounting the TV



- Unplug the TV from the power outlet before wall-mounting.
- Contact a professional for assistance with wall-mounting the TV.

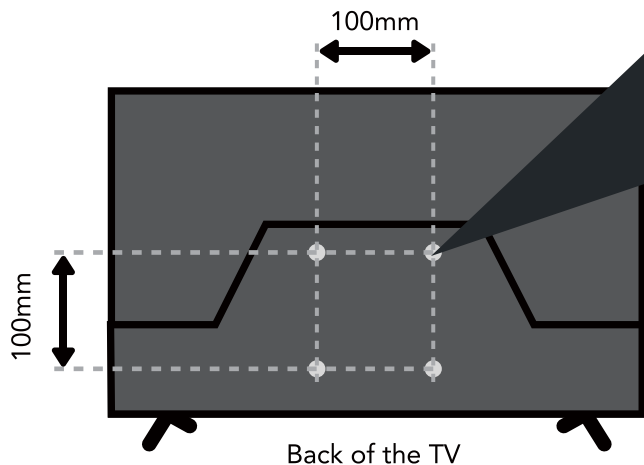

Back of the TV

Required

- VESA Mounting Bracket
- 4 x M4 x 8mm screws (or longer as required)


The TV comes with holes on the back panel for use with wall-mounting brackets (bracket not included).

Use four standard M4 x 8mm screws (or longer, depending on the mounting bracket) to wall-mount this TV (screws are not included).



The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, consult a qualified installer for advice on bracket support and wall support.

Connect to Power

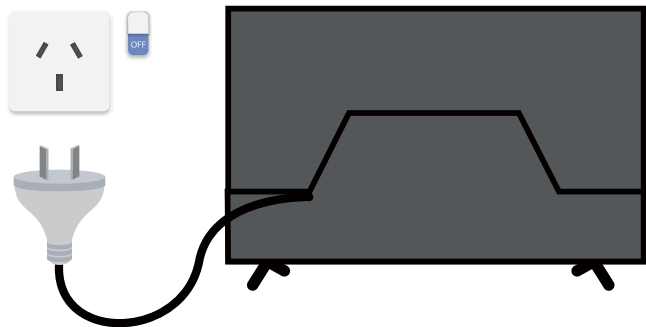

Don't forget to plug in the TV to the power outlet. Leave the power switched off until installation is finished.



Make sure the TV is **switched off** at the power outlet until you have finished connecting your cables.

Connect your Antenna


Free-to-air TV in HD (High Definition)

Example
HD Channels

ABC HD
SBS ONE HD
7HD
9HD
10 HD
PRIME7 HD
WIN HD

High Definition (HD) channels provide the best viewing quality and are available with a digital antenna connection.

TV channels in Ultra HD resolution are not currently available in Australia. Therefore when you watch HD broadcast signals on an Ultra HD TV, the picture can appear 'soft' and lacks the detail you see when watching the same content on an HD TV.

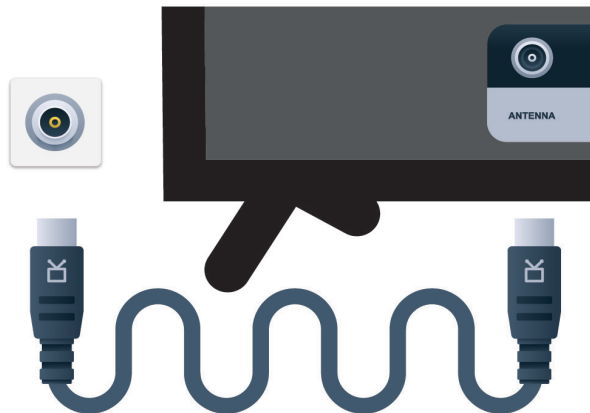

Antenna cable not included.

Controls and Connections

Get to Know your TV


On/Standby indicator and
Remote sensor








Switch the TV on or to standby



Buttons on the TV





Under the front of TV







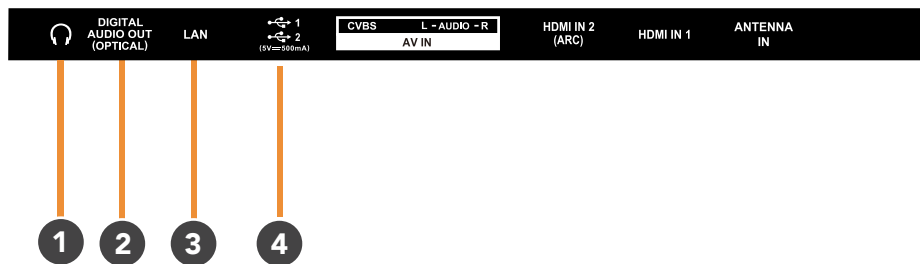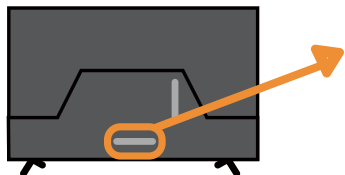

- Press the  button to turn the TV on.
- When on, press and hold the  button for 3 seconds to turn the TV to standby.
- When on, press the  button to view the pop up option screen. From here, press the  button repeatedly to switch to the different options. Press and hold the  button to access the option.


See next page for more info on the connections.









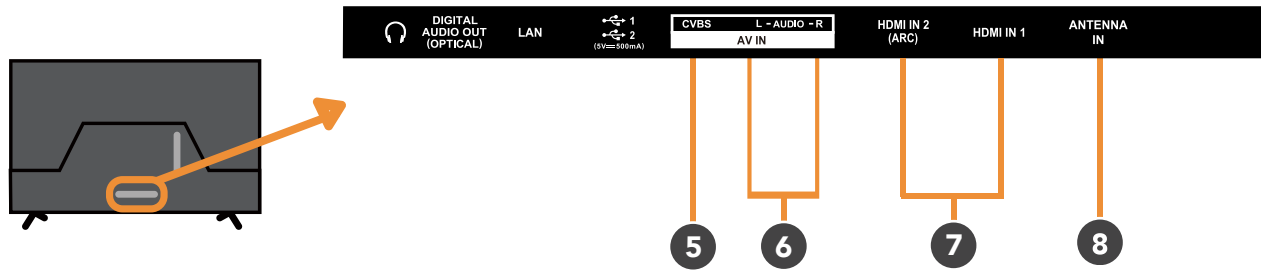

Ports on the TV



1	Headphone Jack			SOUND	Connect to your headphones, amplifier or audio device, using an AUX cable (not included).
2	DIGITAL AUDIO OUT(OPTICAL)			SOUND	Connect an external digital audio device. Use an Optical cable (not included) to connect the unit with an amplifier, soundbar or other audio decoding device for digital audio signal output.
3	LAN			INTERNET	Connect to your broadband modem using an Ethernet cable (not included).
4	USB			STORAGE	Plug in a USB stick/drive to PVR record and pause live TV. Play media files stored on your USB storage device (supported file codecs and extensions may vary). Update the TV software via USB. Note: Time-shift function requires a USB-HDD for storage.



5	VIDEO IN (CVBS)			PICTURE	You can use this to connect your DVD player. Supports Standard Definition (SD) picture quality. Requires an AV cable (not included).
6	AUDIO IN			SOUND	You can use this to connect Audio to your TV for AV or Component video inputs. Requires an AV cable (not included).
7	HDMI IN <div>Use a high-speed HDMI cable for best picture and sound quality.</div>			SOUND PICTURE COMPUTER	All-digital connection between the TV and any HDMI device. Supports HD. Requires a HDMI cable (not included).
8	ANTENNA IN			FREE TO-AIR TV	Connect your antenna for live TV. (Antenna cable not included.)

Note:

The TV connectors are easy to access from the TV bottom area. You can also use convertors to change the direction of the HDMI and Antenna socket.

Remote Control

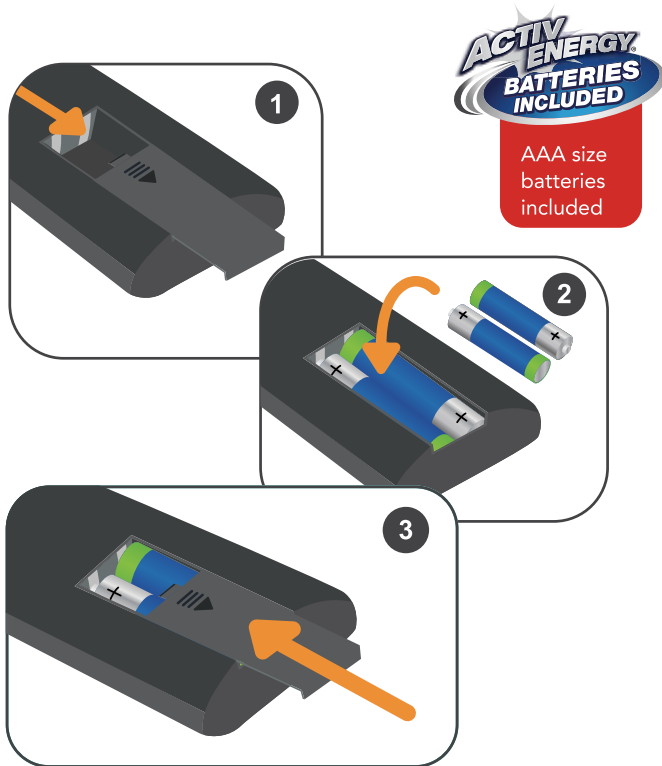


Illustration is for reference only.

Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.



Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the TV. The remote will not operate if its path is blocked.

The remote has a range of up to about 5 metres from the TV at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

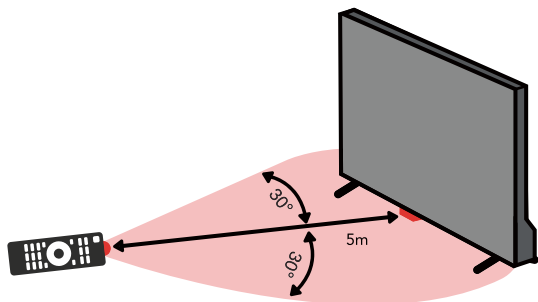


Image is an example only.
Remote sensor location on TV may vary.



Remote Hints and Tips

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.



Buttons ON THE REMOTE



⏻ (ON): Switch the TV to On or Standby

🔍 (SEARCH): Search for content in the content store/web

CC/SUB: Enable/disable subtitles

NUMBER BUTTONS: Key in a TV channel number

-/LIST: Display channel list

0/QUICK ACCESS: Press and hold to view quick access edit screen

FAV: Display the favourite programs in DTV mode

+ VOL - : Increase/decrease volume

GUIDE: Launch the TV Guide (DTV)

TV: Switch to TV mode

📺 (SOURCE): Select the input source

⚙️ : Access TV settings menu

⋮ : Display additional buttons/settings

^ CH PAGE v : Go to the next or previous program

🔇 (MUTE) : Mute or restore sound



▶ : Play selection

🏠 : Go to the Home page (Smart TV)

BACK : Return to the previous screen/menu


△ / ▽ / ◀ / ▶ : Press the UP/DOWN/LEFT/RIGHT buttons to navigate

ⓘ INFO : Display the information

MOVIES : Search for movies

NETFLIX : Launch the Netflix app

● / ●● / ●●● / ●●●● RED/GREEN/YELLOW/BLUE: Functions are according to the on-screen display

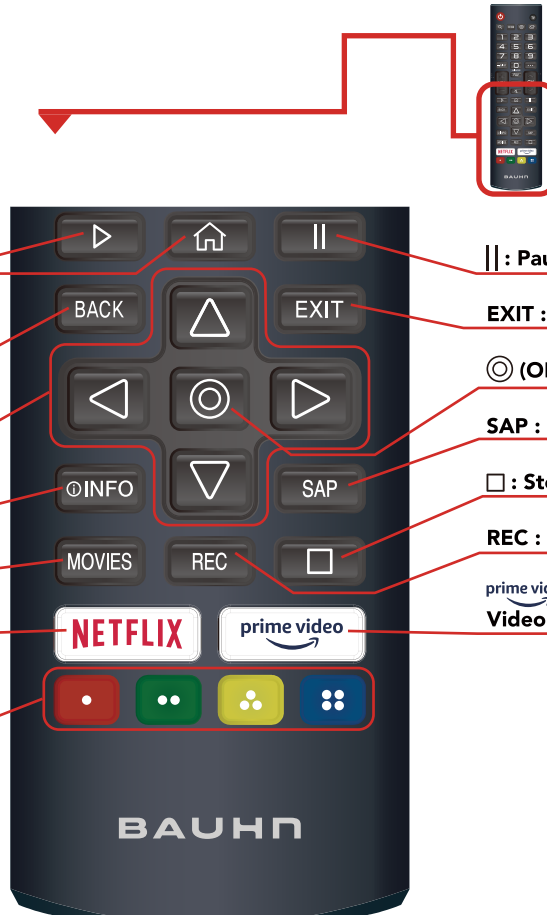

|| : Pause selection

EXIT : Exit/quit the current screen

⊙ (OK/ENTER) : Confirm your selection

SAP : Enable/disable audio description

□ : Stop playback


REC : Record program in DTV mode

prime video : Launch the Amazon Prime Video app

On-Screen Set Up





Make sure equipment is properly connected (as shown on pages 10-11) before connecting the TV to power.

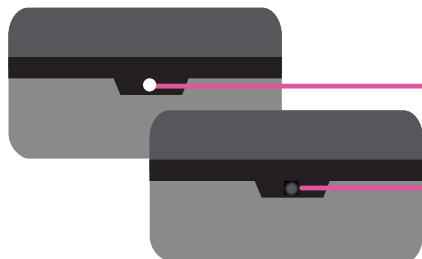

On/Standby light is
WHITE in standby mode.

On/Standby light is OFF
when the TV is on.







Make sure the TV is plugged in at the power socket and switched on. Press the  button to turn on the TV.



First Time Setup menu

When you turn the TV on for the first time, the First Time Setup menu will appear.

Follow the prompts using the  /  /  /  / OK buttons to select your preferences. You will be guided through:

1. Language, Country and Time zone
2. How to set up the TV (by mobile or by TV)
3. Internet Connection
4. Terms & Conditions
5. User Environment Analysis
6. The way to Watch TV (Select TV Only)
7. TV Installation Type (Stand or Wall-mounted)
8. SW Automatic Update
9. Programme Tuning
10. LG Account (Sign in with the Mobile Web, TV Remote or Skip)

If you make an error, you can update your preferences in the settings menu later.

2. Connect to the Internet

If you are using a wired network, connect an ethernet cable to the TV. The TV will automatically connect to the Internet.

If you are using a wireless connection, select 'Wi-Fi Network'. The TV will scan for nearby wireless networks. Make sure that the TV is within the range of your wireless modem/router, and you have your Wi-Fi password handy. Select your network, enter network password using the on-screen keyboard and select ENTER. Press OK to connect.

Or, you can connect to the internet later by going to the User Menu settings.

LG ThinQ App

You can use the LG ThinQ app to control key TV functions instead of the remote control.

Note: you need an Android device running Android 4.3 or higher to use the app.

1. On your smart phone, search and download the LQ ThinQ app from the Play Store/App store (alternatively, scan the QR code below):



For Android



For iOS



2. After app has downloaded and installed, open up the app. Ensure that both your smart phone and TV are using the same Wi-Fi network.
3. Select TV and it will automatically search for nearby TV.
4. A PIN will appear on your TV screen, enter the PIN on your smart phone tap "Done."

You can now use the app to control key TV functions.



Advanced Controls (TV Setting Menus)

Menu Navigation Buttons

Press the Setting menu  button then  button to display the TV settings menu. See the guide below for all the other buttons you'll need to use to adjust and change your settings.

Function

Remote Button

Display the quick menu



Display the main menu



Enter a sub menu



Adjust a value



Return to the previous menu

BACK

Exit a menu

EXIT



BAUHN®

SCAN THE QR CODE FOR
COMPLETE INSTRUCTIONAL
MANUAL.

Troubleshooting

If you experience problems with your TV, check below for advice. If you don't find a solution here, contact After Sales Support .

Problem	Solution
The remote control does not work	<ul style="list-style-type: none">Make sure that the batteries are installed with their poles (+/-) in the correct direction.Remove any obstacles between the remote control and remote control sensor on the TV.Check if the power indicator at the bottom of the TV blinks when you press the remote's power button.If it does not, replace the remote control's batteries.Try pointing the remote directly at the remote control sensor from 1.5-1.8m away.
The TV won't turn on	<ul style="list-style-type: none">Make sure that the AC power cord is securely plugged into the wall outlet.Check the wall outlet is turned on and the power indicator at the bottom of the TV is lit.If using a multi-outlet, check if it is working properly. To check whether a power strip is working properly, plug the TV's power plug directly to a wall outlet and observe its operation.Try to power on using the power button on the TV.
There is no picture/sound or distorted picture/sound in DTV mode	<ul style="list-style-type: none">Ensure the antenna cable is securely connected to the TV and to the wall outlet.Ensure the input source is set to DTV.If "No Signal" is displayed, run Menu > All Settings > General > Programmes > Programme Tuning > Auto TuningIf some channels are missing, run Menu > All Settings > General > Programmes > Programme Tuning > Manual TuningTry a different antenna cable or another TV if possible.Move the TV away from electronic equipment or devices that could cause interference.Adjust the antenna position.If the picture appears fuzzy or blurry, select High Definition (HD) channels or programs.



Problem	Solution
There is no picture/sound or distorted picture/sound from an external device	<p>Ensure that connection to the device is correct and that all cables are fully inserted.</p> <p>Remove and reconnect all cables connected to the TV and the external devices. Try new cables if possible.</p> <p>Restart the connected devices by unplugging each device's power cord and then plugging it in again.</p> <p>If "No Signal" is displayed on the TV, ensure that the correct input source has been selected.</p> <p>When using a 4K playback device, ensure the cable is a High-Speed HDMI cable.</p>
There is no/distorted sound	<p>Ensure the volume is not muted. If it is, press the VOL+ button to restore the sound.</p> <p>If earphones are connected, unplug them.</p> <p>Ensure that connection to the external audio device is correct and that all cables are fully inserted.</p> <p>Ensure correct input source and audio settings have been selected on the external audio device.</p> <p>Move the TV away from electronic equipment or devices that could cause interference.</p> <p>When using an external audio device via a HDMI cable, ensure that the device supports HDMI-ARC and, if applicable, the ARC setting is turned On (refer to the connection guide in the user manual of the connected device).</p> <p>When using an external audio device via an optical cable, check that the Menu > Sound > Sound Out > Select Optical and then Menu > Sound > Advanced Settings > Digital Sound Out is set to PCM.</p>
The smart apps are not working properly	<p>Ensure the TV is connected to the Internet.</p> <p>Ensure the TV has a high-speed internet connection to get the best-streaming picture resolution.</p> <p>An unstable internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment. If this occurs, check your internet connection and try again.</p>

Problem	Solution
There is no/ intermittent internet	<p>When using Wi-Fi, make sure the Wi-Fi password is entered correctly.</p> <p>Turn off the access point. Wait for 2 minutes and then turn them back on.</p> <p>Ensure that there are no obstacles between the TV and the access point. (The Wi-Fi strength can be decreased by appliances, cordless phones, stone walls/fireplaces, etc.) Reduce interference by not using or turning off other wireless devices.</p> <p>If the Wi-Fi connection fails, connect the TV to the access point via a LAN cable. If the TV can connect via the wired connection, there might be a problem with the Wi-Fi access point. In this case, try using a different access point.</p> <p>When using a LAN cable, use one rated CAT 5 or higher. Make sure it is plugged in at both ends.</p> <p>When using a static IP, ensure network addresses are entered correctly.</p> <p>If the problem persists, contact your Internet Service Provider or modem manufacturer.</p>
USB storage device is not recognised or media files don't play properly	<p>This TV has been tested with the majority of Flash memory-based devices and hard disks (media players with HDD) on the market however, it may not be compatible with certain devices.</p> <p>If the external hard drive has its own power adaptor, use it.</p> <p>Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.</p> <p>The TV may not be able to recognise a USB device or read the files if it is connected with a USB extension cable</p> <p>The files that use an unsupported codec or container will not play on the TV.</p> <p>Some files may not play correctly if there is an error in the content or container.</p> <p>Certain files, depending on how they are encoded, may not play on the TV.</p>



Specifications

Active screen size (diagonal)	80cm	
Resolution	1366 x 768	
Refresh rate	60Hz	
Aspect ratio	16:9	
Multimedia playback formats (USB mode)	Music	MP3, WAV
	Photo	JPG, BMP, PNG
	Video	AVI, MPEG-1, MPEG-2, MPEG-4, MKV
USB output	DC 5V \mp 500mA	
Power source	100-240V ~ 50/60Hz	
Power consumption	60W Max.	

Dimensions (W x D x H)		With stand: 720 x 208 x 478 mm
		Without stand: 720 x 63 x 425 mm
Weight	Net	3kg
	Gross	4.7kg

For Technical and Warranty Support

1300 002 534

tempo.org/support

Distributed by Tempo (Aust) Pty Ltd,
PO Box 6097, North Sydney NSW 2059

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.



Product

At the end of its working life, do not throw this product out with your household rubbish.

An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



National Television and Computer Recycling Scheme

The careful disposal of e-waste is important because many televisions and computers contain materials which are hazardous to people and the environment. There are no fees for householders or small businesses disposing of e-waste at a scheme collection service.

Individuals can contact their local council for information on local e-waste management services, find scheme services listed on Planet Ark's website at www.recyclingnearyou.com.au, or call Planet Ark on 1300 733 712.

Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.





BAUHN®

Warranty Information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





BAUHN®

Repair and Refurbished Goods or Parts Notice

Unfortunately, sometimes faulty products are manufactured, which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 002 534 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO Box 6097, North Sydney NSW 2059

Telephone: 1300 002 534 (Aust) Fax: (02) 8977 3765

Tempo Help Desk: 1300 002 534 (Aust)

(Operating Hours: Mon-Fri 8:30am-6pm; Sat 9am-6pm AEST)

Email: tempo.org/support

Notes

Notes

Online support

Visit bauhn.com.au for software updates to keep your TV up-to-date, as well as the latest User Manual for information on the updated features.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 002 534.

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Please read the manual

It will help you get the best out of your product.

Still have questions?

Call After Sales Support

1300 002 534

Or visit tempo.org/support

AFTER SALES SUPPORT



AUS 1300 002 534



tempo.org/support

MODEL: ATV32HDW-0425 PRODUCT CODE: 719143 04/2025

1

YEAR WARRANTY